

1



transforming the way the world works

GM200ファームウェア アップデート手順書

Ver.01-1



AIFチーム

Tel : (03) 3213-8391 Fax : (03) 3213-8399 URL : http://infocom.haradacorp.co.jp E-mail : sales-info@haradacorp.co.jp

COPYRIGHT © 2019 HARADA CORPORATION ALL RIGHTS RESERVED No reproduction or republication without written permission.



GM200 WebUI コンフィグレーション

Welcome to Trimble Thunderb × + Eth2ポ トの知期値は、以下の通りです。
ELITZボートの初期値は、以下の通りです。 (4) 192 168 2 250 > ·IPアドレス: 192.168.2.250
→ ・サブネットマスク: 255.255.0
Login Login for more detailed views.
Transforming the way the world works Thunderbolt PTP GM200
Alarm Status Input Status Critical GNSS: Init
Configuration StatusProduct IDConfiguration is saved111224-10
Management Port Status Connected 1000MBSoftware Version 20181203-1.0.2.3
Ethernet Port 0 StatusDate (GNSS UTC)Not Present01/01/1970 00:04
Ethernet Port 1 StatusUp TimeNot Connected00:03
Home Contact Privacy Statement Terms Of Use Copyright ©2015-1970, Trimble Inc.







IARADA

Logout Disable auto-logout			Welcome <i>trimblesuper.</i> You have <i>super</i> access rights.	
Trimble.	Thunde	rbolt PTF	P GM200	-
PTrimble. Transmitt [®] PTF 00000	System Configu	ration		
SYSTEM STATUS	System Configuration S	ystem Firmware		
INTERFACE MANAGEMENT	Current System Version 20181203-1.0.2.3	Current GNSS Version 20180403-1.5.0.0	Current FPGA Version 18.3.15	
SYNCHRONIZATION MANAGEMENT	Firmura Batalı Stanian	_	s	
SECURITY MANAGEMENT	Choose File No file cho	osen		
SYSTEM	Upload Patch File	Reset Upload		
Alarm System	System Patches	GNSS Patches ResSMT360_v1.05.bin		
	Update System	Unstage Patch		

FWファイルアップロード手順

- 1. SYATEM MANAGEMENTをクリック します。
- 2. Systemをクリックします。
- 3. System Firmwareをクリックします。

HARADA

Example. Transforming the way the world works Thunderbolt PTP GM200 System Configuration Firmware lists are being generated, please wait. System Configuration System Configuration System Firmware
SYSTEM STATUS System Configuration System Configuration System Firmware
SYSTEM STATUS System Configuration System Firmware
INTERFACE 5 Current System Version Current GNSS Version Current FPGA Version 20181203-1.0.2.3 20180403-1.5.0.0 18.3.15
SYNCHRONIZATION MANAGEMENT
SECURITY MANAGEMENT Choose File No file chosen
SYSTEM MANAGEMENT Upload Patch File Reset Upload
Alarm System 6 System Patches CNSS Patches C
Update System Unstage Patch

FWファイルアップロード手順

- 4. "Firmware lists are being generated, please wait..." メッ セージが表示されます。
- 5. メッセージが消えると現在のファームウェ アバージョンが表示されます。
- 6. 全てのファームウェアリストが表示されま す。

Logout Disable auto-logout			Wel You	come <i>trimblesuper.</i> have <i>super</i> access rights.	F\	Nファイルアッ フ	プロード	「手順
Construction of the way the world works	Thunder	bolt PTF	۶ G	M20	7.	"CONFIGUR 編集を有効に	E″アイコ 設定しま	ンをクリックして す。
SYSTEM STATUS	System Configuration System Configuration System Configuration	iystem Firmware			8.	"Choose File ルを選択します	e"をクリッ -。	クしてFWファ
INTERFACE MANAGEMENT	Current System Version 20171003-0.0.7.0	Current GNSS Version 20170515-1.4.0.0	<u>Cur</u> 18.3	rent FPGA Version 3.15	9.	FWファイルを選 クしてください。	፪択して"	'Open"をクリ
MANAGEMENT	Firmy Patch Upload							
SECURITY MANAGEMENT	Choose File No file cho	osen						
SYSTEM MANAGEMENT	Upload Patch File	Reset Uple	bad					
Alarm System	System Patches	GNSS Patches	FP(GA Patches				×
	Update Patches via		← → 	↑ — « Thunderbot GM → GM200 → F	V → Latest v	ersion → v1.2.0.0 🗸 Ö	Search v1.2.0.	م ٥
	Command Line Interface		Organize ▼ T ↑ C F F F F V De	New folder Name 영 GM200_v0.0.7.0_to_v1.0.0.0.tar.gz 영 GM200 Type: ALZip GZ File Size: 18.1 MB Date modified: 2019-05-10 오전	Date m 2019-0 2019-0 8:47	odified Type 5-10 오전 8 ALZip GZ File 5-21 오후 4: ALZip GZ File	Size 18,589 KB 34,703 KB	
			C ل 2 ت ا ب س	File <u>n</u> ame: GM200_v0.0.7.0_to_v1.0.0	.0.tar.gz	,	Custo, riles	(*.gz,*tgz) ∨ Cancel



Logout Disable auto-logout			Welcome <i>trimblesuper.</i> You have <i>super</i> access rights.	
Trimble.	Thunde	rbolt PTF	9 GM200	
Internation Transmitter Image: second	System Configu	ration		
SYSTEM STATUS	System Configuration	iystem Firmware	× ×	
INTERFACE MANAGEMENT	Current System Version 20181203-1.0.2.3	Current GNSS Version 20180403-1.5.0.0	Current FPGA Version 18.3.15	
SYNCHRONIZATION MANAGEMENT	Firmware Patch Staging			
SECURITY MANAGEMENT	Choose File GM200_v	0.0.7.0_to_v1.0.0.0.tar.gz		
SYSTEM MANAGEMENT	Upload Patch File	Reset Upload		
Alarm	System Patches	GNSS Patches		
	© 20181203-1.0.2.3.pkg	ResSMT360_v1.05.bin		
	Update System	Unstage Patch		

FWファイルアップロード手順

- 10. 選択されたFWバージョンが表示されま す。
- 11. "Upload Patch File"をクリックして FWファイルをアップロードします。

Disable auto-logout			Welcome <i>trimblesuper.</i> You have <i>super</i> access rights.	FWファイルアップロード手順
Cransforming the way the world works	Thunderb	olt PTP	9 GM200	- 12.FWファイルのアップロード中は、メッ セージが表示されます。
SYSTEM STATUS	System Configurat File upload is 78% complete System Configuration System	ion Firmware	ð / ×	File upload is xx% complete (1% ~ 100%)
MANAGEMENT SYNCHRONIZATION MANAGEMENT SECURITY	Current System Version 20181203-1.0.2.3 Firmware Patch Staging	Current GNSS Version 20180403-1.5.0.0	Current PPGA Version 18.3.15	Validating Firmware
MANAGEMENT SYSTEM MANAGEMENT	Choose File GM200_v0.0.7. Upload Patch File System Patches	.0_to_v1.0.0.0.tar.gz Reset Upload <u>GNSS Patches</u>		Firmware being staged
	Update System	ResSMT360_v1.05.bin Unstage Patch		Firmware successfully staged

Disable auto-logout		Welcome <i>trimblesuper</i> . You have <i>super</i> access rights.
Trimble.	Thunderbolt F	PTP GM200
(an Trimble. Thursdath (* 1717 DA200	System Configuration	
SYSTEM STATUS	Firmware successfully staged System Configuration System Firmware	
INTERFACE MANAGEMENT	Current System Version Current GNSS V 20181203-1.0.2.3 20180403-1.5.0.0	Version Current FPGA Version 18.3.15
SYNCHRONIZATION MANAGEMENT	Firmware Patch Staging	
SECURITY MANAGEMENT	Choose File GM200_v0.0.7.0_to_v1.0.0.0.tz	ar.gz
SYSTEM MANAGEMENT	Upload Patch File Reset Upload	
Alarm System	System Patches GNSS Patches 20181203-1.0.2.3.pkg © ResSMT360_v1.05 20180619-1.0.0.0.pkg © ResSMT360_v1.05	5.bin
	Update System Unstage Pate	ch

FWファイルアップロード手順

- 13. "Firmware successfully staged"が表示されます。
- 14. FWリストに追加したFWファイルのバー ジョンが表示されます。

Disable auto-logout			Welcome <i>trimblesuper.</i> You have <i>super</i> access rights.	FWファイルアップロード手順
Strimble.	Thunde	rbolt PTF	9 GM200	ー 15. "CONFIGURE"アイコンをクリックして ― 編集を有効に設定します。
SYSTEM STATUS	System Configu	ration	15 • • •	16. インストールするFWバージョンを選択 します。
INTERFACE MANAGEMENT	Current System Version 20181203-1.0.2.3	Current GNSS Version 20180403-1.5.0.0	Current FPGA Version 18.3.15	17. "Update System"をクリックします。
SYNCHRONIZATION MANAGEMENT			родолбано (К	アップデートが開始します。
SECURITY MANAGEMENT	Choose File No file cho	osen		
SYSTEM MANAGEMENT	Upload Patch File	Reset Upload		
Alarm System	System Patches © 20190516-1.2.0.0.pkg © 20181203-1.0.2.3.pkg © 20180619-1.0.0.0.pkg	GNSS Patches		
17	Update System	Unstage Patch		

→ → → → → ↓	System Configuration	
SYSTEM STATUS	Surtar	(4)
INTERFACE MANAGEMENT	Curre 192.168.2.250 says	
SYNCHRONIZATION MANAGEMENT	Suggested actions before updating system: * Ensure system configuration is saved.	^
SECURITY MANAGEMENT	Firmy * Logoff other users/sessions.	
	Update system with patch:	
	Syste 2018 2019 2018	v

FWファイルアップロード手順

18. 確認メッセージが表示されます。"OK" をクリックしてアップデートを開始します。



FWファイルアップロード手順

19. 以下のメッセージが段階的に表示されます。

- Unpacking update
- Creating backup
- Installing update...

20.アップデートが完了するとGM200が再 起動されます。再起動後、WebUI接 続が再接続されます。

再起動後、WebUIでGM200に再接続します。





WebUIにログイン後、"Load Factory Config"をクリックして更新された値を取得してください。

Logout 🗹 Disable auto-logout		Welcome <i>trimblesuper</i> . You have <i>super</i> access rights.
Trimble.	Thunderbolt PTP	GM200
Britiste	System Configuration	
SYSTEM STATUS	System Configuration System Firmware	
INTERFACE MANAGEMENT	System Hostner System Mode NTP IP Addr	NTP Timeout (minutes)
SYNCHRONIZATION MANAGEMENT		
SECURITY MANAGEMENT	Save User Config Load User Config	
SYSTEM MANAGEMENT	Choose File No file chosen	
Alārni System	Upload Config File Download Config File	
	Supervisor Options Load Factory Config 5	

1

FWリストに他のバージョンが残っている場合は、リストから削除してください。

Trimble.	Thunder	bolt PTP	' GM200
Finale Transient PTP 04000	System Configu	ration	
SYSTEM STATUS	System Configuration Sy	ystem Firmware	1
INTERFACE MANAGEMENT	Current System Version 20190516-1.2.0.0	Current GNSS Version 20180403-1.5.0.0	Current FPGA Version 18.3.15
SYNCHRONIZATION MANAGEMENT			
SECURITY MANAGEMENT	Firmware Patch Staging Choose File No file cho	sen	
	Upload Patch File	Reset Upload	
	System Patches	GNSS Patches	
	 20190516-1.2.0.0.pkg 20181203-1.0.2.3.pkg 20180619-1.0.0.0.pkg 	ResSMT360_v1.05.bin	
「るFWバージョンを選択し	ます。		
			3