

# User Guide

## **Thunderbolt® PTP GM200 IEEE-1588 Grandmaster Clock**

*For use with: Thunderbolt® PTP Grandmaster Clock (P/N 111224-10)  
Firmware version 1.0.0.0*

Version IND8 - March 2018  
Part Number 106131-00



# Legal Notices

## Corporate Office

Trimble Inc.  
935 Stewart Drive  
Sunnyvale, California 94085  
United States of America.  
[www.trimble.com](http://www.trimble.com)  
Email: [tsgsupport@trimble.com](mailto:tsgsupport@trimble.com)

## Copyright and Trademarks

© 2018, Trimble Inc.

Trimble and the Globe & Triangle logo are trademarks of Trimble Inc., registered in the United States and in other countries.  
Thunderbolt is a trademark of Trimble Inc..

Microsoft, Windows, and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

All other trademarks are the property of their respective owners.

## Release Notice

This is the March 2018 release of the Thunderbolt® PTP Grandmaster Clock, part number 111224-10.

## The Australian Consumer Law

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Trimble's warranty (set out below) is in addition to any mandatory rights and remedies that you may have under the Australian Consumer Law.

## LIMITED WARRANTY TERMS AND CONDITIONS

### Product Limited Warranty

Subject to the following terms and conditions, Trimble Inc. ("Trimble") warrants that for a period of one (1) year from date of purchase this Trimble product (the "Product") will substantially conform to Trimble's publicly available specifications for the Product and that the hardware and any storage media components of the Product will be substantially free from defects in materials and workmanship..

### Product Software

Product software, whether built into hardware circuitry as firmware, provided as a standalone computer software product, embedded in flash memory, or stored on magnetic or other media, is licensed solely for use with or as an integral part of the Product and is not sold. If accompanied by a separate end user license agreement ("EULA"), use of any such software will be subject to the terms of such end user license agreement (including any differing limited warranty terms, exclusions, and limitations), which shall control over the terms and conditions set forth herein.

Except for the limited license rights expressly provided herein, Trimble and its suppliers have and will retain all rights, title and interest (including, without limitation, all patent, copyright, trademark, trade secret and other intellectual property rights) in and to the Product Software and all copies, modifications and derivative works thereof (including any changes which incorporate any of your ideas, feedback or suggestions).

You shall not (and shall not allow any third party to): (a) decompile, disassemble, or otherwise reverse engineer the Product Software or attempt to reconstruct or discover any source code, underlying ideas, algorithms, file formats or programming interfaces of the Product Software by any means whatsoever (except and only to the extent that applicable law prohibits or restricts reverse engineering restrictions); (b) distribute, sell, sublicense, rent, lease, or use the Product Software (or any portion thereof) for time sharing, hosting, service provider, or like purposes; (c) remove any product identification, proprietary, copyright, or other notices contained in the Product Software; (d) modify any part of the Product Software, create a derivative work of any part of the Product Software, or incorporate the Product Software into or with other software, except to the extent expressly authorized in writing by Trimble; (e) attempt to circumvent or disable the security key mechanism that protects the Product Software against unauthorized use (except and only to the extent that applicable law prohibits or restricts such restrictions); or (f) publicly disseminate performance information or analysis (including, without limitation, benchmarks) from any source relating to the Product Software. If the Product Software has been provided to you as embedded in any hardware device, you are not licensed to separate the Product Software from the hardware device. If the Product Software has been provided to you separately from a hardware device but is intended to be loaded onto a hardware device specified by Trimble (such as a firmware update), your license is limited to loading the Product Software on the device specified by Trimble, and for no other use.

## Software Fixes

During the limited warranty period you will be entitled to receive such Fixes to the Product software that Trimble releases and makes commercially available and for which it does not charge separately, subject to the procedures for delivery to purchasers of Trimble products generally. If you have purchased the Product from a Trimble authorized dealer rather than from Trimble directly, Trimble may, at its option, forward the software Fix to the Trimble authorized dealer for final distribution to you. Minor Updates, Major Upgrades, new products, or substantially new software releases, as identified by Trimble, are expressly excluded from this update process and limited warranty. Receipt of software Fixes or other enhancements shall not serve to extend the limited warranty period. For purposes of this warranty the following definitions shall apply: (1) "Fix(es)" means an error correction or other update created to fix a previous software version that does not substantially conform to its Trimble specifications; (2) "Minor Update" occurs when enhancements are made to current features in a software program; and (3) "Major Upgrade" occurs when significant new features are added to software, or when a new product containing new features replaces the further development of a current product line. Trimble reserves the right to determine, in its sole discretion, what constitutes a Fix, Minor Update, or Major Upgrade.

## Warranty Remedies

If the Trimble Product fails during the warranty period for reasons covered by this limited warranty and you notify Trimble of such failure during the warranty period, Trimble will repair OR replace the nonconforming Product with new, equivalent to new, or

reconditioned parts or Product, OR refund the Product purchase price paid by you, at Trimble's option, upon your return of the Product in accordance with Trimble's product return procedures then in effect.

#### How to Obtain Warranty Service

To obtain warranty service for the Product, please contact your local Trimble authorized dealer. Alternatively, you may contact Trimble to request warranty service by sending an email to [tsgsupport@trimble.com](mailto:tsgsupport@trimble.com). Please prepare to provide:

- your name, address, and telephone numbers
- proof of purchase
- a copy of this Trimble warranty
- a description of the nonconforming Product including the model number
- an explanation of the problem

The customer service representative may need additional information from you depending on the nature of the problem. **Any expenses incurred in the making of a claim under this warranty will be borne by you.**

#### Warranty Exclusions and Disclaimer

This Product limited warranty shall only apply in the event and to the extent that: (a) the Product is properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Trimble's applicable operator's manual and specifications, and; (b) the Product is not modified or misused.

This Product limited warranty shall not apply to, and Trimble shall not be responsible for, defects or performance problems resulting from: (i) the combination or utilization of the Product with hardware or software products, information, data, systems, interfaces, or devices not made, supplied, or specified by Trimble;

(ii) the operation of the Product under any specification other than, or in addition to, Trimble's standard specifications for its products; (iii) the unauthorized installation, modification, or use of the Product; (iv) damage caused by: accident, lightning or other electrical discharge, fresh or salt water immersion or spray (outside of Product specifications), or exposure to environmental conditions for which the Product is not intended; (v) normal wear and tear on consumable parts (e.g., batteries); or (vi) cosmetic damage. Trimble does not warrant or guarantee the results obtained through the use of the Product, or that software components will operate error free.

**NOTICE REGARDING PRODUCTS EQUIPPED WITH TECHNOLOGY CAPABLE OF TRACKING SATELLITE SIGNALS FROM SATELLITE BASED AUGMENTATION SYSTEMS (SBAS) (WAAS/EGNOS, AND MSAS), OMNISTAR, GPS, MODERNIZED GPS OR GLONASS SATELLITES, OR FROM IALA BEACON SOURCES: TRIMBLE IS NOT RESPONSIBLE FOR THE OPERATION OR FAILURE OF OPERATION OF ANY SATELLITE BASED POSITIONING SYSTEM OR THE AVAILABILITY OF ANY SATELLITE BASED POSITIONING SIGNALS.**

THE FOREGOING LIMITED WARRANTY TERMS STATE TRIMBLE'S ENTIRE LIABILITY, AND YOUR EXCLUSIVE REMEDIES, RELATING TO THE TRIMBLE PRODUCT UNDER THIS LIMITED WARRANTY. EXCEPT AS OTHERWISE EXPRESSLY PROVIDED HEREIN, THE PRODUCT, AND ACCOMPANYING DOCUMENTATION AND MATERIALS ARE PROVIDED "AS-IS" AND WITHOUT EXPRESS OR IMPLIED WARRANTY OF ANY KIND, BY EITHER TRIMBLE OR ANYONE WHO HAS BEEN INVOLVED IN ITS CREATION, PRODUCTION, INSTALLATION, OR DISTRIBUTION, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR GUARANTEES OF MERCHANTABILITY, ACCEPTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NONINFRINGEMENT. THE

STATED EXPRESS WARRANTIES ARE IN LIEU OF ALL OBLIGATIONS OR LIABILITIES ON THE PART OF TRIMBLE ARISING OUT OF, OR IN CONNECTION WITH, ANY PRODUCT. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON DURATION OR THE EXCLUSION OF AN IMPLIED WARRANTY, THE ABOVE LIMITATION MAY NOT APPLY OR FULLY APPLY TO YOU.

#### Limitation of Liability

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, TRIMBLE'S ENTIRE LIABILITY UNDER ANY PROVISION HEREIN SHALL BE LIMITED TO THE AMOUNT PAID BY YOU FOR THE PRODUCT AND IN NO EVENT SHALL TRIMBLE OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGE WHATSOEVER UNDER ANY CIRCUMSTANCE OR LEGAL THEORY RELATING IN ANYWAY TO THE PRODUCTS, SOFTWARE AND ACCOMPANYING DOCUMENTATION AND MATERIALS, (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF DATA, OR ANY OTHER PECUNIARY LOSS), REGARDLESS OF WHETHER TRIMBLE HAS BEEN ADVISED OF THE POSSIBILITY OF ANY SUCH LOSS AND REGARDLESS OF THE COURSE OF DEALING WHICH DEVELOPS OR HAS DEVELOPED BETWEEN YOU AND TRIMBLE. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY OR FULLY APPLY TO YOU.

**PLEASE NOTE: THE ABOVE TRIMBLE LIMITED WARRANTY PROVISIONS WILL NOT APPLY TO PRODUCTS**

**PURCHASED IN THOSE JURISDICTIONS (E.G., MEMBER STATES OF THE EUROPEAN ECONOMIC AREA) IN WHICH PRODUCT WARRANTIES ARE THE RESPONSIBILITY OF THE LOCAL TRIMBLE AUTHORIZED DEALER FROM WHOM THE PRODUCTS ARE ACQUIRED. IN SUCH A CASE, PLEASE CONTACT YOUR LOCAL TRIMBLE AUTHORIZED DEALER FOR APPLICABLE WARRANTY INFORMATION.**

#### Official Language

THE OFFICIAL LANGUAGE OF THESE TERMS AND CONDITIONS IS ENGLISH. IN THE EVENT OF A CONFLICT BETWEEN ENGLISH AND OTHER LANGUAGE VERSIONS, THE ENGLISH LANGUAGE SHALL CONTROL.

#### Registration

To receive information regarding updates and new products, please contact your local Trimble authorized dealer or visit the Trimble website at [www.trimble.com/register](http://www.trimble.com/register). Upon registration you may select the newsletter, upgrade, or new product information you desire.

#### Notices

Class B Statement – Notice to Users. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes and modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission rules.

#### Canada

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of the Canadian Department of Communications, ICES-003.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par le Ministère des Communications du Canada, ICES-003.

#### Europe

This product has been tested and found to comply with the requirements for a Class B device pursuant to European Council Directive 89/336/EEC on EMC, thereby satisfying the requirements for CE Marking and sale within the European Economic Area (EEA). These requirements are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential or commercial environment.



#### Notice to Our European Union Customers

For product recycling instructions and more information, please go to [www.trimble.com/ev.shtml](http://www.trimble.com/ev.shtml).

Recycling in Europe: To recycle Trimble WEEE (Waste Electrical and Electronic Equipment, products that run on electrical power.), Call +31 497 53 24 30, and ask for the "WEEE Associate". Or, mail a request for recycling instructions to:

Trimble Europe BV  
c/o Menlo Worldwide Logistics Meerheide 45  
5521 DZ Eersel, NL



#### Declaration of Conformity

We, Trimble Inc.,

935 Stewart Drive  
Sunnyvale, CA 94085-3913  
United States of America  
+1-408-481-8000

declare under sole responsibility that the product: Thunderbolt® PTP Grandmaster Clock complies with Part 15B of FCC Rules.

Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



# List of Abbreviations

A-GPS	Assisted GPS
C/No	Carrier-to-Noise power ratio
DC	Direct Current
DOP	Dilution of Precision
EGNOS	European Geostationary Navigation Overlay Service
ESD	Electrostatic Discharge
GLONASS	Globalnaya Navigatsionnaya Sputnikovaya Sistema
GND	Ground
GNSS	Global Navigation Satellite Systems
GPS	Global Positioning System
I/O	Input / Output
LNA	Low Noise Amplifier
NMEA	National Marine Electronics Association
NTP	Network Time Protocol. Common time distribution over networks.
OCXO	Oven Controlled Crystal Oscillator
OD mode	Over-determined clock mode
PoE	Power over Ethernet
PCB	Printed Circuit Board
PDOP	Position Dilution of Precision
PPS	Pulse per Second
PTP	Precision Time Protocol (IEEE-1588)
QZSS	Quasi-Zenith Satellite System
RF	Radio Frequency
Sync E	Synchronous Ethernet
TCXO	Temperature Controlled Crystal Oscillator
ToD	Time of Day
T-RAIM	Timing Receiver Autonomous Integrity Monitoring
T-SUTC	Universal Time Coordinated
VCC	Voltage at the Common Collector; positive supply voltage
VSWR	Voltage Standing Wave Ratio

# Safety Information

## Warnings and Cautions

An absence of specific alerts does not mean that there are no safety risks involved. Always follow the instructions that accompany a Warning or Caution. The information they provide is intended to minimize the risk of personal injury and/or damage to the equipment. In particular, observe safety instructions that are presented in the following formats:

**WARNING** – *A Warning alerts you to a likely risk of serious injury to your person and/or damage to the equipment.*

**CAUTION** – *A Caution alerts you to a possible risk of damage to the equipment and/or loss of data.*

**CAUTION** – *Electrical hazard – risk of damage to equipment. Make sure all electrostatic energy is dissipated before installing or removing components from the device. An electrostatic discharge (ESD) can cause serious damage to the component once it is outside the chassis*

## Operation and storage

**WARNING** – *Operating or storing the Thunderbolt® PTP Grandmaster Clock outside the specified temperature range can damage it. For more information, see the product specifications on the data sheet.*

**WARNING** – *The Thunderbolt® PTP Grandmaster Clock is only to be used in a restricted access location*

**WARNING** – *Short-circuit (overcurrent) protection device required. The Thunderbolt® PTP Grandmaster Clock relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is listed rated not greater than 10A*

## Routing any cable

**CAUTION** – *Be careful not to damage the cable. Take care to avoid sharp bends or kinks in the cable, hot surfaces (for example, exhaust manifolds or stacks), rotating or reciprocating equipment, sharp or abrasive surfaces, door and window jambs, and corrosive fluids or gases.*

# Table of Contents

## Contents

Legal Notices .....	2
List of Abbreviations .....	5
Safety Information .....	6
Warnings and Cautions .....	6
Operation and storage .....	6
Routing any cable.....	6
Table of Contents.....	7
Chapter 1: Product Overview.....	14
1.1 Product Overview .....	15
1.2 Key Features.....	15
1.3 Physical Specifications .....	15
1.4 Performance .....	16
1.5 Front Panel Elements.....	17
EIA-232 Serial Port .....	17
Sync Out .....	17
Status LED .....	17
Management Port (LAN) .....	17
Ethernet Port.....	17
SFP Port.....	17
1.6 Back Panel Elements .....	18
GNSS Antenna Connection.....	18
Power Input.....	18
Alarm Relay .....	18
Grounding .....	18
1.7 Use and care.....	18
1.8 Technical assistance .....	19
Chapter 2: Installation.....	20
2.1 Getting Started.....	21

2.2 Mounting the Device to a Rack .....	21
2.3 Connecting Power .....	21
Grounding the Device .....	22
Powering-Up .....	22
2.4 GNSS Considerations.....	22
Selecting Site for GNSS Antenna .....	23
2.5 Communication Ports .....	24
Serial Port.....	24
Management Ethernet Port.....	25
PTP/NTP/SyncE Electrical Ethernet Port.....	25
PTP/NTP/SyncE SFP Ethernet Port.....	25
2.6 Status LED .....	26
Chapter 3: GNSS Antenna .....	28
3.1 GNSS Antenna .....	29
Antenna requirements.....	29
3.2 Antenna Placement.....	29
Sky-Visibility .....	29
Multipath-reflections .....	30
Jamming.....	30
Ground Plane .....	30
GNSS Antenna Cabling .....	30
Lightning Considerations.....	31
Chapter 4: Command Line Interface Reference .....	32
4.1 CLI Overview .....	33
4.2 Command User Levels.....	33
4.3 Command Line Format.....	34
4.4 CLI Command Set .....	35
4.4.1 get alarm .....	35
4.4.2 set alarm .....	35
4.4.3 view alarm.....	36
4.4.4 view access.....	36
4.4.5.0 get auth.....	36
4.4.5.1 get auth local.....	36

4.4.5.2 get auth tacacs .....	37
4.4.5.3 get auth radius .....	37
4.4.6.0 set auth .....	37
4.4.6.1 set auth radius .....	38
4.4.6.2 set auth tacacs .....	38
4.4.6.3 set auth local .....	39
4.4.6.4 set auth type .....	40
4.4.7 get auto .....	41
4.4.8 set auto .....	41
4.4.9.0 config .....	41
4.4.9.1 config firmware .....	42
4.4.9.2 config firmware list .....	42
4.4.9.3 config firmware stage .....	42
4.4.9.4 config firmware update .....	43
4.4.9.5 config firmware unstage .....	43
4.4.9.6 config load .....	44
4.4.9.7 config list .....	44
4.4.9.8 config save .....	44
4.4.9.9 config system .....	45
4.4.10 get comm .....	45
4.4.11 set comm .....	45
4.4.12 get date .....	46
4.4.13 get dlog .....	46
4.4.14 set dlog .....	46
4.4.15 download .....	47
4.4.16 get freq .....	47
4.4.17 set freq .....	47
4.4.18 view freq .....	48
4.4.19 get gnss .....	48
4.4.20 set gnss .....	48
4.4.21 view gnss .....	49
4.4.22 help .....	50
4.4.23 howto .....	50

4.4.24 get input.....	51
4.4.25 set input .....	51
4.4.26 view input.....	52
4.4.27 view logs.....	53
4.4.28 get network.....	53
4.4.29 set network .....	54
4.4.30 view network .....	55
4.4.31 get ntp.....	56
4.4.32 set ntp .....	56
4.4.33 view ntp.....	57
4.4.34 get output .....	58
4.4.35 set output.....	58
4.4.36 get periodic .....	59
4.4.37 set periodic.....	59
4.4.38 ping.....	59
4.4.39 ping6 .....	60
4.4.40 view pos .....	60
4.4.41 view prodconf .....	60
4.4.42 get ptp.....	61
4.4.43 set ptp .....	61
4.4.44 view ptp.....	63
4.4.45 quit .....	63
4.4.46 view realtime .....	64
4.4.47 help set.....	64
4.4.48 get snmp .....	64
4.4.49 set snmp.....	65
4.4.50 view summary.....	65
4.4.51 view stream.....	65
4.4.52 get syslog.....	66
4.4.53 set syslog.....	66
4.4.54 view temp .....	67
4.4.55 get time .....	67
4.4.56 view uptime .....	67

4.4.57 get user .....	68
4.4.58 set user.....	68
4.4.59 set user logout .....	69
4.4.60 view user .....	69
4.4.61 view version .....	70
4.4.62.0 view .....	70
4.4.62.1 view dlog .....	71
4.4.62.2 view gnss stream.....	71
4.4.63 help whatif .....	71
4.5 List of “How to” help topics .....	72
4.5.1 How to get current Alarm status?.....	72
4.5.2 How to set alarm of level major, alarm number 2 with setTime as 2 and clearTime as 1?.....	72
4.5.3 How to disable Ethernet port 0/1? .....	72
4.5.4 How to set ip address of 192.168.0.9, and also set a netmask and a gateway address on ethernet 0 port?.....	73
4.5.5 How to set bnc output to even? .....	73
4.5.6 How to set periodic output of period 2 and value 1? .....	73
4.5.7 How to set serial port baud rate to 19200bps? .....	73
4.5.8 How to add a new user called trimble1 with an access level of user? .....	73
4.5.9 How to delete an existing user trimble? .....	73
4.5.10 How to change user password? .....	73
4.5.11 How to restore factory default settings? .....	73
4.5.12 How to reboot the system? .....	73
4.6 List of “What if” help topics .....	74
4.6.1 What if you have an FPGA-Load-Bad alarm.....	74
4.6.2 What if you have a PTP-System-Bad alarm.....	74
Chapter 5: Web Interface .....	76
5.1 Home Page .....	77
Refresh Rate.....	77
5.2 Login Page .....	78
5.3 System Page .....	79
5.4 System Status.....	79
Alarms and Events - Alarms .....	79



Alarms and Events – Event Log .....	80
System Info .....	81
Timing Status.....	82
NTP Status .....	84
PTP Status .....	85
GNSS Receiver Status .....	86
Satellite Data .....	87
Network eth0 .....	88
Network eth1 .....	89
Network Management Port .....	90
Ethernet Statistics .....	91
5.5 Interface Management .....	92
Ethernet Port 0.....	92
Ethernet Port 1.....	93
Ethernet Management Port.....	94
VLAN Ethernet Port 0.....	95
VLAN Ethernet Port 1.....	96
SNMP Configuration Basic .....	97
SNMP Configuration v2c .....	98
Syslog .....	99
Serial Port.....	100
5.6 Synchronization Management.....	101
PTP Grandmaster Ethernet Port 0 .....	101
PTP Grandmaster Ethernet Port 1 .....	102
NTP Time Server Ethernet Port 0 .....	103
NTP Time Server Ethernet Port 1 .....	104
NTP Time Server NTP security.....	105
NTP Time Server - NTP Peers .....	106
GNSS Receiver .....	107
Sync Source .....	108
Output Configuration.....	109
5.7 Security Management.....	110
User Management - Active Sessions.....	110

User Management - User Accounts .....	111
User Management – Password Rules .....	112
Authentication Portal.....	113
Authentication RADIUS .....	114
Authentication TACACS+ .....	115
5.8 System Management .....	116
Alarm.....	116
System Configuration.....	117
System Software Upload.....	118
Chapter 6: SNMP Support .....	120
6.1 SNMP Overview .....	121
6.2 SNMP Traps.....	121
6.3 Accessing the SNMP MIB Files .....	121
Chapter 7: GM200 Provisioning.....	122
7.1 Help Commands.....	123
7.1.1 help set.....	123
7.1.2 help set ptp .....	124
7.2 View System and Hardware Version.....	126
7.2.1 view version .....	126
7.2.2 view prodconf .....	127
7.3 View Alarms, Status and Firmware .....	128
7.3.1 get alarm .....	128
7.3.2 view logs.....	129
7.4 GNSS and Lock Status.....	131
7.4.1 view gnss .....	131
7.4.2 get gnss .....	132
7.4.3 view freq .....	133
7.5 Network Configuration .....	134
7.5.1 get network.....	134
7.5.2 set network .....	135
7.5.3 get network eth<x>.....	136
7.5.4 view network eth<x> .....	137
7.6 VLAN Configuration.....	138

7.6.1 set network eth0 vlan .....	138
7.6.2 get network eth0.....	139
7.6.3 set network eth0.20.....	140
7.6.4 get network eth0.....	141
7.7 PTP Configuration .....	142
7.7.1 set ptp eth1 profile g8265 .....	142
7.7.2 set ptp eth1 profile mode slave .....	143
7.7.3 set ptp eth1 profile g8275 .....	144
7.7.4 set ptp eth1 mode slave.....	145
7.7.5 get ptp .....	146
7.7.6 view ptp eth1 .....	148
7.8. SyncE Configuration .....	149
7.8.1 set network eth0 sync output.....	149
7.8.2 get network eth0.....	151
7.9 Input Clock Source Control .....	152
7.9.1 get input.....	152
7.9.2 set input .....	153
7.9.3 view input.....	154
7.10 Antenna Cable Delay and BNC Port Output.....	155
7.10.1 set gnss adelay 40 .....	155
7.10.2 set output 10Mhz.....	156
7.10.3 config firmware list .....	158
7.11 Save configuration .....	159
Chapter 8: PTP Input.....	162
8.1 PTP Input Overview.....	163
8.2 How it works .....	163
8.3 Configuring with CLI commands. ....	164
8.4 Configuring with Web Interface.....	165
Configuring Ethernet Port as input. ....	165
PTP protocol configuration (slave mode) .....	167
View PTP configuration.....	168
View the list of Sync Sources. ....	168
8.5 Procedure to configure PTP Input.....	169

Chapter 9: VLANs .....	170
9.1 VLANs Overview .....	171
9.2 Configuring VLAN support with CLI commands .....	171
9.3 Configuring VLAN with Web Interface .....	171
9.4 Configuring one VLAN ID .....	173
9.5 Adding another VLAN ID .....	174
9.6 Procedure to remove all VLAN IDs .....	176
Appendix A: SNMP Traps .....	178
Appendix B: Alarms .....	188
Contact Information .....	195



## Chapter 1: Product Overview

In this chapter:

Operation

Key Features

Getting started

Use and care

Technical assistance

The Thunderbolt® PTP GM-200 is an IEEE-1588 Grandmaster Clock (GMC). It provides PTP, NTP and SyncE time references.

The *Thunderbolt® PTP Grandmaster Clock (GMC) GM-200's User Guide* describes how to integrate and operate the Trimble® Thunderbolt® PTP Grandmaster Clock GM-200.

For more information on GPS, go to <http://www.trimble.com/gps/index.shtml>.

## 1.1 Product Overview

Trimble's Thunderbolt® PTP Grandmaster Clock GM-200 is a high quality IEEE-1588 PTP Grandmaster clock (GMC) with an integrated Trimble GNSS receiver. The Thunderbolt® PTP GMC is designed and optimized for the deployment in wireless service provider networks to meet the stringent time & phase requirements of 4G LTE and small cell networks.

It provides NTP, PTP and Synchronous Ethernet timing protocols. Thunderbolt® PTP GMC GM-200 uses GNSS (Global Navigation Satellite Systems) signals from GPS, GLONASS, Galileo, and Beidou as the primary time source for synchronization.

Thunderbolt® PTP can use its built-in, disciplined OCXO (oven controlled crystal oscillator) as an autonomous time base for providing several hours of accurate holdover in case that GNSS signals are not available.

Hardware redundancy can be achieved by using two Thunderbolt® PTP Grandmaster clocks.

Thunderbolt® PTP comes in a rack-mountable enclosure; two Thunderbolt® PTP units fit side-by-side in a 1RU height 19" rack.

## 1.2 Key Features

- IEEE-1588 Precision Time Protocol Grandmaster
- Network Time Server (NTP v4)
- Synchronous Ethernet
- Multi-GNSS Receiver (GPS, GLONASS, Beidou and Galileo)
- 1 RJ45 Dedicated Management Port
- 1 RJ45 Port (NTP/PTP/SyncE)
- 1 SFP interface (NTP/PTP/SyncE)
- 1 BNC port (PPS and 10MHz outputs)
- IPv4, IPv6 and VLAN
- 1 EIA-232 (RS-232) Serial Port
- Small foot print – ½ Rack 1U
- CLI / SNMP traps
- DC (default) and AC power options
- PTP/SyncE Input

## 1.3 Physical Specifications

The Thunderbolt® PTP GMC can be installed in a 19-inch rack mount unit. It can fit in ½ rack space, 2 Thunderbolt® PTP GMC units can be installed side-by-side in a full rack space for additional redundancy.



## 1.4 Performance

The system level performance is defined by the total number of packets per second. The total/maximum number of packets per second supported is 6,272.

If Thunderbolt® PTP GM-200 is configured only as Grandmaster then it can support:


- 16 unicast PTP slaves/clients @ 128 packets per second
- 32 unicast PTP slaves/clients @ 64 packets per second
- 64 unicast PTP slaves/clients @ 32 packets per second
- 128 unicast PTP slaves/clients @ 16 packets per second
- 256 unicast PTP slaves/clients @ 8 packets per second

The upper limit on number of PTP slaves/client is 500 (unicast or multicast)

If Thunderbolt® PTP GM-200 is configured only as NTP Time Server then it can support NTP 2,500 transactions per second.

If Thunderbolt® PTP GM-200 is configured as Grandmaster and NTP Time Server at the same time (GMC and Time Server combination), then the maximum number of packets per second supported is 6,272.

## 1.5 Front Panel Elements

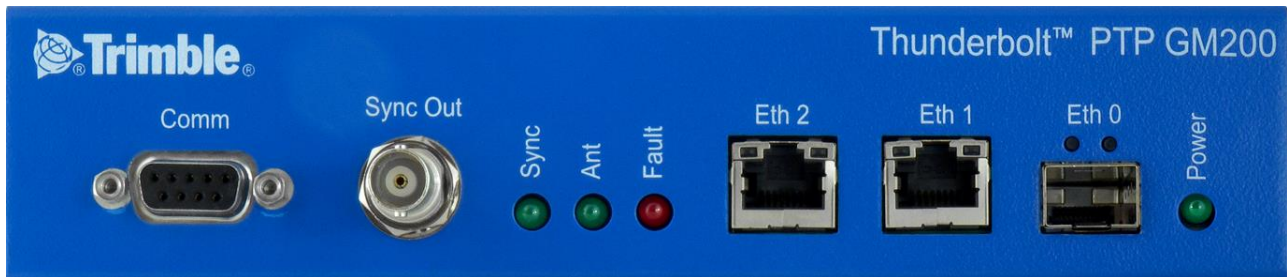

### ***EIA-232 Serial Port***

The EIA-232 (RS-232) serial port provides a craft interface to the Thunderbolt® PTP GMC through an EIA-232 female connector.

### ***Sync Out***

The Thunderbolt® PTP GMC features a BNC female connector that provides 1PPS output. It can be configured for 10MHz, see the set output command.

### ***Status LED***

The Thunderbolt® PTP GMC provides 4 LEDs on the front panel that indicate the following status:

- Power
- Antenna
- Sync
- Status/Alarm

### ***Management Port (LAN)***

The Thunderbolt® PTP GMC has one dedicated management Ethernet port. The RJ-45 port provides connectivity to Ethernet LAN for the configuration of the unit.

### ***Ethernet Port***

One RJ45 Ethernet port. Provides NTP/PTP connectivity to Ethernet Networks

### ***SFP Port***

The Thunderbolt® PTP GMC support one SFP port. Provides NTP/PTP connectivity to Ethernet Networks

## 1.6 Back Panel Elements



### *GNSS Antenna Connection*

The Thunderbolt® PTP GMC features an SMA connector for the antenna input to the embedded GNSS receiver

### *Power Input*

The standard input power is -48VDC. The Thunderbolt® PTP GMC provides a 5pole terminal block to connect dual DC power inputs.

### *Alarm Relay*

The Thunderbolt® PTP GMC provides a 3.81mm 3pin terminal header for dry relay connection. Both Normally Open (NO) and Normally Closed (NC) connections are available to the user. The relay closure is considered **closed** in Critical alarm condition.

### *Grounding*

The frame ground connection on Thunderbolt® PTP GMC is available through a M5 Grounding Terminal Stud.

## 1.7 Use and care

The Thunderbolt® PTP is a high-precision electronic instrument and should be treated with reasonable care. Thunderbolt® PTP typically doesn't need any care after the first setup. Should you need to clean the unit, use a dry non-static tissue or a light moist tissue for removing dust or stain from the enclosure. Make sure that no water enters the Thunderbolt® PTP enclosure anywhere. Don't use solvents, aggressive or abrasive cleaning agents anywhere on the Thunderbolt® PTP device.

***CAUTION – There are no user-serviceable parts inside the Thunderbolt® PTP Grandmaster Clock and any modification to the unit by the user voids the warranty.***

## 1.8 Technical assistance

If you have a problem and cannot find the information you need in the product documentation, contact the Trimble Technical Assistance Center at 800-767-4822 or email [tsgsupport@trimble.com](mailto:tsgsupport@trimble.com).

## Chapter 2: Installation

In this chapter:

[Getting Started](#)

[Time References](#)

[Operation](#)

[Timing module Performance](#)

[Holdover](#)

[Customization](#)

This chapter describes the procedure for installing the Thunderbolt® PTP Grandmaster Clock (GMC) GM-200.

## 2.1 Getting Started

This section explains how to install and configure the Thunderbolt PTP GMC GM-200.

Unpack and inspect the content of package. The following items are included in the standard box:

- Thunderbolt PTP Grandmaster Clock GM-200
- Mounting brackets and installation accessories
- Dummy plate for single unit installation in 19" rack

## 2.2 Mounting the Device to a Rack

The Thunderbolt PTP GMC should be installed indoor or outdoor in an environmental controlled cabinet. The Thunderbolt PTP GMC will install in an EIA standard 19-inch rack. The unit occupies ½ rack space and if required two GMC units can be installed side-by-side.

*NOTE – It is recommended that 1 rack-unit of space (1.75 in) be kept empty above the device. This allows a small amount of convectional airflow. Forced airflow is not required.*



## 2.3 Connecting Power

The Thunderbolt PTP GMC supports single or dual redundant AC or DC power supplies. The Thunderbolt PTP GMC standard option is 48VDC. The Thunderbolt PTP GMC is capable of operating from -36Vdc to -72Vdc at a maximum current level of 250mA.

The DC input is reverse polarity protected. Reversing polarity with 48VDC options will not cause damage to the unit and the unit will operate normally.

*NOTE – The power cable should be routed separately from the data (signal) cables.*

### ***Grounding the Device***

The Thunderbolt PTP GMC M5 Terminal Stud on the back panel is used for grounding.

The Thunderbolt PTP GMC is suitable for connection to the Central Office and CPE. The grandmaster clock shall be located in a restricted access location where only craft personnel are allowed access.

The Thunderbolt PTP GMC shall be grounded via a copper ground conductor. The unit shall be installed and connected to the common bonding network (CBN).

All bare grounding connection points to the Thunderbolt PTP GMC shall be cleaned and coated with an anti-oxidant solution before connections are made.

All surfaces on the Thunderbolt PTP GMC that are un-plated shall be brought to a bright finish and treated with an anti-oxidant solution before connection is made.

All non-conductive surfaces on the Thunderbolt PTP GMC shall be removed from all threads and connection points to ensure electrical continuity

The Thunderbolt PTP GMC DC power returns shall be treated as DC-I (Isolated from Frame Ground).

Thunderbolt PTP GMC requires a ring terminal with a 14-AWG wire that utilizes 15in-lbs to secure to primary ground.

### ***Powering-Up***

After verification of the input power source, switch on the power supply to the Thunderbolt PTP GMC. The Green Power LED should turn ON.

## **2.4 GNSS Considerations**

See the next chapter for a full description of how to choose the correct antenna cable/antenna combination.

When connected to a GNSS antenna the Thunderbolt PTP GMC can receive GNSS signal without user intervention— the factory default is GPS and GLONASS. The user can enable Beidou in place of GLONASS or enable single constellation mode.



The Trimble family of Bullet antennas is best matched with Thunderbolt PTP GMC. The bullet antenna has following versions:

- Bullet III GPS only antenna
- Bullet GG GPS and GLONASS antenna
- Bullet L1/L2 GPS Dual Band – L1 and L2 frequencies
- Bullet 40dB GPS L1 high gain (40dB) antenna
- Bullet GB GPS and Beidou antenna
- Bullet 360 GPS, GLONASS, Beidou and Galileo antenna

Connecting the GNSS antenna will turn the Antenna LED Green.

### ***Selecting Site for GNSS Antenna***

It is important that the GNSS antenna has the fullest possible view of the sky. In most cases, this means installing the antenna on a high point, such as roof top. Avoid overhanging objects such as trees and towers. Also take care to place the antenna away from low lying objects such as neighboring buildings that may block a portion of the sky near the horizon. If a full view of the sky is not possible, mount the antenna aiming towards the Equator to maximize the southern view of the sky (choose a northern view in the Southern Hemisphere).

Use the criteria below to select a good outdoor site for the GPS antenna. The best locations provide:

- Unobstructed views of the sky and horizon.
- Low electro-magnetic interference (EMI) and radio frequency interference (RFI) – away from high-power lines, transmitting antennas, and powerful electrical equipment.
- Convenient access for installation and maintenance.
- Reasonable access for the antenna cable to reach the Thunderbolt PTP GMC

## 2.5 Communication Ports

The Thunderbolt PTP GMC has four communications ports on the front panel.

- 1 Serial Port (RS232)
- 1 Management Port Ethernet (eth2) 10/100/1000 Base-T (RJ-45)
- 1 Traffic Port Ethernet (eth1) 10/100/1000 Base-T (RJ-45)
- 1 Traffic Port SFP (Small Form-Factor Pluggable)

Either Serial port or Ethernet eth2 (RJ-45) is the dedicated management port to configure the Thunderbolt PTP PMC.

### Serial Port

A bi-directional EIA standard RS-232 is located on the front panel. The serial port provides access to command line interface (CLI) for limited status and configuration of the Thunderbolt PTP GMC.

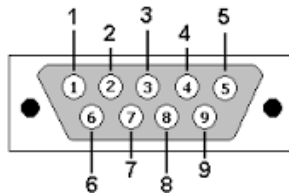


Figure 2.1: Serial Port pin assignments

Use a straight through cable with following setting:

Data Rate	115200 baud
Parity	None
Data Bits	8
Stop Bits	1

### Serial Port Pin Assignment

Pin	RS-232 Signal	Description on Echo Side
1	DCD	Not Used
2	RxD	Data Transmit
3	TxD	Data Receive
4	DTR	Not Used
5	GND	Ground
6	DSR	Not Used
7	RTS	Not Used
8	CTS	Not Used
9	RI	Not Used

### **Management Ethernet Port**

The Thunderbolt PTP GMC supports one 10/100/1000 Base-T Ethernet port that allows connection to standard CAT-5 / CAT-5e / CAT-6 cables with RJ-45 male connector.

The Ethernet port features an LED that indicates the state of the port. The port is designated as “Ethernet-2”. The user can use this port to gain access to the Web interface (HTTPS) or command line interface (TELNET/SSH).

The factory default settings for the Ethernet-2 network port are as follows:

- IP Address: 192.168.2.250
- Mask: 255.255.255.0
- Gateway: 0.0.0.0

### **PTP/NTP/SyncE Electrical Ethernet Port**

The Thunderbolt PTP GMC GM-200 supports one 10/100/1000 Base-T Ethernet port that allows connection to standard CAT-5 / CAT-5e / CAT-6 cables with RJ-45 male connector.

The Ethernet port features an LED that indicates the state of the port. The port is designated as “Ethernet-1”. This port is not designed for communication purposes for security reasons. This port is designed for providing NTP/PTP/SyncE.

The factory default settings for the Ethernet-1 network port are as follows:

- IP Address: 192.168.1.250
- Mask: 255.255.255.0
- Gateway: 0.0.0.0

***NOTE – The Ethernet interface shall not be connected to a cable longer than 6 meters. If a distance greater than 6 meters is required, then the Ethernet interface shall be connected to a switch to comply with GR-1089.***

### **PTP/NTP/SyncE SFP Ethernet Port**

The Thunderbolt PTP GMC GM-200 supports one 10/100/1000 Base-T Ethernet port that allows connection to standard CAT-5 / CAT-5e / CAT-6 cables with electrical SFP or fiber cables with optical SFP.

The Ethernet port features an LED that indicates the state of the port. The port is designated as “Ethernet-0”. This port is not designed for communication purposes for security reasons. This port is designed for providing NTP/PTP/SyncE

The factory default settings for the Ethernet-0 network port are as follows:

- IP Address: 192.168.0.250
- Mask: 255.255.255.0
- Gateway: 0.0.0.0

## 2.6 Status LED

Alarm and status information is presented through the use of four LEDs. All LEDs have corresponding dry contact relay outputs at the back side of the Thunderbolt® PTP device.

LED	Color	Indication	Meaning
Power	Green	ON	System is powered on
		OFF	System does not have power
ANT	Green	ON	Reference acquired & tracking
		Blinking, 1/2Hz	Reference being acquired, or no computing
		OFF	No reference active or antenna
Sync	Green	ON	Locked
		Blinking, 1/2Hz	Acquisition or Holdover
		OFF	Free-run or startup
Status	Red	OFF	No active alarms
		ON	Critical Alarm
		Blink, 1Hz	Minor alarm condition
		Blink, 1/2Hz	Major alarm condition



## Chapter 3: GNSS Antenna

### In this chapter:

Antenna Requirements

OPEN/SHORT Detection

Antenna Placement

Multipath

Jamming

Ground plane

A good GNSS antenna, together with a good installation site, is the key for getting the best performance from a GNSS receiver. This chapter explains the requirements for the antenna and provides recommendations for a good installation.

## 3.1 GNSS Antenna

The antenna receives the GNSS satellite signals and passes them to the receiver. The GNSS signals are spread spectrum signals in the 1551MHz to 1614MHz range and do not penetrate conductive or opaque surfaces. Therefore, the antenna must be located outdoors with a clear view of the sky. The internal GNSS receiver requires an active antenna with integrated LNA. The received GNSS signals are very low power, approximately -130dBm, at the surface of the earth. Trimble's active antenna includes a preamplifier that filters and amplifies the GNSS signals before delivery to the receiver.

The onboard circuits provide DC supply voltage on the SMA coax connector for the external, active GNSS antenna. The antenna supply voltage is fully protected against short circuit by the onboard Open/Short detection with integrated current limiter. The GM200™ has a full antenna monitoring circuit on board.

### *Antenna requirements*

The GM200™ requires an active GNSS antenna with built-in Low-Noise Amplifier (LNA) for optimal performance. The antenna LNA amplifies the received satellite signals for two purposes:

- a) Compensation of losses on the cable
- b) Lifting the signal amplitude in the suitable range for the receiver frontend.

Task b) requires an amplification of at least 15dB, while 20dB is the sweet spot for the GM200™. This would be the required LNA gain if the antenna was directly attached to the receiver without cable in between.

The cable and connector between the antenna and the receiver cause signal loss. The overhead over the minimum required 15 dB and the actual LNA gain of the antenna is available for task a). So in case of a 30dB LNA gain in the antenna, 15 dB are available for compensating losses.

Or in other words, the attenuation of all elements (cables and connectors) between the antenna and the receiver can be up to a total of 15dB with a 30dB LNA. With a different antenna type, take the difference between 15dB and the antenna's LNA gain as the available compensation capability. Subtract the insertion losses of all connectors from the 15dB (or whatever the number is) and the remainder is the maximum loss, which your cable must not exceed.

As the GNSS signals are hidden in the thermal noise floor, it is very important that the antenna LNA doesn't add more noise than necessary to the system; therefore a low noise figure is even more important than the absolute amplification.

Trimble does not recommend having more than 35dB remaining gain (LNA gain minus all cable and connector losses) at the antenna input of the receiver module. The recommended range of remaining LNA gain at the connector of the receiver module is 20dB to 30dB with a minimum of 15dB and a maximum of 35dB.

## 3.2 Antenna Placement

### *Sky-Visibility*

GNSS signals can only be received on a direct line of sight between antenna and satellite. The antenna should see as much as possible of the total sky. Seen from the northern hemisphere of the earth, more satellites will be visible in the southern direction rather than in northern direction. The antenna should therefore have open view to the southern sky. If there are obstacles at the installation site, the antenna should be placed south of



the obstacles, preferably, in order not to block sky-view to the south.

If the installation site is in the southern hemisphere of the earth, then the statements above are reversed – more satellites will be visible in the northern direction. Near to the equator, it doesn't matter.

Partial sky visibility causes often poor DOP values due to the geometry of the visible satellites in the sky. If the receiver can only see a small area of the sky, the DOP has a high degree of uncertainty and will be worse compared to a condition with better geometric distribution. It may happen that a receiver is seeing 6 satellites, all close together, and still get a much worse DOP than a receiver which sees 4 satellites, but all in different corners of the sky. The receiver's DOP filter rejects fixes with high DOP (high uncertainty), therefore it can take longer to get the first acceptable fix if sky visibility is partly obstructed.

### ***Multipath-reflections***

Multipath occurs when the GNSS signals are reflected by objects, such as metallic surfaces, walls and shielded glass for example. The antenna should not be placed near a wall, window or other large vertical objects if it can be avoided.

### ***Jamming***

Jamming occurs when the receiver function is disturbed by external RF sources that interfere with GNSS signals or saturate the antenna LNA or receiver front-end. A good indicator to detect jamming is switching off all other equipment except the GNSS. Watch the satellite signal levels in this condition. Then switch on other equipment and see if the signal levels go down. A drop of signal levels indicates interference to GNSS from the other equipment. This method cannot, however, detect all possible kinds of jamming. Spurious events are hard to catch. Low frequency fields, like 50 Hz, are unlikely to jam the receiver. Broadband sparks are a potential source of spurious jamming. There's no general installation rule or specification though, because the effect of jamming highly depends on the nature of the jamming signal and there are uncountable many variations possible, so that it's not possible to standardize a test scenario.

### ***Ground Plane***

A metal plate or surface under the antenna can block signal reflections from below. This is a good method to mitigate reflections, if the receiver is mounted on high masts or other elevated sites.

### ***GNSS Antenna Cabling***

Trimble recommends low loss coaxial cabling.

Using any length of coaxial cable will add some time delay to the GPS signal, which affects the absolute accuracy of the computed time solution. The time delay is dependent on the type of dielectric material in the cable and ranges from 3.3 to 6.5ns/meter.

The Antenna Cable Delay advances the Hardware Clock slightly to cancel out the signal delay caused by the length of the GPS antenna cable. To calculate the adjustment, select the signal propagation rate for the appropriate cable type and multiply it by the length of the cable.

For example, the standard RG-59 antenna cable has a propagation rate of 4.07ns/meter. The delay for a 25-meter cable will be 101.75ns ( $25 \times 4.07 = 101.75$ ).

The outer shield on the GNSS cable shall be grounded to the chassis via the cable shell to the connector ground on the chassis. The connector ground is tied to the chassis. The chassis is connected to the primary

ground which utilizes a ring terminal with a 14AWG wire connected to the rack. There are to be no breaks in the outer shield of the GNSS cable. Reference ANSI/NFPA 70, the National Electrical Code (NEC), in particular Section 820.93.

*NOTE – The GNSS antenna cable should only be connected when the unit is properly Earth grounded.*

### ***Lightning Considerations***

Although, it is not possible to protect the antenna from a direct lightning strike, the connected devices can be protected from secondary effects through protection devices.

Trimble recommends installing an in-line lightning arrestors in the antenna line to protect the receiver and connected devices. In-line lightning arrestors are mounted on a low impedance ground between the antenna and the point where the cable enters the building.

## Chapter 4: Command Line Interface Reference

In this chapter:

[CLI Overview](#)

[CLI Command Set](#)

This chapter describes the CLI command conventions, prompts, features and command syntax used in Thunderbolt® PTP Grandmaster Clock.

## 4.1 CLI Overview

The Command Line Interface (CLI), also called the ASCII command set, can be used to control the Thunderbolt® PTP GMC GM200 from a terminal connected to the RS-232 serial port, or the Ethernet port via Telnet/SSH access.

## 4.2 Command User Levels

The Thunderbolt® PTP GMC GM200 provides a hierarchy of CLI users that permit an increasing level of access to system parameters.

- **User:** This is the basic login level. The login id for this level is “trimble”.  
This only allows for viewing of status, nothing can be changed other than their password
- **Admin:** this is the next level. The login id for this level is “trimbleadmin”. This user can configure everything about the unit except user accounts.
- **Supervisor:** This is the highest level. The login id for this level is “trimblesuper”.  
This allows configuration of everything, including user accounts. This is the Trimble user access level by default.

The passwords of each default user is the same as the lower-case user login id, for user level “trimbleadmin” the password is “trimbleadmin”.

As a 'Best security practices' , Trimble recommends to change the default user credentials of ‘trimble’, ‘trimbleadmin’, ‘trimblesuper’ accounts.

## 4.3 Command Line Format

The command line format is as follows:

[action] command [parameter] [data] enter ( ↵ ) The type of

action to be taken with a command

- **Config** enables you to configure the device parameters
- **Get** allows you to retrieve specific information
- **Set** allows you to provision a specific parameter
- **View** enables you to display system information. This information cannot be altered by the user.

Help is available on the following topics:

- **help intro** an introduction to the Thunderbolt® PTP GMC
- **help commands** a list of CLI commands available
- **help syntax** description of the syntax used in help descriptions
- **help howto** a list of "how to" help topics
- **help whatif** a list of "what if" help topics
- **help alarm** a descriptive list of possible alarm conditions within the system

Help on an individual command is available by typing help and the command name. For example, "help view".

***NOTE – The GM200 has an extensive on-line, user level context aware, help system. The on-line help for the most part is more up-to-date and accurate than the information in the user guide.***

## 4.4 CLI Command Set

This section provides an alphabetical listing and details of all CLI commands. This section describes the topic “help commands”.

### 4.4.1 get alarm

The *get alarm* command retrieves information about the current system alarm configuration.

Command Syntax:

```
get alarm [ <n> [<n>] . . . ]↵
```

- <n> Alarm number to get configuration. More than one alarm number can be passed. If none given, then the configuration of all alarms is sent.

Level: User, Admin and Supervisor

### 4.4.2 set alarm

The *set alarm* command allows configuration of the system alarms. This is a multi-option command of the format:

Command Syntax:

```
set alarm <n> <level> <settime> <clrtime>↵
```

Where:

- |           |   |
|-----------|---|
| <n>       | The alarm number, this can be viewed with the 'get alarm' command   |
| <level>   | Alarm level. One of:<br>IGN: This alarm condition is ignored. No indication given.<br>NFY: This alarm condition is a notification only.<br>MIN: This is a minor alarm condition.<br>MAJ: This is a major alarm condition.<br>CRI: This is a critical alarm condition. |
| <settime> | Alarm set time. This is the time, in seconds, that the alarm condition must be active before the alarm is actually asserted. Range is 0 - 86400 (1 day)   |
| <clrtime> | Alarm clear time. This is the time, in seconds, that the alarm condition must be inactive before it the alarm is actually cleared. Range is 0 - 86400 (1 day)   |

*NOTE – For any entry, but default and <n>, a '-' character may be used to retain the current setting for that particular entry.*

Level: Admin and Supervisor

### 4.4.3 view alarm

The *view alarm* command displays the currently active alarms within the system. If there is no active alarm, then the command returns “No active alarms”.

Command Syntax:

```
view alarm <n> <all> ↵
```

Where:

<n>	The alarm number to view
<all>	view all alarms

Level: User, Admin and Supervisor

### 4.4.4 view access

This command shows access level of current logged in user. Command

Syntax:

```
view access ↵
```

Level: User, Admin and Supervisor

### 4.4.5.0 get auth

Return the current authentication settings. You can query specific settings with the options:

Syntax:

```
get auth <options> ↵
```

Where <options> are:

local	Get the local authentication settings
tacacs	Get the TACACS+ authentication settings
radius	Get the RADIUS authentication settings

Level: Supervisor

### 4.4.5.1 get auth local

Return the current settings for the local authentication parameters.

Syntax:

```
get auth local ↵
```

Level: Supervisor

#### 4.4.5.2 *get auth tacacs*

Return the current TACACS+ authentication settings.

Syntax:

```
get auth tacacs ↵
```

Level: Supervisor

#### 4.4.5.3 *get auth radius*

Return the current RADIUS authentication settings.

Syntax:

```
get auth radius ↵
```

Level: Supervisor

#### 4.4.6.0 *set auth*

The *set auth* command allows to change the authentication settings.

Command Syntax:

```
set auth <options> ↵
```

Where <options> are:

default	Set the authentication to the default settings
type [options]	Set the authentication type options. Please see ' <i>help set auth type</i> ' for additional information
radius [options]	Set the RADIUS authentication options. Please see <i>help set auth radius</i> for additional information.
Tacacs [options]	Set the TACACS+ authentication options. Please see <i>help set auth tacacs</i> for additional information.

**NOTE – Authentication <options> cannot be combined on one line, all command variants must be presented separately.**

Level: Supervisor



#### 4.4.6.1 set auth radius

The *set auth radius* command configures the RADIUS server connection information.

Command Syntax:

```
set auth radius (options)↵
```

Where the options are:

default	Set the RADIUS server information to defaults.
addr	Set the primary server address for the RADIUS server.
saddr	Set the secondary server address for the RADIUS server.
port	Set the IP port for the RADIUS server (same for primary and secondary).
secret	Set the shared secret value for the RADIUS server (same for primary and secondary). This may contain any 'printable' character. It is recommended that, the string be enclosed in "" to allow setting of characters that might be interpreted as parameter separators
timeout	Set the RADIUS server timeout value. 1-60 seconds

Level: Supervisor

#### 4.4.6.2 set auth tacacs

The *set auth tacacs* command configure the TACACS+ server connection information.

Command Syntax:

```
set auth tacacs (options)↵
```

Where the options are:

default	Set the TACACS+ server information to defaults
addr	Set the primary server address for the TACACS+ server.
saddr	Set the secondary server address for the TACACS+ server.
port	Set the IP port for the TACACS+ server (same for primary and secondary).
secret	Set the shared secret value for the TACACS+ server (same for primary and secondary). This may contain any 'printable' character. It is recommended that, the string be enclosed in "" to allow setting of characters that might be interpreted as parameter separators.
service	Set the TACACS+ server service string.
protocol	Set the TACACS+ server protocol string.
timeout	Set the RADIUS server timeout value. 1-60 seconds

Level: Supervisor

### 4.4.6.3 set auth local

The *set auth local* command allows to configure the local password configuration requirements.

Command Syntax:

```
set auth type [local [<options>]]↵
```

minlen <n>	establishes a measure of complexity related to the password length (more in a moment on this). Range: $2 < \text{minlen} < 30$
lcredit <n>	sets the minimum number of required lowercase letters. Range: $ \text{lcredit}  < 6$
ucredit <n>	sets the minimum number of required uppercase letters Range: $ \text{ucredit}  < 6$
dcredit <n>	sets the minimum number of required digits Range: $ \text{dcredit}  < 6$
ocredit <n>	sets the minimum number of required other characters. These characters can be any printable character, except for space. Range: $ \text{ocredit}  < 6$
difok <yes no>	sets if the user is required to enter a different password when changing their password (default 'yes')
pre <o>	Set a 'preconfigured' password criteria, where <o> is: p0 : require a minimum of 6 characters, no other requirements (default) p1 : require at least 1 uppercase letter. The password must be at least 6 characters long. p2 : require at least 1 uppercase and 2 lowercase letters. The password must be at least 6 characters long. p3 : require at least 1 uppercase, 2 lowercase, and 1 number. The password must be at least 6 characters long. p4 : require at least 1 uppercase, 2 lowercase, 1 number and 1 'other' character. The password must be at least 6 characters long.

'minlen' is actually a measure of complexity, not simply length. It specifies a complexity score that must be reached for a password to be deemed as acceptable. If each character in a password added one to the complexity count, then minlen would simply represent the password length but, if some characters count more than once, the calculation is more complex. So let's see how this works.

The minlen complexity measure is calculated in a number of steps:

- every character in a password yields one point, regardless of the type of character
- every lowercase letter adds one point, up to the value of lcredit
- every uppercase letter adds one point, up to the value of ucredit
- every digit adds one point, up to the value of dcredit
- every special character adds one point, up to the value of ocredit

If lcredit, ucredit, dcredit and ocredit were all set to 0, only the password length would be used to determine if it's acceptable. No characters would add extra points to the complexity score.

When you set any of the lcredit, ucredit, dcredit or ocredit parameters to a negative number, then you MUST have at least that number of characters for each character class for the password to pass the complexity test.

Note: You can combine settings. For instance:

```
set auth local p1 dcredit -1
```

Would set the criteria to be: require at least 1 uppercase, 1 digit and a minimum length of 6 characters.

Examples include:

```
set auth local minlen 12
```

```
set auth local pre p2 minlen 10
```

#### 4.4.6.4 *set auth type*

The *set auth type* command allows changing of the authentication method used for user login. The authentication type is set on a per access portal type.

Command Syntax:

```
set auth type [local [<options>] / radius / tacacs] [<portal type>]↵
```

Where the authentication type is one of:

default	Set the authentication to the default values, which is local for all portal types
local	Use only the locally stored username and passwords. These are maintained with the 'set user' commands. See 'help set auth local' for additional options.
radius	Use RADIUS as the authentication type. The RADIUS configuration can be set with 'set auth radius'.
tacacs+	Use TACACS+ as the authentication type. The TACACS+ configuration can be set with 'set auth tacacs[+]'.
Disable	Used to disable a portal. Only telnet may be disabled. To re-enable, select one of the other authentication types.

where <portal type> is a comma separated (only!) list of:

serial	set the front serial port access to the authentication type. This setting is not valid for RADIUS or TACACS+ authentication types.
ssh	enable SSH access for the authentication type
telnet	enable Telnet access for the authentication type
web	enable the webUI to use the authentication type
snmp	Allow snmp to use the authentication type (experimental). This is not valid for RADIUS or TACACS+ authentication types.
all	This is a unique setting in that it will enable all of the above.

**NOTE – Note that only one authentication type may be set at a time.**

This is a 'set' function and the only way to remove a portal assignment from an authentication type is by assigning that to another authentication type. That means that the settings of one type may alter the settings of another type as only one authentication type may be enabled per portal. That means that if you issue:

```
set auth type local ssh
set auth type radius ssh
```

SSH will be using RADIUS authentication, not 'local'.

Examples:

```
set auth type local telnet
set auth type disable telnet
set auth type radius ssh,web
```

Level: Supervisor

#### 4.4.7 get auto

Show the current status of the auto-logoff setting for this session. Default is to automatically log off this port after approximately 5 minutes of inactivity.

Command Syntax:

```
get auto↵
```

#### 4.4.8 set auto

Control the auto-logoff setting for this session. This allows the port to remain active even beyond the 5-minute timeout period of inactivity. This is effective only for this session (not stored). Default is 'on'.

This is useful when combined with 'view realtime' setting to allow monitoring of events.

Command Syntax:

```
set auto [on | off]↵
```

Example:

```
set auto off
```

#### 4.4.9.0 config

Use the *config* command to view, change and select Thunderbolt® PTP GMC configuration.

Command Syntax:

```
config <list/ load / save/ firmware/system> ↵
```

- **config list**                output configuration as a list of 'set' commands
- **config load**              load Thunderbolt® PTP GMC configuration previously dumped
- **config save**               Reconfigure to the factory settings
- **config firmware**          utilities to handle firmware updates and loading
- **config system**            restart or reboot system

**NOTE – Config firmware option is available only at the supervisor level.**

Level: Admin and Supervisor

#### 4.4.9.1 config firmware

Use the *config firmware* command to maintain the firmware versions used by the Thunderbolt® PTP GMC GM200.

Command Syntax:

```
config firmware <list/stage/unstage/update> ↵
```

Additional help on each of the commands is available.

Level: Supervisor

#### 4.4.9.2 config firmware list

Use the *config firmware* command to view the currently available firmware packages on the Thunderbolt® PTP GMC GM200.

Command Syntax:

```
config firmware list <refresh> ↵
```

Where:

*<refresh>* to rescan of the images available on the system

The list will show a unique ID for the firmware and the firmware file name. The ID is to be used to refer to the firmware in the 'config firmware update' command.

Level: Supervisor

#### 4.4.9.3 config firmware stage

Use the *config firmware stage* command to put the firmware into system to allow updating (or rolling back) firmware versions.

Command Syntax:

```
config firmware stage [tftp <ipaddr><fname>] ↵
```

Where:

*tftp* to retrieve the firmware.

Note that the Thunderbolt PTP GMC GM200 is not running a tftp server. The user must have a tftp server, with the firmware desired, available to use this option.

*<ipaddr>* The IP address of the tftp server.

*<fname>* The filename of the update package to load from the server

*unlock* Use this option (by itself) to unlock the staging. This may be necessary in the event that a web page has started the upload process but was abandoned before being complete.

If 'tftp' is not used, then the system will use X-Modem protocol to load the firmware.

*NOTE – X-Modem is available only on serial port connections, and through telnet or SSH connections.*

*NOTE – The firmware package can be updated through Web interface which will be familiar to users.*

Examples include:

```
config firmware unlock ↵  
(unlock an abandoned staging process)
```

```
config firmware stage ↵  
(X-Modem transfer from serial port)
```

```
config firmware stage tftp 10.1.1.1 patchFile.tar.gz ↵  
(tftp transfer of 'patchFile.tar.gz ' from server 10.1.1.1)
```

Level: Supervisor

#### **4.4.9.4 config firmware update**

Use the *config firmware update* command to update the firmware on the Thunderbolt® PTP GMC GM200.

Command Syntax:

```
config firmware update <id> ↵
```

Where:

*<id>*                      One of the IDs as given with the 'config firmware list' command

*NOTE – The firmware update will cause a restart of the system, which will cause a loss of network timing output.*

Level: Supervisor

#### **4.4.9.5 config firmware unstage**

Use the *config firmware unstage* command to remove the firmware load from the Thunderbolt® PTP GMC for use by *config firmware update* command.

Command Syntax:

```
config firmware unstage <id> ↵
```

Where:

*<id>*                      One of the IDs as given with the 'config firmware list' command

*NOTE – After a firmware load is unstaged the <id> values will change so you will need to use 'config firmware list' to view the new firmware load IDs.*

Level: Supervisor

#### 4.4.9.6 config load

Use the *config load* command to reset Thunderbolt® PTP GMC's configuration. This command expects a list of configuration settings as generated by "config list" command.

Command Syntax:

```
config load [ user / factory ] ↵
```

If no options are given this command will present a prompt for an upload as generated by the 'config list' commands.

If one of the options is given, then the appropriate settings will be loaded.

*NOTE – For security reasons, the list command and subsequent upload cannot be used to restore user settings*

*IMPORTANT NOTE! – If the factory settings are loaded then the all users are removed and the 'trimble' user restored*

Level: Admin and Supervisor

#### 4.4.9.7 config list

Use the *config list* command to output Thunderbolt® PTP GMC's configuration as a list of CLI commands.

Command Syntax:

```
config list ↵
```

You can make a backup of GM200's configuration by issuing a list command and using copy and paste in your window to save the configuration to a file on your local PC. You can restore the configuration by opening a CLI session, issue a 'config load' command and then "pasting" the list of commands saved earlier.

*NOTE 1 – For security reasons, the list command and subsequent upload cannot be used to restore user settings*

*NOTE 2 – The list command and subsequent upload cannot be used to restore the network settings.*

Level: Admin and Supervisor

#### 4.4.9.8 config save

Use the *config save* command to save the current settings of the Thunderbolt® PTP GM200 to the user settings.

Command Syntax:

```
config save ↵
```

Level: Admin and Supervisor

#### 4.4.9.9 config system

Use the *config system* command to restart or reboot the system.

Command Syntax:

```
config system <options> ↵
```

Where <options> is one of:

- |          |  |
|----------|--|
| reboot   | completely reboot the system. This performs a hardware reset of the system. This is very similar to the 'restart' option with the only real difference being that the entire system is restarted, which means that all drivers, etc are restarted on the system. |
| debuglog | download a debug file for Trimble engineering. This file will be sent with the Z-Modem protocol. Send the resultant file to Trimble support when requested to aid in debugging of issues.  |

Level: Supervisor

#### 4.4.10 get comm

The *get comm* command retrieves the current communication port settings.

Command Syntax:

```
get comm ↵
```

Level: User, Admin and Supervisor

#### 4.4.11 set comm

The *set comm* command configures the communication port settings.

Command Syntax:

```
set comm [default] [ baud < baud> ] ↵
```

**NOTE – The default must be used by itself and restores the comm settings to their default values. The default baud rate is 115.2kbps-8-N-1**

Where:

<baud>	The baud rate, valid rates are: 9600, 19200, 38400, 57600, 115200 and 230400
--------	---

**NOTE – The setting does not affect the baud rate of the port if there is currently a user logged into that port. The port baud rate will change once the user is logged out.**

Examples include:

```
set comm default ↵  
set comm baud 19200 ↵
```

Level: Admin and Supervisor



#### 4.4.12 get date

The *get date* command retrieves the current system date.

Command Syntax:

```
get date [full] ↵
```

If the option 'full', is given this returns both the date and time.

```
get date full ↵
```

Use the *get date full* command to retrieve the current system date and UTC time. The format of the output is:

```
B d Y [hh:mm:ss]
```

Where:

B	is the full month string
d	is the day of month (00-31)
Y	is the full year, including century
hh:mm:ss	is returned only with the 'full' option

Level: User, Admin and Supervisor

#### 4.4.13 get dlog

The *get dlog* command retrieves the current data logger configuration.

Command Syntax:

```
get dlog ↵
```

Level: User, Admin and Supervisor

#### 4.4.14 set dlog

The *set dlog* command allows for starting or stopping the datalogging process.

Command Syntax:

```
set dlog start [holdover] | stop ↵
```

Where:

start	Start the datalogger, if no holdover option is given then the logging will not perform holdover cycling.
holdover	Reserved, do not use.
stop	Stop the datalogger.

Level: User, Admin and Supervisor

#### 4.4.15 download

The *download* command to download log files from the current system GM200.

Usage:

```
download [ sats | pos | freq ] ↵
```

Options:

sats     Download TEXT logfile of the satellites the receiver has been tracking over time.  
pos     Download TEXT logfile of position information of the receiver over time.  
freq     Download TEXT logfile of the oscillator statistics over time.

#### 4.4.16 get freq

The *get freq* command retrieves the current operating mode of the control system.

Command Syntax:

```
get freq ↵
```

Level: User, Admin and Supervisor

#### 4.4.17 set freq

The *set freq* command sets the current operating mode of the control system. This command is only for test purposes and is not meant to be used in normal operation.

*NOTE: This is not a 'setting' like other commands. The operational mode of the control system is not stored as part of the unit configuration.*

Command Syntax:

```
set freq [halt | hold | lock | resync] ↵
```

Where:

<halt>	Put the control loop into User Halt mode. In this mode the frequency offset is 'frozen' and no computed compensation of the oscillator performance is used.
<hold>	Put the control loop into User Hold mode. In this mode, the frequency offset is compensated with computed oscillator performance. If there is no data available to perform a holdover then this is the same as 'User Halt'.
<lock>	Return the unit to normal operation. This does not command the unit to 'Lock' mode immediately, it merely takes it out of 'User Hold' or 'User Halt' and is not a mechanism to override the operation of the control system.
<resync>	Command the unit to force the output PPS to align with the current reference immediately. Note that this can cause jumps in time.

Example:

*set freq hold*

*set freq lock*

#### 4.4.18 view freq

The *view freq* command displays the current frequency control information. Command

Syntax:

*view freq <stream> ↵*

If the option “stream” is given, then the measurements will be printed at a 1Hz rate for logging. The output stream can be stopped with a Ctrl-C.

Level: User, Admin and Supervisor

#### 4.4.19 get gnss

This command displays the current settings for the GNSS receiver

Command Syntax:

*get gnss ↵*

Level: User, Admin and Supervisor

#### 4.4.20 set gnss

This command allows change to GNSS receiver settings.

Command Syntax:

*set gnss [constellation <c>] [elev <E>] [level <L>] [pdop <P>]  
[adelay <d>] [pos <p>]  
[antenna [on|off]]  
[restart <r>] ↵*

Where:

- |                   |  |
|-------------------|--|
| constellation <c> | Set the current constellation in use by the receiver to <c>, where <c> can be any valid combination of the following, separated by ' ':<br>gps : GPS constellation<br>glo : GLONASS constellation<br>bds : Beidou constellation<br>gal : Galileo constellation<br>qzs : QZSS constellation (forces GPS on) |
| elev <E>          | Set the satellite elevation mask (degrees) to <E>  |
| level <L>         | Set the acquisition/tracking signal level (dBHz) to <L>  |
| pdop <P>          | Set the PDOP mask level to <P>   |
| adelay <d>        | Set the antenna delay for the system. This affects all timing outputs from the system.   |

pos <p>	<p>&lt;d&gt; is in nanoseconds with a range of +/- 50000000 (50ms).</p> <p>Set the receiver position or mode. Where &lt;p&gt; is of the format: {&lt;lat&gt; &lt;lon&gt; &lt;ht&gt;}   auto   survey</p> <p>Where:</p> <p>&lt;lat&gt; and &lt;lon&gt; are in degrees and &lt;ht&gt; in meters (HAE).</p> <p><i>Note that the position will be validated by the receiver for accuracy and, if it is too far out of range (thereby making the timing of the unit inaccurate) the position will be recomputed.</i></p> <p>'auto' sets the unit to not force a user entered position on startup. If the unit has a stored position then it will be used on startup, with the same validation criteria as used for a user entered position.</p> <p>'survey' forces the unit to recompute a surveyed position. The surveyed position will then be used by the system on the next startup (to speed startup). This also forces 'auto' mode.</p>
slength <s>	Set the survey length. This is the number of position fixes that will be averaged. Only
	fixes that match other criteria (PDOP) will be used in the average. Acceptable range is from 60 (1 minute) to 259200 (3 days).
antenna [on off]	Enable/disable the power to the antenna. If power is turned off then no status will be generated, and no antenna alarm conditions are available (they will be cleared).
restart <r>	<p>Restart the receiver using one of the following restart types:</p> <p>cold - data transmitted by satellites cleared then receiver is restarted.</p> <p>Warm - retain satellite data, just restart receiver.</p>

**NOTE – The restart option is available at supervisor level access.**

Example:

```
set gnss constellation gps|bds elev 5 adelay 5000
set gnss pdop 4 elev 10
```

Level: Admin and Supervisor

#### 4.4.21 view gnss

The *view gnss* command displays the current GNSS receiver tracking information.

Command Syntax:

```
view gnss ↵
```

If the option “stream” is given, then the measurements will be printed at a 1Hz rate for logging. The output stream can be stopped with a Ctrl-C.

Examples include:

```
view gnss ↵
view gnss stream ↵
```

Level: User, Admin and Supervisor

#### 4.4.22 help

The help command allows to get an overview of the GM200 (help intro), to get a list of the available commands (help commands), or to get a description of an individual command.

Help is available for common tasks (HOWTOs), and to answer event or condition related questions (WHATIFs).

Examples include:

*help intro*

*help commands*

*help set*

#### 4.4.23 howto

The CLI command *howto* provides a list of frequently used task and help on the related CLI options.

Command Syntax:

*help howto <n> ↵*

Where <n> is number 1 to 12.

1. How to get current Alarm status
2. How to set alarm number 2 with setTime as 2 and clearTime as 1?
3. How to enable Ethernet port 0/1
4. How to set IP address of 192.168.0.9 on Ethernet 0 port?
5. How to set BNC output of even?
6. How to set periodic output of period 2 and value 1?
7. How to set serial port baud rate to 19200bps?
8. How to add a new user called trimble1 with an access level of user?
9. How to delete an existing user Trimble?
10. How to change user password?
11. How to restore factory default settings?
12. How to reboot the system?

Examples include:

*help howto 4*

Level: User, Admin and Supervisor

#### 4.4.24 *get input*

The *get input* command generates a list of the frequency control input candidates.

Command Syntax:

```
get input <input type>↵
```

Where:

<input type> is from the list:

GNSS	Use the GNSS receiver as source for time/frequency
sync0	SyncE input on interface 0 is valid source for frequency
sync1	SyncE input on interface 1 is valid source for frequency
ptp0	PTP input on interface 0 is valid source for time/frequency
ptp1	PTP input on interface 1 is valid source for time/frequency

If no parameters are passed the candidacy of all inputs are returned.

Examples include:

```
get input ↵
```

```
get input gnss ↵
```

Level: User, Admin and Supervisor

#### 4.4.25 *set input*

The *set input* command allows setting of the frequency control reference input candidates. You can avoid the unit going into holdover due to the loss of an input as it will be able to select from other input candidates in the event of the loss of an input.

Command Syntax:

```
set input [ <input type> ] {enable/disable}↵
```

Where:

<input type> is from the list:

GNSS*	Use the GNSS receiver as source for time/frequency
sync0*	Use the SyncE input on interface 0 as source for frequency
sync1	Use the SyncE input on interface 1 as source for frequency
ptp0*	Use the PTP input on interface 0 as source. The PTP setting for interface 0 must be set to slave to be usable as an input source.
ptp1	Use the PTP input on interface 1 as source. The PTP setting for interface 1 must be set to slave to be usable as an input source.
enable	Enable the <input type>(s) as valid inputs. If no <input type> is given then the entries marked with '*' above are enabled
disable	Disable the <input type>(s) as usable inputs. If no <input type> is given then all inputs are disabled

The order of preference of the input selection is:

GNSS  
sync0  
sync1  
ptp0 | ptp1

*NOTE – Only one of the sync0 and sync1 inputs can be enabled at a time. If both are enabled then sync0 is automatically disabled.*

*NOTE – Only one of the ptp0 and ptp1 inputs can be enabled at a time. If both are enabled then ptp1 is automatically disabled.*

Examples include:

```
set input sync0 enable ↵  
set input sync1 enable ↵  
set input GNSS ptp0 enable ↵  
set input enable ↵
```

The last example would enable all '\*' inputs as valid candidates.

Level: Admin and Supervisor

#### **4.4.26 view input**

The *view input* command displays the statistics on the current input sources for frequency control.

Command Syntax:

```
view input <gnss> ↵
```

If no parameters are passed the statistics for all currently enabled input sources is returned Examples include:

```
view input ↵  
view input gnss ↵
```

Level: User, Admin and Supervisor

#### 4.4.27 view logs

The *view logs* command displays the system messages. Each message displayed will include the data and time of the event as well as short description of the event itself.

Command Syntax:

```
view logs xxxx<head/tail/all> <-n X> ↵
```

Where:

When xxxx is following:

<alarm>	View only alarm log information
<freq>	View only Time/Frequency control log information
<gnss>	View only GNSS log information
<sync>	View only SyncE log information
<cfg>	View only configuration log information
<cli>	View only CLI log information
<error>	View only error conditions in the log information.
<warning>	View only warning conditions, these are events that may be significant, but are generated by the system in normal operation.
<notice>	notice log information, these are normal but, significant conditions.
<info>	View only informational log information. These are normal but insignificant conditions
<head>	View the beginning of the log (default is tail)
<tail>	View the end of the log (latest)
<-n X>	View only a count of "X" from the log (default is 20)

Examples include:

```
view logs -n 10 gnss head view logs  
clear ↵
```

Level: Admin and Supervisor

#### 4.4.28 get network

This command displays the current network interface status.

Command Syntax:

```
get network [interface] ↵
```

Where:

<Interface> (optional) is a network interface such as eth0, eth1 or eth2.  
If no interface is specified all are displayed.

Level: User, Admin and Supervisor



#### 4.4.29 set network

The *set network* command configures the network connection. This is a multi-option command.

Command Syntax:

```
set network [<iface>] [default] | [disable] | [<ip>] [<vlan>] [sync <sop>]
```

**NOTE – The default must be used by itself and restores the network settings to their default values.**

Where:

<iface>	Network interface definition, where <iface> is one of:
eth0	Network interface Ethernet 0 (timing port)
eth1	Network interface Ethernet 1 (timing port)
eth2	Network interface Ethernet 2 (management port)

The iface may indicate a VLAN with the form:

<eth0|eth1|eth2|>[.vlanId]

default	Restore network setting(s) to default value. This must be used with no other setting options.
disable	Completely disable this interface. This stops all activity from this interface. The interface is enabled by commanding 'enable' or by setting any DHCP or IPAddr for this interface.
enable	Bring a previously disabled interface to the active, or 'up' condition. Note that, if the interface does not have valid parameters set the interface may still not be usable. Enabling the interface can also be done by setting any DHCP or IPAddr for this interface.
<ip>	IP configuration information for this port. This has the following format: [dhcp   dhcp6   slaac] [addr <i>][mask <m>][gateway <g>][bcast <bm>] [addr6 <i6>]

Where:

dhcp	Sets to port to utilize Dynamic IP Address (Dynamic Host Configuration Protocol) for IPv4
dhcp6	Sets the port to utilized Dynamic IP Address (Dynamic Host Configuration Protocol) for IPv6. Note that you can have DHCP for IPv6 and static addresses for IPv4 (and vice-verse).
slaac	Sets the port to utilize the SLAAC (Stateless Address Auto-configuration) IPv6 address assignment.
<i>	IP address of the unit, in xxx.xxx.xxx.xxx format
<m>	Netmask for the unit, in xxx.xxx.xxx.xxx format
<g>	Gateway/Router IP address for the unit, in xxx.xxx.xxx.xxx format
<bm>	Broadcast mask for the unit, in xxx.xxx.xx.xxx format
<i6>	IPv6 address for the unit. This must be in CIDR format which is the IPv6 address with a /mask value. If no /mask value is given the default mask size of 128-bits is assumed.

<vlan>	VLAN configuration parameters, valid only for non-management, non- vlan, ports, of the
--------	--

format:  
[vlan <vl>] [prio <p>].

Where:

- <vl>      Comma separated list of VLAN IDs to use as the current VLAN list. Note that this list replaces any other VLAN list that is currently in use. To disable VLAN on the port use the special ID of '-1'. This will delete all VLANs associated with this port. Value VLAN ID numbers are from 0-4094, with the addition of '-1' to disable VLAN entirely.
- prio      Set the priority byte for the VLAN to <p>, where <p> can be a number between 0 (lowest) to 7 (highest). This priority applies to all VLAN connections.
- <sop>    Set the syncE options for this interface. This is only valid for non-management ports.
- Where <sop>:
- off : disable syncE operation for this port
  - output: this port is a syncE output. This port cannot be used as an input source for the loop control
  - input : this port is a syncE input. This makes it valid to be selected as an input source for the loop control.
- NOTE: Input is only valid for non-SFP ports.

NOTE: SyncE is not supported by all SFP types. SyncE output can only be used on optical SFPs, as well as the following electrical SFPs: Belfuse SFP-1GBT-09

Examples include:

```
set network eth0 addr 192.168.0.9 mask 255.255.255.0 bcast 192.168.0.255
set network eth0 gateway 192.168.0.1
set network eth0 addr6 dead:beef::/24
set network eth1 dhcp vlan 100,200,300
set network eth1 vlan 200,300
set network eth1.200 addr 192.168.1.12 mask 255.255.255.0 bcast 192.168.0.255
set network eth0 vlan -1
set network eth0 syncE output
set network eth1 syncE input
```

Level: Admin and Supervisor

#### 4.4.30 view network

The *view network* command allows user to view current network interfaces stats. Command

Syntax:

```
view network <eth0/eth1/eth2> ↵
```

If no interface name is given, then statistics for all interfaces are presented. Examples

include:

```
view network ↵
view network eth1 ↵
```

Level: User, Admin and Supervisor

#### 4.4.31 *get ntp*

The *get ntp* command allows user to display current NTP broadcast setting for eth0 or eth1 ports. If no option given then all ports are returned. If you desire to view the current NTP statistics then use 'view ntp'.

If NTP broadcast is enabled then this command will return the broadcast settings, otherwise it will return 'broadcast disabled'.

Command syntax:

```
get ntp <eth0 | eth1 | iff> ↵
```

Where:

<iff> If encryption is enabled then this will present the IFF certificate information to provide to the clients. This is ONLY available if you are connected through a secure connection (SSH or local serial port). The information presented should be copied from the terminal into a file, named to the filename indicated in the information and then that file distributed, securely, to your clients. (This option is available only to supervisor level user)

Examples include

```
get ntp ↵
```

```
get ntp eth0 ↵ get ntp iff ↵
```

Level: User, Admin and Supervisor

#### 4.4.32 *set ntp*

The *set ntp* command configures the NTP broadcast information.

Command syntax:

```
set ntp [<eth0|eth1>] <options> ↵
```

The port information (eth0|eth1) must be supplied for options marked with an '\*'. They are optional on other commands, unless noted.

where <options>:-

disable	Disable NTP for the given port. This stops all NTP traffic for the port.
enable	Enable NTP for the given port. This starts NTP traffic for the port.
default	Restore default settings for the port. If supplied. If no port supplied then all ports are affected. This option may not be used with any other options.
*bcast <ip>   off	Set broadcasting on/off for the port. If an <ip> address is given, it must be in the same domain as the domain of the port. This is to keep from broadcasting to the whole internet.
*interval <n>	Set the broadcast time interval to <n> where <n> is the broadcast time interval, in seconds to the power of two. For example, a minpoll value of 4

	sets the broadcast time interval to 2 <sup>4</sup> or 16 seconds. Allowable values are from 4 (16 sec) to 17 (36.4 hours).
*ttl <t>	Set the time-to-live hops to <t>. Allowable values are from 1 to 7, or '-'. Note that a value of '-' sets the default maximum hop value allowed.
encrypt on off	Set the encryption of the NTP messages on/off.
host (hn)	Set the host name for the encryption certificate to <hn>. Only the characters '-', '_', 0-9, A-Z, and a-z are valid within the host name. The max size of the host name is 32 characters.
group <gn>	Set the group name for the encryption certificate to <gn>. Only the characters '-', '_', 0-9, A-Z, and a-z are valid within the group name. The max size of the group name is 32 characters
peer <pl>	Set the peer list to <pl>. <pl> may be a comma separated list of up to 4 peers to use. This list must contain no spaces and may be made up of a mixture of IPv4, IPv6 or valid hostnames. The other allowable <pl> option is '-', which disables peering (regardless of where it is in the list).
iff	This will renew the IFF certificate for NTP certification. This should be done approximately every 30 days to keep the certificate valid

Examples include:

```
set ntp eth1 bcast 10.1.140.225 interval 4 ↵
set ntp eth0 encrypt on host Trimble group MyGroup1 ↵
set ntp peer 192.168.0.80,10.1.140.80,time.nist.gov ↵
```

**Note - Any changes to NTP configurations requires the shutting down and restarting of NTP.**

**Note - IP address changes (as through DHCP) are not service disrupting to NTP.**

Level: Admin and Supervisor

#### 4.4.33 view ntp

The *view ntp* command allows user to display current NTP stats. Command

Syntax:

```
view ntp [stream] ↵
```

If the option “stream” is given, then the measurements will be printed at a 1Hz rate for logging. The output stream can be stopped with a Ctrl-C.

Examples include:

```
view ntp stream ↵
```

Level: User, Admin and Supervisor

#### 4.4.34 get output

The *get output* command returns the current output settings for the system. If no options given, then the all output settings are returned.

Command Syntax:

```
get output [<sel>] ↵
```

Where <sel> may be:

bnc    Get output settings for BNC output only

Examples include:

```
get output bnc
```

```
get output
```

Level: Admin and Supervisor

#### 4.4.35 set output

The *set output* command allows setting of the output signal(s) for the system. If no output signal selection is given, then all outputs are changed.

If an output is not valid for the given signal, then that output is turned off.

The 'invert' (or 'falling') modifier inverts the active state of the output. This affects all levels for the given signal. That means that if the output is set 'high' for instance the 'invert' option changes the output to 'low'. The “falling” modifier is an edge trigger.

*Note that this is a modifier and cannot be used alone.*

The 'width' option sets the pulse width for both BNC and digital.

*Note that the 'periodic' output has its own width, set with the 'set periodic' command.*

The 'delay' option allows setting of a delay for the timing. This is used to compensate for cable and other delays. The <d> value is in nanoseconds.

Command Syntax:

```
set output [<sel>]  
          <off|low|high|pps|even|10mhz|periodic> [invert|falling]  
          [width <w>] [delay <d>] ↵
```

Where <sel> may be:

bnc    Change settings for the BNC output signal.

Examples include:

```
set output bnc even ↵
```

```
set output pps ↵
```

Level: Admin and Supervisor

#### 4.4.36 *get periodic*

The *get periodic* command returns the current settings for the periodic output selection

Command Syntax:

```
get periodic↵
```

Level: User, Admin and Supervisor

#### 4.4.37 *set periodic*

The *set periodic* command allows setting of the periodic output.

Command Syntax:

```
set periodic [period <p>] [value <v>] [width <w>]
```

Where:

- period <p>     set the period for the output in seconds.  
                 The smallest value is '2' (otherwise use pps). The largest value is 100000.
- value <v>     set the value for the second count to generate the pulse. This can go from 0 to <p> - 1.
- width <w>     set the pulse width for the periodic output in ns. Range is 100ns to 5E8 (1/2 second)

Examples include:

```
set periodic period 2 value 1↵
```

*The above would set a pulse output every 2 seconds, on the odd pulse.*

Level: Admin and Supervisor

#### 4.4.38 *ping*

The *ping* command allows validation of a route to another IP system on the network.

Command Syntax:

```
ping [eth0|eth1|eth2] <ipaddr>↵
```

Where:

- <eth0>        Network interface Ethernet 0
- <eth1>        Network interface Ethernet 1
- <eth2>        Network interface Ethernet 2
- <ipaddr>      Valid IPv4 address of the unit, in xxx.xxx.xxx.xxx format

**NOTE** – *If no port is given then the management port is assumed. The ports may be on separate physical networks, make sure the network interface corresponding to the device pinged is used.*

Level: User, Admin and Supervisor

#### 4.4.39 ping6

The *ping6* command allows validation of a route to another IP system on the network.

Command Syntax:

```
ping6 [eth0|eth1|eth2] <ipaddr>↵
```

Where:

<eth0>	Network interface Ethernet 0
<eth1>	Network interface Ethernet 1
<eth2>	Network interface Ethernet 2
<ipaddr>	IPv6 address of the unit without any mask information

*NOTE – If no port is given then the management port is assumed. The ports may be on separate physical networks, make sure the network interface corresponding to the device pinged is used.*

Level: User, Admin and Supervisor

#### 4.4.40 view pos

The *view pos* displays the current receiver position information. Command

Syntax:

```
view pos [stream]↵
```

Where:

<stream>	View a continuous stream of frequency control data
----------	--

Level: User, Admin and Supervisor

#### 4.4.41 view prodconf

The *view prodconf* displays the production configuration information that was set by Trimble manufacturing during production.

Command Syntax:

```
view prodconf↵
```

Examples include:

```
view prodconf↵
```

**Returns:** Serial number

Build date

Premium bits (*this option is available only to supervisor level user*)

Product ID Hardware ID

Extended S/N

Level: User, Admin and Supervisor

#### 4.4.42 *get ptp*

The *get ptp* command returns the current user settable PTP settings. If a valid profile has been selected then this command will only return the parameters that are outside the default settings for that profile.

If you desire to view the current PTP operation then use 'view ptp'.

Command Syntax:

```
get ptp <eth0 / eth1>↵
```

If no option is given then all port settings are returned.

Level: User, Admin and Supervisor

#### 4.4.43 *set ptp*

The *set ptp* command allows setting of the PTP interface.

Command Syntax:

```
set ptp <eth0 / eth 1> <options>↵
```

Examples include:

```
set ptp <options>↵  
set ptp eth0 <options>↵
```

Where options are:

default	Restore default settings for the used profile
disable	Disable this PTP port. PTP on the interface must be disabled before any configuration changes are allowed.
enable	Enable this PTP port. By default, all ports are enabled
mode <m>	Set the current clock mode. <m> may be one of: master       - this port is to operate as a GM output. Slave        - this port is to operate as a slave clock, making this available to be selected as an input. Note that for this to be used also requires the port is set as a selectable input with the 'set input' command.
profile <p>	Set the current profile, <p> may be one of: g.8275:       Select the G8275.1 profile g.8275.1:     Select the G8275.1 profile g.8275.2:     Select the G.8275.2 profile g.8265:       Select the G.8265.1 profile, with Option-II clock class output g.8265-i:     Select the G.8265.1 profile, with Option-I clock class output 1588:         Select IEEE-1588 operational defaults power:        Select the Power (C37.238 2011) profile. smpte:        Select the SMPTE (ST-2059-2) profile.



telecom: Select the IEEE-1588 Telecom v2 profile .  
 enterprise: Select the enterprise (prelim) profile.  
 dscp <d> Set the DSCP (Differentiated Services Code Point) field to <d> for the PTP traffic generated from this port. This may be disabled (default) by either setting <d> to '0' or '-'.

The following options allow altering profiles. Note that the ability to alter profile settings is determined by the profile selected. In addition, the profile may limit the allowable values.

ai <n> Set the announce interval.

ar <n> Set the announce receipt timeout. The number of announce intervals allowed to pass without the receipt of an announce message.

class <n> Set the clock class.

df <n> Set the duration field (for unicast grant messages).  
 Range: dependent on profile, absolute range 10 - 1000.  
 Most profiles have a default of 300.

dm <a> Set the delay mechanism, may be one of E2E or P2P.

domain <n> Set the domain number for the profile.

dr <n> Set the delay request interval.

pdr <n> Set the pdelay request interval (only some profiles)

grantor <g> For PTP unicast input profiles only: this allows setting the unicast Grandmasters to use as the 'grantor' for the requests. <g> may be a comma separated list of up to 3 GMs to use. This list must contain no spaces and be made up of the same transport types (i.e. no mixing of IPv6 and IPv4 addresses).

ipmode <a> Set the IP Mode of operation. May be one of:

- multi set multicast mode
- uni set unicast mode
- hybrid set Hybrid mode; allow multicast for GM announcement, but time information delivered through unicast requests from slave clocks.

pri1 <n> Set the priority 1 value. This must be a number from 0 to 255.

pri2 <n> Set the priority 2 value. This must be a number from 0 to 255.

si <n> Set the sync interval.

sm <n> Set the step mode. 1 -> one-step, 2 -> two-step.

transport <a> Set the transport mechanism. May be one of:

- IPv4 IPv4 transport
- IPv6 IPv6 transport
- Eth 802.3 transport

ttl <t> Set the multicast ttl value for the transmission. This setting is only available if the profile selected allows multicast. Any valid TTL may be set (1-255) but, realistically, the user should limit their value to be between 1 and 6. Please be aware that a profile may limit the range even further than the 1-6 values.

**NOTE: You must disable PTP on the port you are making operational changes on before any changes are allowed.**

Examples:

```
set ptp eth1 profile g8275 domain 30↵
```

**NOTE – The user must disable PTP on the port where the operational changes are required.**

Level: Admin and Supervisor

#### **4.4.44 view ptp**

The *view ptp* displays the current PTP stats. Command

Syntax:

```
view ptp<eth0/eth1><phase/stream>↵
```

Examples include:

```
get ptp eth0↵
```

If the option 'phase' is used, then only the phase offset between the PTP hardware clock and the system clock is returned (for either or both ports).

When a unicast PTP profile is configured, this command allows to have a list of all PTP slaves taking synchronization from GM-200.

Level: User, Admin and Supervisor

#### **4.4.45 quit**

The *quit* command is use to end a CLI session. You can use either "quit" or "q" to end the session.

Command Syntax:

```
quit ↵
```

```
q ↵
```

Level: User, Admin and Supervisor

#### 4.4.46 *view realtime*

Show/Change the current level of the messages display. This command allows changing of the realtime event message level for this session (not stored).

Default is level 1 (alarms only).

Command Syntax:

```
view realtime [<level>]↵
```

Where the <level> value means:

- 0      No events will be shown in realtime
- 1      Only alarm events will be shown in realtime (default)
- 2      All events will be shown in realtime

Examples include:

```
view realtime↵
```

```
view realtime 2↵
```

#### 4.4.47 *help set*

The *help set* command allow user to set system parameters. Command

Syntax:

```
help set <alarm /comm /gnss /input /network /output /ptp/ user> ↵
```

Level: Admin and Supervisor

#### 4.4.48 *get snmp*

The *get snmp* command returns the current SNMP settings. SNMP needs to be configured for trap generation and to set the SNMP community strings.

Command Syntax:

```
get snmp ↵
```

Level: User, Admin and Supervisor

#### 4.4.49 set snmp

The *set snmp* command allows configuring the SNMP trap information.

Command Syntax:

```
set snmp <options>↵
```

Where <options> are:

enable	enable SNMP with the current options
disable	disable SNMP operation
version <v>	set the SNMP version type, only 'v2c' is currently usable
host <ip>	set the IP address of the unit to receive the traps
port <p>	set the port number SNMP
community <c>	set the community string ID for SNMP
readonly <r>	Set the read-only community string ID to <r>.
readwrite <w>	Set the read-write community string ID to <w>.
gentraps	Test generation of all alarm traps (set & clear) that can be generated by the system. No functionality is affected, only the traps are generated. This command cannot be used with any other commands.

Examples include:

```
set snmp port 162 host 192.168.1.4↵
```

Level: Admin and Supervisor

#### 4.4.50 view summary

The *view summary* command displays a summary of the frequency control, GNSS tracking status and receiver positioning information.

Command Syntax:

```
view summary ↵
```

Level: User, Admin and Supervisor

#### 4.4.51 view stream

The *view stream* command displays a continuous stream of system performance data. This includes frequency control data as well as GNSS tracking information.

Command Syntax:

```
view stream ↵
```

Level: Supervisor

#### 4.4.52 *get syslog*

This command displays the current settings for the syslog server connection configuration. There are no options for this command.

Command Syntax:

```
get syslog ↵
```

Level: User, Admin and Supervisor

#### 4.4.53 *set syslog*

The *set syslog* command allows user to configure the syslog server connection. By default this connection is disabled..

Command Syntax:

```
set syslog [enable/disable] [addr <ip>] [port <port>] ↵
```

Where:

enable	Enable the sending of syslog messages to the syslog server. Note that until the address is configured with the address of a valid syslog server no messages will be sent, regardless of whether the service is enabled or not.
disable	Disable the sending of syslog messages to the syslog server. This has no effect on any other settings.
<ip>	Valid IP address for the syslog server. This may be either an IPv4 type address, or an IPv6 type address. Only one address type at a time is supported. The corresponding 'source' information in the syslog message will be either the IPv4, or IPv6, address of the GM, depending on the format of this setting.
<port>	Valid port for the syslog server. Setting of this value allows deviation from the syslog specification. The default port is 514.

Examples include:

```
set syslog enable addr 192.168.2.100↵
```

```
set syslog disable↵
```

```
set syslog port 4022↵
```

The last example would set the syslog port to a non-standard port for the protocol. This should be used only in controlled environments.

Level: Supervisor

#### 4.4.54 *view temp*

The *view temp* command displays the current system temperature in °C.

Command Syntax:

```
view temp ↵
```

Level: User, Admin and Supervisor

#### 4.4.55 *get time*

This command retrieves the current system UTC time.

Command Syntax:

```
get time [full] ↵
```

If the option 'full', is given this returns both the date and time.

```
get time full ↵
```

Use the *get time full* command to retrieve the current system date and UTC time. The format of the output is:

```
B d Y <hh:mm:ss>
```

Where:

B	is the full month string
d	is the day of month (00-31)
Y	is the full year, including century
hh:mm:ss	is the current UTC hour, minute and second

Level: User, Admin and Supervisor

#### 4.4.56 *view uptime*

The *view uptime* command displays the current 'up-time' of the system, which is how long the timing system has been operational.

This command takes no options.

Command Syntax:

```
view uptime ↵
```

Level: User, Admin and Supervisor

#### 4.4.57 get user

This command retrieves the current user names, access levels and email addresses for users that are at, or below your, access level.

Command Syntax:

```
get user ↵
```

Level: User, Admin and Supervisor

#### 4.4.58 set user

The *set user* command allows changing user configuration.

Command Syntax:

```
set user <adduser / deluser / level / passwd | email | logout>↵
```

Where:

adduser <uname> <level>	Add a new user, named <uname>, with access level <level>. <uname> can contain only letters and numbers, no spaces or punctuation is allowed. If the user already exists, no action is taken. <level> can be one of: user : this level can only view status and configuration, no changes to configuration. admin : all functions of 'user' with added ability to change most configuration settings. super : all functions of 'admin' with added ability to edit the user table.
deluser <uname>	Delete a user. You cannot delete yourself. If the user does not exist, an error is returned.
level <uname> <level>	Change the access level for a user. See 'adduser' for descriptions of levels
passwd	Change the password. If you are changing your own password then you will be queried for your old password first. Only supervisors can change someone else's password. This can accept a username and, if one is given, you can change the password of the user. You will not be prompted for their old password. Note that a blank password is not allowed.
email [<uname>] <email>	Change the email address for user. You will be queried for your password to allow changes. If no <uname> is given then the current user is assumed. Only supervisors can use the optional '<uname>' parameter. This can accept a username and, if one given, you can change the email address of the user.
logout [options]	Log out the user with the given option selections. Please see 'help set user logout' for information about the options.

Level: Supervisor

#### 4.4.59 set user logout

The *set user logout* command allows the Thunderbolt PTP GMC GM200 to log users out of the system. Users may log in through various methods on the system, this command allows logging out users with varying selection options.

Command Syntax:

```
set user logout [name (n)] [sid(s)] [service(svc)] ↵
```

Where:

- <n>            The name of the user. Logged in users with the name <n> will be logged out. This will affect all services and sessions.
- <s>            The session ID to log out. Users logged in with this session ID will be logged out. This limits the logout to only a single entry since session ID's are unique. The session ID can be found using the 'view user' command.
- <svc>        The service name to log out. All users connected to this service type will be logged out. This can affect more than one logged in user; for instance if a user has multiple logins from the same IP address this will log out all of the sessions. Note that users with the same name logged in on a different service will not be affected.

Examples:

```
set user logout sid 4  
set user logout service 10.1.140.111  
set user logout name trimble service 10.1.140.111
```

In the above examples, the first would log out a single user session.  
The second example logs out all users connected from a specific IP address.  
The third example will only log out a certain user, logged in from a specific IP address

Level: Supervisor

#### 4.4.60 view user

The *view user* command retrieves the list of currently logged-in user that are at, or below the current access level.

Command Syntax:

```
view user ↵
```

Level: User, Admin and Supervisor



#### 4.4.61 view version

The *view version* command displays the current versioning information for the product..

Command Syntax:

```
view version <hardware|gnss>↵
```

Where:

<hardware>	View the hardware version of the Thunderbolt PTP GMC
<gnss>	View only the GNSS version

Examples include:

```
view version↵  
view version hardware↵
```

Level: User, Admin and Supervisor

#### 4.4.62.0 view

The *view* command allows seeing both the current system status and system level operational information

Command Syntax:

```
help view <X>↵
```

Where <X> can be:

access	View access level for logged in user
alarm	View currently active alarms on the system
dlog	View system data logging information
freq	View current frequency control information
gnss	View current GNSS tracking status
input	View statistics for input sources
logs	View system message log data
network	View network statistics
ntp	View current NTP stats
realtime	Configure the messages shown on this port
ptp	View current PTP stats
pos	View current receiver position information
stream	View a continuous stream of frequency control data
summary	View the frequency, GNSS and position information with one option.
temp	View the current system temperature.
uptime	View the current 'up-time' of the system.
user	View the current logged-in users
version	View the version information for the unit.

prodconf      View the production configuration information

Examples include:

view  
view gnss  
view logs  
view dlog

**NOTE – Some view options like logs, stream are visible to admin and/or supervisor levels.**

Level: User, Admin and Supervisor

#### **4.4.62.1 view dlog**

Use the view dlog command to display collected data from the datalogger

Usage: view dlog gnss

Usage: view dlog pos

Usage: view dlog freq

#### **4.4.62.2 view gnss stream**

View the current GNSS receiver tracking information as a continuous streaming output. The streaming may be stopped by pressing one of the following keys on your terminal:

ctrl-C, 'q', 'Q', 'x' or 'X'.

#### **4.4.63 help whatif**

The *whatif* command gives some information about scenarios you may encounter and how to recover from those.

Command Syntax:

*help whatif ↵*

##### **1) You have an FPGA-Load-Bad alarm**

This is an indication of an out-of-date FPGA load. This can be remedied by a supervisor level person applying a hardware update load to the system. The supervisor can refer to the '*config firmware*' section for more information.

##### **2) You have a PTP-System-Bad alarm**

This is an indication that the PTP system on one, or both, of the Ethernet ports was unable to start. This is usually due to a port not being functional. The '*get network*' information can be used to get information about the status of the network connections. If a port is unused then an admin can change the PTP operation on that port to disable the PTP operation, which will clear the alarm.

Level: User, Admin and Supervisor

## 4.5 List of “How to” help topics

The howto command provide a list of frequently used task and help on the related CLI options.

The list of frequently used tasks is the following

1. How to get current Alarm status
2. How to set alarm of level major, alarm number 2 with setTime as 2 and clearTime as 1?
3. How to enable Ethernet port 0/1
4. How to set ip address of 192.168.0.9 on ethernet 0 port?
5. How to set bnc output of even?
6. How to set periodic output of period 2 and value 1?
7. How to set serial port baud rate to 19200bps?
8. How to add a new user called trimble1 with an access level of user?
9. How to delete an existing user trimble?
10. How to change user password?
11. How to restore factory default settings?
12. How to reboot the system?

Command format:

```
help howto <n>
```

Where: <n> is one of the above topic numbers.

For example,

```
>  
> help howto 1  
How to get current Alarm status:  
  
get alarm  
  
>
```

### 4.5.1 How to get current Alarm status?

```
get alarm
```

### 4.5.2 How to set alarm of level major, alarm number 2 with setTime as 2 and clearTime as 1?

*NOTE: This is only possible from an admin (or higher) access level*

```
set alarm 2 maj 2 1
```

### 4.5.3 How to disable Ethernet port 0/1?

*NOTE: This is only possible from an admin (or higher) access level*

```
set network eth0 disable  
set network eth1 disable
```

#### **4.5.4 How to set ip address of 192.168.0.9, and also set a netmask and a gateway address on ethernet 0 port?**

*NOTE: This is only possible from an admin (or higher) access level*

```
set network eth0 addr 192.168.0.9 netmask 255.255.255.0 gateway 192.168.0.1
```

#### **4.5.5 How to set bnc output to even?**

*NOTE: This is only possible from an admin (or higher) access level*

```
set output bnc even
```

#### **4.5.6 How to set periodic output of period 2 and value 1?**

*NOTE: This is only possible from an admin (or higher) access level*

```
set periodic period 2 value 1
```

#### **4.5.7 How to set serial port baud rate to 19200bps?**

*NOTE: This is only possible from an admin (or higher) access level*

```
set comm baud 19200
```

#### **4.5.8 How to add a new user called trimble1 with an access level of user?**

*NOTE: This is only possible from a supervisor access level*

```
set user adduser trimble1 user
```

#### **4.5.9 How to delete an existing user trimble?**

*NOTE: This is only possible from a supervisor access level*

```
set user deluser trimble
```

#### **4.5.10 How to change user password?**

```
set user passwd <new_passwd>
```

#### **4.5.11 How to restore factory default settings?**

*NOTE: This is only available from an admin (or higher) access level*

```
config load factory
```

#### **4.5.12 How to reboot the system?**

*NOTE: This is only available from a supervisor access level*

```
config system reboot
```

## 4.6 List of “What if” help topics

This section gives some information about some scenarios, you may encounter and how to recover from those.

### *4.6.1 What if you have an FPGA-Load-Bad alarm*

This is an indication of an out-of-date FPGA load. A supervisor level person applying a hardware update load to the system can remedy this. The supervisor can refer to the '**config firmware**' section for more information.

### *4.6.2 What if you have a PTP-System-Bad alarm*

This is an indication that the PTP system on one, or both, of the ethernet ports was unable to be started. This is usually due to a port not being functional. The '**get network**' information can be used to get information about the current status of the network connections. If a port is known to be unused then an admin can change the PTP operation on that port to disable the PTP operation, which will clear the alarm.



## Chapter 5: Web Interface

In this chapter:

[Configuration Pages](#)

[Status Pages](#)

This chapter provides explanation on the web interface of Thunderbolt® PTP Grandmaster Clock

## 5.1 Home Page


Launch a web browser and open a connection to Thunderbolt® PTP Grandmaster Clock GM-200 by entering the URL that specifies the IP address.

<http://192.168.2.250>

Web access is permitted only through Ethernet port-2. The default IP Address for Ethernet port-2 is 192.168.2.250.

**NOTE** – Trimble recommends using Google Chrome browser for better rendering of Thunderbolt® PTP Grandmaster Clock GM-200 web pages.

Entering the IP address will launch the main or home page.

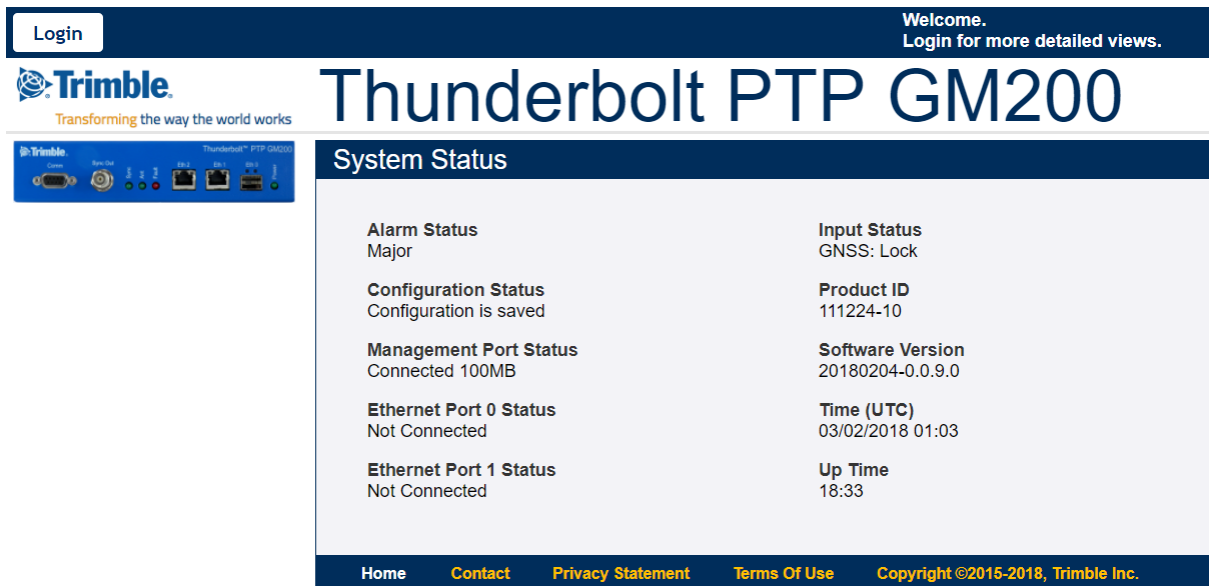

The main page will display a brief status of the Thunderbolt® PTP GMC. The components of this page are:

- |                                 |  |
|---------------------------------|--|
| - <b>Alarm Status:</b>          | Shows the list of active alarms                      |
| - <b>Input Status</b>           | Shows the input reference of GM200                   |
| - <b>Configuration Status</b>   | Shows the status of the current configuration saved  |
| - <b>Product ID</b>             | Shows the Trimble part number of GM200               |
| - <b>Management Port Status</b> | Shows the status of the Management Ethernet port     |
| - <b>Software Version</b>       | Displays the current firmware version on the unit    |
| - <b>Time (UTC)</b>             | Displays the time in UTC format                      |
| - <b>Up Time</b>                | Displays how long the unit is powered on.            |
| - <b>Ethernet Port 0 Status</b> | Displays the status of PTP/NTP/SnycE Ethernet Port 0 |
| - <b>Ethernet Port 1 Status</b> | Displays the status of PTP/NTP/SnycE Ethernet Port 1 |

Log in to the Thunderbolt® PTP GMC GM200 to view or change system parameters. The **login** option is available at the top left of main landing page.

### Refresh Rate

The main page is refreshed at a rate of 1 second.




## 5.2 Login Page

Use the Thunderbolt® PTP GMC GM200 Login page to view system status. The login page requires a valid username and password.

The default users are:

- **Username:** trimble
- **Password:** trimble
- **Access level:** *User*
  
- **Username:** trimbleadmin
- **Password:** trimbleadmin
- **Access level:** *Admin*
  
- **Username:** trimblesuper
- **Password:** trimblesuper
- **Access level:** *Super*

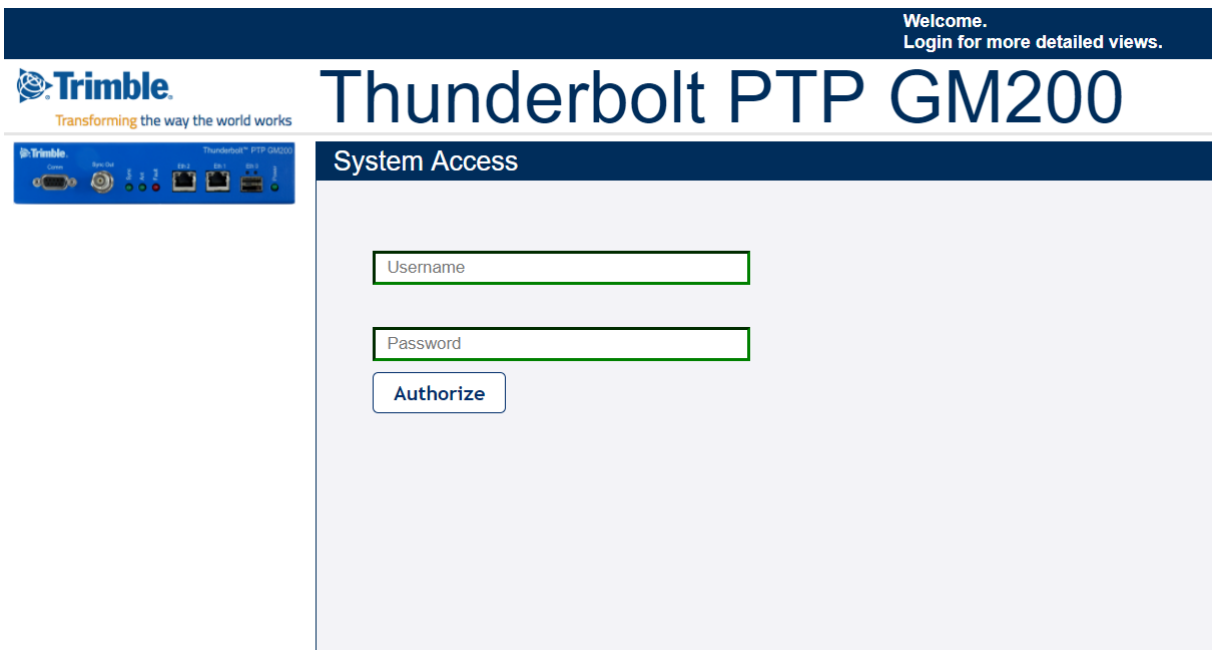

The screenshot shows the login interface for the Thunderbolt PTP GM200. At the top, a dark blue banner contains the text "Welcome. Login for more detailed views." on the right. Below this, the Trimble logo and tagline "Transforming the way the world works" are on the left, and the title "Thunderbolt PTP GM200" is in large blue font in the center. A small image of the device is shown below the logo. The main section is titled "System Access" and contains two input fields: "Username" and "Password", both with green borders. Below these fields is a blue button labeled "Authorize".

As a 'Best security practices', Trimble recommends to change the default user credentials of 'trimble', 'trimbleadmin', 'trimblesuper' accounts.

## 5.3 System Page

After entering the valid credentials, the Thunderbolt® PTP Grandmaster Clock GM-200 launches the **System Page**. The system page is organized in two frames – the navigation and content.

The start page gives general status information of the Thunderbolt® PTP Grandmaster Clock GM-200. By using the navigation menu on the left side of the screen, user can view a number of configuration pages which are described in following pages.

## 5.4 System Status

### *Alarms and Events - Alarms*

The page shows currently active alarm condition on the system.

The screenshot displays the web interface for the Thunderbolt PTP GM200. At the top, there is a navigation bar with a 'Logout' link, a 'Disable auto-logout' checkbox, and a welcome message: 'Welcome trimblesuper. You have super access rights.' Below this is the 'Trimble' logo and the tagline 'Transforming the way the world works'. The main title 'Thunderbolt PTP GM200' is prominently displayed. On the left side, there is a vertical navigation menu with the following sections: 'SYSTEM STATUS' (highlighted), 'Alarms and Events', 'System Info', 'Timing', 'GNSS', and 'Network'. Below these are four larger buttons: 'INTERFACE MANAGEMENT', 'SYNCHRONIZATION MANAGEMENT', 'SECURITY MANAGEMENT', and 'SYSTEM MANAGEMENT'. The main content area is titled 'Alarm Status and Event Log'. It has two tabs: 'Alarms' (selected) and 'Event Log'. Under the 'Alarms' tab, there is a section titled 'List of Active Alarms' containing a table with three columns: 'Alarm #', 'Alarm Description', and 'Alarm Level'. The table lists two active alarms: Alarm #20 with description 'Eth-Port0-Down' and level 'Major', and Alarm #21 with description 'Eth-Port1-Down' and level 'Major'.

Alarm #	Alarm Description	Alarm Level
20	Eth-Port0-Down	Major
21	Eth-Port1-Down	Major

The Alarm Description window provides the details of each alarm and the alarm level


- **Alarm #:** Alarm code
- **Alarm Description:** Description of the alarm condition
- **Alarm Level:** Severity of alarm condition, can be notification only, minor, major or critical

## Alarms and Events – Event Log

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works

# Thunderbolt PTP GM200

SYSTEM STATUS

Alarms and Events

System Info

Timing

GNSS

Network

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

Alarm Status and Event Log

Alarms


Event Log

Event Filter

Number of Events

Download Log

Clear Log




2018-03-02 01:06:57.536	cfg	: 'trimblesuper' LOGIN as super on Rem-37.13.44.93
2018-03-01 06:47:44.601	cfg	: 'voruz' LOGOUT as admin on Rem-37.13.44.93
2018-03-01 06:41:39.234	cfg	: 'voruz' LOGOUT as admin on Comm-1
2018-03-01 06:35:02.840	alarm	: Clear alarm 8, 'Time-Sync-Bad'
2018-03-01 06:34:58.581	alarm	: Clear alarm 16, 'PTP-System-Bad'
2018-03-01 06:34:55.500	cfg	: 'voruz' LOGIN as admin on Rem-37.13.44.93
2018-03-01 06:34:46.371	cfg	: 'voruz' LOGOUT as admin on Rem-37.13.44.93
2018-03-01 06:34:35.034	alarm	: Clear alarm 15, 'Freq-Out-Bad'
2018-03-01 06:34:35.025	alarm	: Clear alarm 14, 'PPS-Sync-Bad'
2018-03-01 06:34:34.056	freq	: Output stratum changed to 0 (quality 7)
2018-03-01 06:34:30.014	alarm	: Clear alarm 12, 'Freq-Loop-Unlock'
2018-03-01 06:34:24.044	freq	: Changing loop control from Acquire to Lock
2018-03-01 06:31:44.412	cfg	: 'voruz' LOGIN as admin on Rem-37.13.44.93
2018-03-01 06:31:38.875	cfg	: 'voruz' LOGIN as admin on Comm-1
2018-03-01 06:31:18.204	alarm	: Clear alarm 13, 'Freq-Hold-Exceed'
2018-03-01 06:31:18.061	freq	: Changing loop control from Init to Acquire
2018-03-01 06:31:18.054	freq	: Clock GNSS stratum changed to 0 (quality 7)
2018-03-01 06:31:17.948	alarm	: Clear alarm 7, 'GNSS-PPS-Loss'
2018-03-01 06:31:15.188	alarm	: Clear alarm 26, 'Time-Set-Bad'
1970-04-26 00:07:14.047	freq	: Time error of -1519885811.656 seconds detected, correcting
1970-01-01 00:00:57.517	alarm	: Clear alarm 19, 'UTC-Corr-Unk'
1970-01-01 00:00:56.395	freq	: Clock GNSS qualified
1970-01-01 00:00:51.250	alarm	: Clear alarm 5, 'GNSS-Track-No'
1970-01-01 00:00:45.485	alarm	: Clear alarm 11, 'GNSS-Time-Bad'
1970-01-01 00:00:41.476	alarm	: Clear alarm 2, 'GNSS-Comm-Loss'
1970-01-01 00:00:37.466	alarm	: Set alarm 5, 'GNSS-Track-No'

The Event Log window provides the list of system messages and notifications.

- **Event Filter:** All, Alarms, Frequency, GNSS, Config Mods, Errors, Warnings, Notices, Information
- **Number of Events:** All, 10, 25, 50, 100
- **Download Log:** Select this button to download a text file with the message logs.
- **Clear Log:** Select this button to clear all message logs.

## System Info

The System Info status provides overall system information:

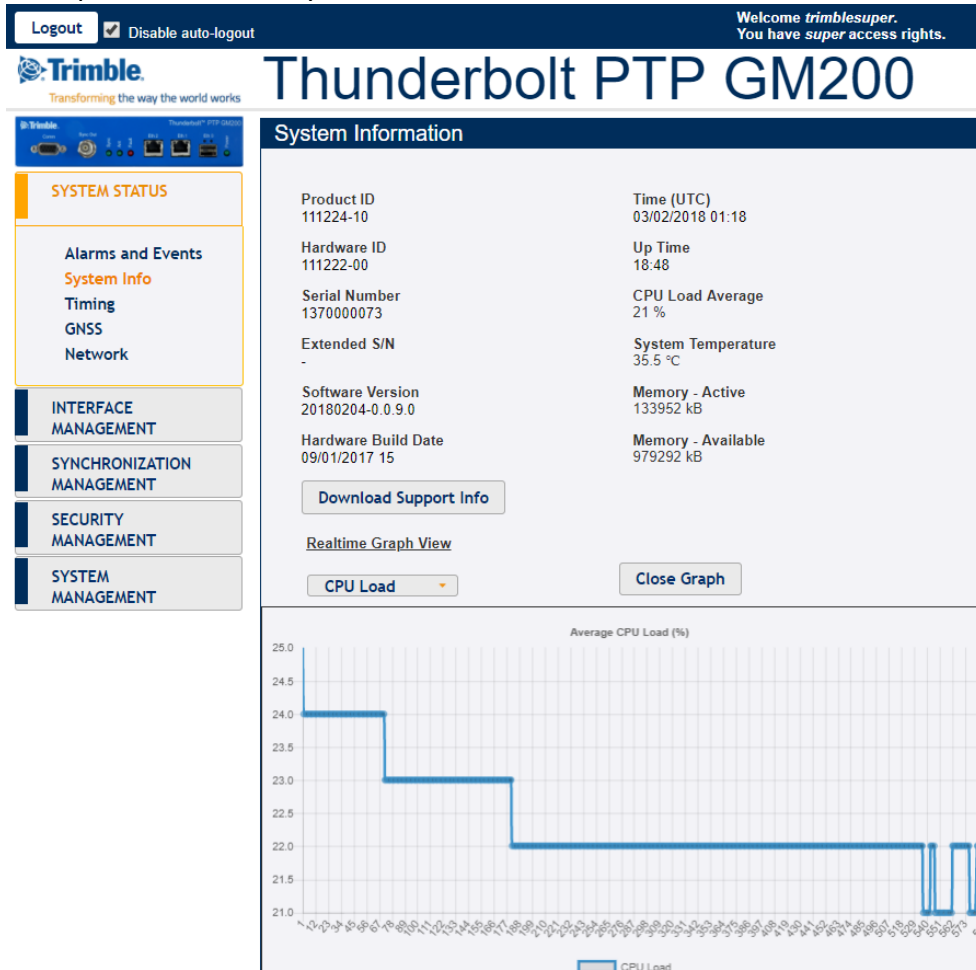

- **Product ID or Model:** The model number of the Thunderbolt® PTP GMC.
- **Time (UTC)** Displays the time in UTC format
- **Hardware ID** Displays the hardware part number
- **Up Time** Displays how long the unit is powered on.
- **Serial Number:** The unique serial number of the Thunderbolt® PTP GMC.
- **CPU Load Average:** A figure of merit for the operating system “load”
- **Extended S/N** Displays the extended serial number
- **System Temperature** Displays the Temperature of GM200
- **Software Version** Displays the current firmware version on the unit
- **Memory - Active** The amount of memory occupied by the system.
- **Hardware Build Date:** The date of firmware build
- **Memory - Available:** The amount of free memory remaining.
- **Download Support Info:** The support info can be downloaded as a file.
- **Realtime Graph View:** Displays the realtime graph of the following values:
  - CPU Load
  - Temperature
  - Mem – Active
  - Mem - Available


## Timing Status

This page provides the status information of System clock

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works

Thunderbolt® PTP GM200

SYSTEM STATUS

Alarms and Events

System Info

Timing

GNSS

Network

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

# Thunderbolt PTP GM200

## Timing Information

Timing Status

NTP Status

PTP Status

Input Status

Sync Source  
GNSS

Output Status

Sync Out  
PPS

Sync Source Statistics

Sync Source	Phase Offset	Mean	Sigma	Freq Offset
GNSS	5.199 ns	-0.137 ns	3.776 ns	-0.00038 ppb

Control Loop Status

Loop State	Holdover	Phase Offset	Freq Offset	Delta Freq
Lock	0 seconds	4.039ns	-3.06108e-07	4.578e-12


Realtime Graph View

Sync Source

Phase Offset

Close Graph


Phase Offset



Control Loop Output

- **Input Status**
  - **Sync Source:** Indicates the current sync source
- **Output Status**
  - **BNC Output:** Indicates the current configuration of BNC connector.

- **Sync Source Statistics**
  - **Sync Source:** Distinguishes the name of the Sync Source
  - **Phase Offset:** GMC output PPS with reference to the sync source
  - **Frequency Offset:** The absolute frequency offset of the internal OCXO with reference to sync source
  - **Mean:** The mean phase offset
  - **Sigma:** The standard deviation of phase offset
  
- **Control Loop Status:** Status of system control loop of the system.
  - **Phase Offset:** Control loop output with reference to the sync source
  - **Frequency Offset:** The frequency offset of control loop of GM200
  
  - **Holdover:** The estimated holdover time available

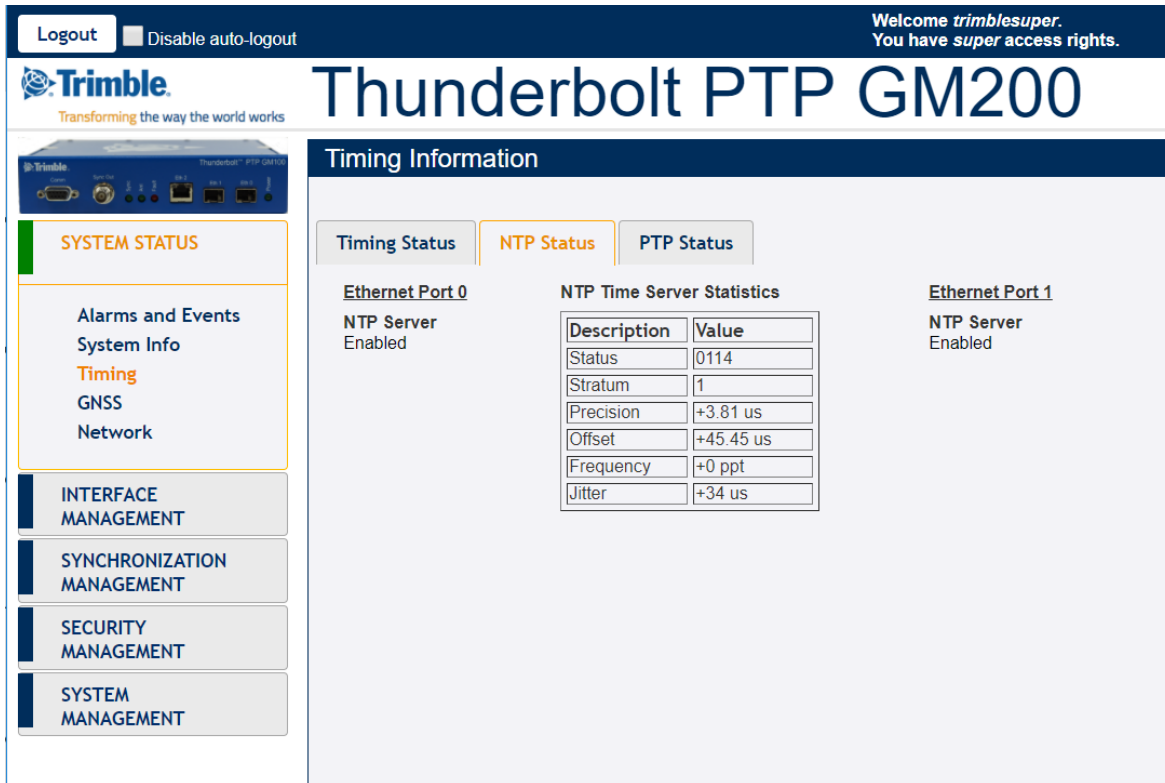

The screenshot shows the web interface of the Thunderbolt PTP GM200. At the top, there is a navigation bar with a 'Logout' button and a 'Disable auto-logout' checkbox. A welcome message reads: 'Welcome trimblesuper. You have super access rights.' The main header displays the 'Trimble' logo and the tagline 'Transforming the way the world works', followed by the product name 'Thunderbolt PTP GM200'. On the left, a sidebar menu includes 'SYSTEM STATUS' (highlighted), 'INTERFACE MANAGEMENT', 'SYNCHRONIZATION MANAGEMENT', 'SECURITY MANAGEMENT', and 'SYSTEM MANAGEMENT'. The 'SYSTEM STATUS' section contains links for 'Alarms and Events', 'System Info', 'Timing' (highlighted), 'GNSS', and 'Network'. The main content area is titled 'Timing Information' and features three tabs: 'Timing Status', 'NTP Status' (selected), and 'PTP Status'. Under 'NTP Status', there are three sections: 'Ethernet Port 0' showing 'NTP Server Enabled', 'NTP Time Server Statistics' table, and 'Ethernet Port 1' showing 'NTP Server Enabled'.

Description	Value
Status	0114
Stratum	1
Precision	+3.81 us
Offset	+45.45 us
Frequency	+0 ppt
Jitter	+34 us

- **Ethernet Port:** Identifies the Ethernet port – Eth0 or Eth1
- **NTP Status:** Show the status of port connection
- **NTP Time Server Statistics:** Shows the statistics of various server parameters

The screenshot shows the Thunderbolt PTP GM200 web interface. At the top, there is a navigation bar with a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message: 'Welcome trimblesuper. You have super access rights.' Below this is the Trimble logo and the title 'Thunderbolt PTP GM200'. The main content area is titled 'Timing Information' and contains three tabs: 'Timing Status', 'NTP Status', and 'PTP Status'. The 'PTP Status' tab is selected. It displays two columns of information for 'Ethernet Port 0' and 'Ethernet Port 1'. Each column shows the PTP Profile (Status), PTP BMC ID, PTP Clock Class, and Phase Offset. Below this, it shows the PTP Port Unicast Client Count is 0. At the bottom, there are two tables with headers: Address, AnnInt, SyncInt, and dReqInt.

Ethernet Port 0				Ethernet Port 1			
PTP Profile : Status				PTP Profile : Status			
G8275.1 : GrandMaster				G8265.1-II : GrandMaster			
PTP BMC ID				PTP BMC ID			
001747FFFE7FFEB2				001747FFFE7FFEB3			
PTP Clock Class				PTP Clock Class			
6				80			
Phase Offset				Phase Offset			
0.000 ns				0.000 ns			
PTP Port 0 Unicast Client Count is 0				PTP Port 1 Unicast Client Count is 0			
Address	AnnInt	SyncInt	dReqInt	Address	AnnInt	SyncInt	dReqInt

- **Ethernet Port:** Identifies the Ethernet port – Eth0 (RJ45) or Eth1 (SFP)
- **PTP Status:** Show the status of port connection
- **PTP Clock ID:** Identifies the PTP clock ID
- **PTP Statistics:**
  - **Description:** Name of the Statistic
  - **Value:** Value
- **PTP Port 1/2 Unicast Clients:** Only available for unicast PTP profiles. The table will show either PTP slaves (when port configured as PTP GM) or PTP Master (when port is configured as PTP Slave)



## GNSS Receiver Status

The page displays the status of GNSS receiver:

The screenshot shows the web interface for the Thunderbolt PTP GM200. At the top, there is a navigation bar with a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message: 'Welcome trimblesuper. You have super access rights.' Below this is the Trimble logo and the title 'Thunderbolt PTP GM200'. The main content area is titled 'GNSS Receiver Information' and contains two tabs: 'GNSS Receiver' (selected) and 'Satellite Data'. The 'GNSS Receiver' tab displays a table of receiver status information.

<u>Receiver Status</u>	<u>Position Info</u>	<u>Receiver Info</u>	<u>Antenna Info</u>
<b>GNSS Quality</b> 13 Very Good SVs	<b>Survey Length</b> 2000 secs	<b>GNSS Almanac</b> Good	<b>Antenna Delay</b> 0 ns
<b>Receiver Operation</b> Normal	<b>Latitude</b> N 19° 27.54540'	<b>Constellations</b> GPS GLO	
<b>Receiver Mode</b> Overdet Clock (Time)	<b>Longitude</b> W 99° 10.76855'	<b>UTC Offset</b> 18	
	<b>Altitude</b> 2247.38 m HAE	<b>Pending Leap</b> 0	

- **Latitude:** The latitude of the Thunderbolt PTP GMC GM200
- **Longitude:** The longitude of the Thunderbolt PTP GMC GM200
- **Altitude:** The altitude of the GNSS receiver
- **Receiver Status:** The current status of the receiver (*doing fixes, in clock mod*)
- **GNSS Almanac:** The status of GNSS Almanac
- **Constellations in use:** Current constellations that are being used
- **GNSS Quality Status:** A metric used to provide the user with a snapshot of the number of SVs with Very Good, Good, or Poor Signal Strength/Quality  
Quality is 'Very Good' if there are at least 4 SVs that have SNR > 35  
Quality is 'Good' if there are at least 4 SVs that have SNR > 20  
Quality is 'Poor' if there are not SVs that have SNR > 20
- **Antenna Delay:** Displays the compensation delay of antenna cable.

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.

You have *super* access rights.

Transforming the way the world works

# Thunderbolt PTP GM200

## GNSS Receiver Information

SYSTEM STATUS

Alarms and Events

System Info

Timing

GNSS

Network

INTERFACE MANAGEMENT

SYNCHRONIZATION

GNSS Receiver

Satellite Data

SV	C/No	Az.	Elev.
6	45.0	191.0	38.0
19	48.0	279.0	52.0
30	47.0	150.0	60.0
1	44.0	44.0	22.0
17	50.0	321.0	59.0
7	48.0	148.0	33.0
13	47.0	271.0	25.0

SV	C/No	Az.	Elev.
28	43.0	29.0	45.0
76	31.0	339.0	25.0
87	44.0	221.0	16.0
75	45.0	29.0	62.0
74	47.0	119.0	37.0
85	43.0	15.0	40.0
86	48.0	265.0	67.0

- **SV:** Satellite Vehicle
- **C/No:** Carrier-to-Noise power ratio
- **Az:** Azimuth
- **Elev:** Elevation

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.

You have *super* access rights.

Transforming the way the world works

# Thunderbolt PTP GM200

## Network Information

SYSTEM STATUS

Alarms and Events

System Info

Timing

GNSS

Network

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

Ethernet Port 0

Ethernet Port 1

Management Port

Ethernet Statistics

Connection Status

Not Connected

MAC Address

00:17:47:7F:FE:B2

IPv4 Assignments

Address - Static

1.1.1.251

Subnet Mask

255.255.255.0

Gateway

1.1.1.1

Broadcast

1.1.1.255

IPv6 Assignments

Ethernet Assignments

VLAN IDs

-


SyncE Status


Off

- **IPv4 Address:** IP address of the port.
- **IPv4 Subnet Mask:** Subnet mask being used.
- **IPv4 Gateway:** Default gateway
- **IPv4 Broadcast:** Broadcast IP address
- **IPv6 Address/Mask:** IPv6 Address of the Ethernet interface with the subnet mask.
- **IP Assignment:** Either static or DHCP
- **Connection Status:** Status of Ethernet connection
- **MAC Address:** The MAC Address of the port
- **SyncE Status:** Status of Synchronous Ethernet

Logout
☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.


**Thunderbolt PTP GM200**  
Transforming the way the world works



SYSTEM STATUS

Alarms and Events  
System Info  
Timing  
GNSS  
**Network**

INTERFACE MANAGEMENT

SYNCHRONIZATION

Network Information

Ethernet Port 0
**Ethernet Port 1**
Management Port
Ethernet Statistics

Connection Status  
Not Connected

MAC Address  
00:17:47:7F:FE:B3

IPv4 Assignments

Address - <b>Static</b>	Subnet Mask	Gateway	Broadcast
4.4.4.251	255.255.255.0	4.4.4.1	4.4.4.255

IPv6 Assignments

Ethernet Assignments

VLAN IDs	SyncE Status
-	Off

- **IPv4 Address:** IP address of the port.
- **IPv4 Subnet Mask:** Subnet mask being used.
- **IPv4 Gateway:** Default gateway
- **IPv4 Broadcast:** Broadcast IP address
- **IPv6 Address/Mask:** IPv6 Address of the Ethernet interface with the subnet mask.
- **IP Assignment:** Either static or DHCP
- **Connection Status:** Status of Ethernet connection
- **MAC Address:** The MAC Address of the port
- **SyncE Status:** Status of Synchronous Ethernet

The screenshot shows the web interface of the Thunderbolt PTP GM200. At the top, there is a navigation bar with a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message for 'trimblesuper'. The main header displays the 'Thunderbolt PTP GM200' title. On the left, a sidebar contains 'SYSTEM STATUS' (with sub-items: Alarms and Events, System Info, Timing, GNSS, and Network) and 'INTERFACE MANAGEMENT'. The main content area is titled 'Network Information' and features four tabs: 'Ethernet Port 0', 'Ethernet Port 1', 'Management Port' (which is selected), and 'Ethernet Statistics'. The 'Management Port' tab displays the following information:

Ethernet Port 0		Ethernet Port 1		Management Port		Ethernet Statistics	
<b>Connection Status</b> Connected 100MB		<b>MAC Address</b> 00:17:47:7F:FE:B4					
<u>IPv4 Assignments</u>							
<b>Address - Static</b> 37.13.44.151		<b>Subnet Mask</b> 255.255.255.0		<b>Gateway</b> 37.13.44.1		<b>Broadcast</b> 37.13.44.255	
<u>IPv6 Assignments</u>							
<b>Address</b> fe80::217:47ff:fe7f:feb4/64				<b>Scope</b> Link			


- **IPv4 Address:** IP address of the port.
- **IPv4 Subnet Mask:** Subnet mask being used.
- **IPv4 Gateway:** Default gateway
- **IPv4 Broadcast:** Broadcast IP address
- **IPv6 Address/Mask:** IPv6 Address of the Ethernet interface with the subnet mask.
- **IP Assignment:** Either static or DHCP
- **Connection Status:** Status of Ethernet connection
- **MAC Address:** The MAC Address of the port

Logout


☒ Disable auto-logout

Welcome *trimblesuper*.

You have *super* access rights.



Transforming the way the world works



SYSTEM STATUS

Alarms and Events

System Info

Timing

GNSS

Network

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

## Thunderbolt PTP GM200

### Network Information

Ethernet Port 0

Ethernet Port 1

Management Port

Ethernet Statistics

Statistic	Ethernet Port 0	Ethernet Port 1	Management Port
RX Bytes	N/A	N/A	15 MB
RX Packets	N/A	N/A	59331
RX Packets/Sec	N/A	N/A	2
RX Dropped	N/A	N/A	3
RX Errors	N/A	N/A	0
TX Bytes	N/A	N/A	34 MB
TX Packets	N/A	N/A	57666
TX Packets/Sec	N/A	N/A	3
TX Dropped	N/A	N/A	0
TX Errors	N/A	N/A	0
	1-second	10-seconds avg	
RX+TX Pkts/Sec	5	0	

## 5.5 Interface Management

### Ethernet Port 0

The screenshot displays the web interface of a Thunderbolt PTP GM200 device. At the top, a dark blue header contains a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message: 'Welcome trimblesuper. You have super access rights.' Below the header, the Trimble logo and tagline 'Transforming the way the world works' are on the left, and the title 'Thunderbolt PTP GM200' is on the right. A left sidebar menu includes 'SYSTEM STATUS', 'INTERFACE MANAGEMENT' (highlighted), 'Ethernet' (selected), 'VLAN', 'SNMP', 'Syslog', 'Serial Port', 'SYNCHRONIZATION MANAGEMENT', 'SECURITY MANAGEMENT', and 'SYSTEM'. The main content area is titled 'Ethernet Configuration' and features three tabs: 'Ethernet Port 0' (active), 'Ethernet Port 1', and 'Management Port'. Under 'Ethernet Port 0', the 'Port Configuration' is set to 'Static'. The 'Connection Status' is 'Not Connected'. The 'SyncE Configuration' is 'Off' with a note 'SyncE support unknown'. The 'IPv4 Assignments' section shows: Address '1.1.1.251', Subnet Mask '255.255.255.0', Gateway '1.1.1.1', and Broadcast '1.1.1.255'. The 'IPv6 Assignments' section shows: IPv6 Mode 'SLAAC', Address '-', and Scope 'Global'. At the bottom, there are input fields for 'IPv4 Address' and 'IPv6 Address', both containing '<IPv4 address to ping>' and '<IPv6 address to ping>' respectively, with 'Ping IPv4' and 'Ping IPv6' buttons below them.

- **Port Configuration:** Either DHCP, Static, Default or Disable this interface
- **Connection Status:** Either Connected, Not Connected
- **SyncE Configuration:** Either Output, Input, Off
- **IPv4 Address:** IPv4 address of the port
- **IPv4 Subnet Mask:** Subnet mask being used
- **IPv4 Gateway:** Default gateway IPv4 address
- **IPv4 Broadcast:** Broadcast IPv4 address
- **IPv6 Mode:** Either DHCPv6, SLAAC, Static
- **IPv6 Address:** IPv6 Address of the Ethernet interface.
- **Ping IPv4:** Enter IPv4 Address to test ping
- **Ping IPv6:** Enter IPv6 Address to test ping

## Ethernet Port 1

The screenshot shows the web interface of the Thunderbolt PTP GM200. At the top, there is a navigation bar with a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message: 'Welcome trimblesuper. You have super access rights.' Below this is the Trimble logo and the title 'Thunderbolt PTP GM200'. The main content area is titled 'Ethernet Configuration' and features three tabs: 'Ethernet Port 0', 'Ethernet Port 1' (which is selected and highlighted in orange), and 'Management Port'. Under the 'Ethernet Port 1' tab, there are three sections: 'Port Configuration' with a 'Static' dropdown, 'Connection Status' showing 'Not Connected', and 'SyncE Configuration' with an 'Off' dropdown and the text 'SyncE support unknown'. Below these are 'IPv4 Assignments' with fields for 'Address' (4.4.4.251), 'Subnet Mask' (255.255.255.0), 'Gateway' (4.4.4.1), and 'Broadcast' (4.4.4.255). There are also 'IPv6 Assignments' with a 'SLAAC' dropdown, an 'Address' field containing a hyphen, and a 'Scope' set to 'Global'. At the bottom, there are fields for 'IPv4 Address' and 'IPv6 Address', both containing the placeholder '<IPv4 address to ping>' and '<IPv6 address to ping>' respectively, with 'Ping IPv4' and 'Ping IPv6' buttons below them. On the left side of the interface, there is a sidebar with navigation links: 'SYSTEM STATUS', 'INTERFACE MANAGEMENT' (which is expanded to show 'Ethernet', 'VLAN', 'SNMP', 'Syslog', and 'Serial Port'), 'SYNCHRONIZATION MANAGEMENT', 'SECURITY MANAGEMENT', and 'SYSTEM'.


- **Port Configuration:** Either DHCP, Static, Default or Disable this interface
- **Connection Status:** Either Connected, Not Connected
- **SyncE Configuration:** Either Output, Input, Off
- **IPv4 Address:** IPv4 address of the port
- **IPv4 Subnet Mask:** Subnet mask being used
- **IPv4 Gateway:** Default gateway IPv4 address
- **IPv4 Broadcast:** Broadcast IPv4 address
- **IPv6 Mode:** Either DHCPv6, SLAAC, Static
- **IPv6 Address:** IPv6 Address of the Ethernet interface.
- **Ping IPv4:** Enter IPv4 Address to test ping
- **Ping IPv6:** Enter IPv6 Address to test ping




Logout

☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works



SYSTEM STATUS

INTERFACE MANAGEMENT

Ethernet

VLAN

SNMP

Syslog

Serial Port

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

SYSTEM

# Thunderbolt PTP GM200

## Ethernet Configuration

Ethernet Port 0

Ethernet Port 1

Management Port

Port Configuration

Connection Status

Static

Connected 100MB

IPv4 Assignments

Address	Subnet Mask	Gateway	Broadcast
37.13.44.151	255.255.255.0	37.13.44.1	37.13.44.255

IPv6 Assignments

IPv6 Mode	Address	Scope
SLAAC	-	Global
	fe80::217:47ff:fe7f:feb4	Link

IPv4 Address

IPv6 Address

<IPv4 address to ping>

<IPv6 address to ping>

Ping IPv4

Ping IPv6


- **Port Configuration:** Either DHCP, Static, Default or Disable this interface
- **Connection Status:** Either Connected, Not Connected
- **IPv4 Address:** IPv4 address of the port
- **IPv4 Subnet Mask:** Subnet mask being used
- **IPv4 Gateway:** Default gateway IPv4 address
- **IPv4 Broadcast:** Broadcast IPv4 address
- **IPv6 Mode:** Either DHCPv6, SLAAC, Static
- **IPv6 Address:** IPv6 Address of the Ethernet interface with the subnet mask.
- **Ping IPv4:** Enter IPv4 Address to test ping
- **Ping IPv6:** Enter IPv6 Address to test ping

## VLAN Ethernet Port 0

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works

Thunderbolt™ PTP GM200

SYSTEM STATUS

INTERFACE MANAGEMENT

Ethernet  
VLAN  
SNMP  
Syslog  
Serial Port

SYNCHRONIZATION

VLAN Configuration

Ethernet Port 0

Ethernet Port 1

VLAN Configuration

VLAN ID Assignments

VID1

VID2

VID3

VID4

Priority


0

To remove a VLAN ID, delete it's entry from the list.

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works

Thunderbolt™ PTP GM200

SYSTEM STATUS

INTERFACE MANAGEMENT

Ethernet  
VLAN  
SNMP  
Syslog  
Serial Port

SYNCHRONIZATION

VLAN Configuration

Ethernet Port 0

Ethernet Port 1

VLAN Configuration

VLAN ID Assignments

20

30

VID3

VID4

Priority

0

To remove a VLAN ID, delete it's entry from the list.

VLAN Interface Assignments

Edit	Interface	Address	Mask	Gateway
<input type="radio"/>	eth0.20	0.0.0.0	255.255.255.0	
<input type="radio"/>	eth0.30	10.0.0.1	255.255.255.0	


Only one VLAN Interface may be assigned or modified per 'Set' command.

- **VLAN IDs:** List of all VLAN IDs configured
- **Priority:** 0 to 7 where 7 is the highest priority


## VLAN Ethernet Port 1

Logout ☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works

Thunderbolt™ PTP GM200



SYSTEM STATUS

INTERFACE MANAGEMENT

Ethernet  
VLAN  
SNMP  
Syslog  
Serial Port

VLAN Configuration

Ethernet Port 0 Ethernet Port 1

VLAN Configuration

VLAN ID Assignments


VID1 VID2 VID3 VID4

Priority 0


To remove a VLAN ID, delete it's entry from the list.

Logout ☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works

Thunderbolt™ PTP GM200



SYSTEM STATUS

INTERFACE MANAGEMENT

Ethernet  
VLAN  
SNMP  
Syslog  
Serial Port

VLAN Configuration

Ethernet Port 0 Ethernet Port 1

VLAN Configuration

VLAN ID Assignments

151 262 VID3 VID4

Priority 0

To remove a VLAN ID, delete it's entry from the list.

VLAN Interface Assignments

Edit	Interface	Address	Mask	Gateway
<input type="radio"/>	eth1.151	10.0.0.1	255.255.255.0	
<input type="radio"/>	eth1.262	0.0.0.0	255.255.255.0	

Only one VLAN Interface may be assigned or modified per 'Set' command.

- **VLAN IDs:** List of all VLAN IDs configured
- **Priority:** 0 to 7 where 7 is the highest priority

The screenshot shows the web interface of the Thunderbolt PTP GM200. At the top, there is a navigation bar with a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message: 'Welcome trimblesuper. You have super access rights.' Below this is the Trimble logo and the tagline 'Transforming the way the world works'. The main title 'Thunderbolt PTP GM200' is prominently displayed. On the left, there is a sidebar menu with 'SYSTEM STATUS' and 'INTERFACE MANAGEMENT'. Under 'INTERFACE MANAGEMENT', there are links for 'Ethernet', 'VLAN', 'SNMP' (highlighted in orange), 'Syslog', and 'Serial Port'. The main content area is titled 'SNMP Configuration' and has two tabs: 'Basic' and 'SNMP v2c'. The 'SNMP v2c' tab is active. It contains a 'SNMP Configuration' section with a dropdown menu set to 'SNMP V2c'. To the right, there are three input fields: 'Trap Community String' with the value 'public', 'SNMP/Trap Manager IP' with the value '0.0.0.0', and 'SNMP/Trap Manager Port' with the value '162'. A 'Download MIBS' button is located to the right of the 'Trap Community String' field.


- **SNMP Configuration:** SNMP v2c, Disable
- **Trap Community String:** Community string id for SNMP
- **SNMP Manager IP:** IP address of SNMP manager that receives the TRAP
- **SNMP Manager Port:** Port number of SNMP manager
- **Download MIBs:** This option allows download SNMP MIB files


The screenshot shows the web interface of the Thunderbolt PTP GM200. At the top, there is a navigation bar with a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message: 'Welcome trimblesuper. You have super access rights.' Below this is the Trimble logo and the tagline 'Transforming the way the world works'. The main title 'Thunderbolt PTP GM200' is prominently displayed. On the left side, there is a sidebar menu with 'SYSTEM STATUS' and 'INTERFACE MANAGEMENT'. Under 'INTERFACE MANAGEMENT', the options are 'Ethernet', 'VLAN', 'SNMP' (which is highlighted), 'Syslog', and 'Serial Port'. The main content area is titled 'SNMP Configuration' and has two tabs: 'Basic' and 'SNMP v2c' (which is selected). Under the 'SNMP v2c' tab, there are two sections: 'Read Only Community' with a text input field containing 'public', and 'Read/Write Community' with a text input field containing 'private'.

- **Read Community:** Community string for read
- **Write Community:** Community string for write

[Logout](#) ☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

 **Thunderbolt PTP GM200**  
Transforming the way the world works



**SYSTEM STATUS**

**INTERFACE MANAGEMENT**

Ethernet  
VLAN  
SNMP  
**Syslog**  
Serial Port

**Syslog Configuration**


Syslog Protocol  
Disable

Syslog Server  
0.0.0.0

Syslog Port  
514

- **Syslog Protocol:** Enable or Disable
- **Syslog Server:** IP Address of Syslog Server
- **Syslog Port:** Enter Syslog Port

## Serial Port

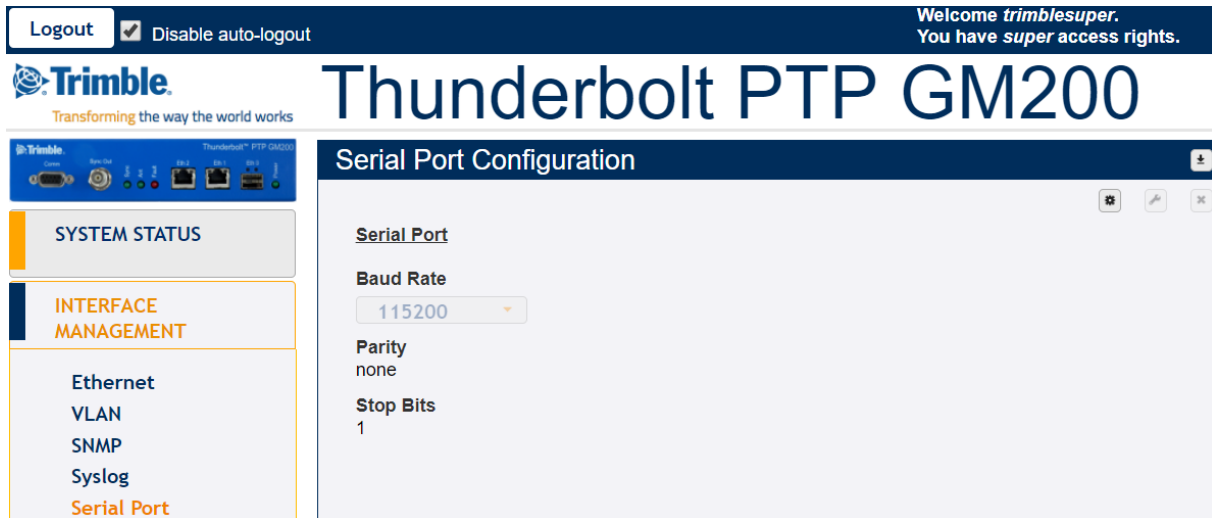

- **Baud Rate:** Serial port speed: 9600, 19200, 38400, 57600, 115200. The default value is 115200
- **Parity:** Serial port parity setting – even, none, odd
- **Stop Bits:** Serial port stop bit setting – 0 or 1

*NOTE – The parity and stop bits are for reference only and are not user configurable.*

## 5.6 Synchronization Management

### PTP Grandmaster Ethernet Port 0

The screenshot shows the Thunderbolt PTP GM200 web interface. At the top, there is a navigation bar with a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message: 'Welcome trimblesuper. You have super access rights.' Below this is the Trimble logo and the title 'Thunderbolt PTP GM200'. On the left is a sidebar menu with categories: SYSTEM STATUS, INTERFACE MANAGEMENT, SYNCHRONIZATION MANAGEMENT (highlighted), SECURITY MANAGEMENT, and SYSTEM MANAGEMENT. Under SYNCHRONIZATION MANAGEMENT, there are sub-items: PTP (highlighted), NTP, GNSS, Sync Source, and Output. The main content area is titled 'PTP Configuration' and has two tabs: 'Ethernet Port 0' (selected) and 'Ethernet Port 1'. The configuration is organized into three columns. The first column contains: PTP Port Status (Disabled), PTP Profile (G8275.1), Sync Mode (One-Step), Transport Protocol (802.3), IP Mode (Multicast), Delay Mechanism (P2P), and PTP Mode (GrandMaster). The second column contains: Domain Number (-999), Announce Interval (-999), Announce Timeout (-999), Sync Interval (-999), Delay Request Interval (-999), P2P Delay Request Interval (-999), and Grantor Address (-). The third column contains: PTP Clock ID (Not operational), Priority 1 (-999), Priority 2 (-999), Clock Class (-999), Multicast TTL (-999), DiffServ Code Point (-999), and Lease Duration (-999).

- **PTP Port Status:** PTP port status - enabled or disabled
- **PTP Profile:** G8275, G8265, G8265 –I, telecom or 1588
- **Sync Mode:** 1-step or 2-Step
- **Transport Protocol:** Transport mechanism – IP or Ethernet
- **IP Mode:** Multicast or Unicast
- **Delay Mechanism:** E2E or P2P
- **PTP Mode:** Master or Slave clock.
- **Domain Number:** The PTP domain number
- **Announce Interval:** Mean time interval between successive announce messages.
- **Announce Timeout:** Mean timeout between successive announce
- **Sync Interval:** Mean time interval between successive sync messages
- **Delay Request Interval:** Mean time interval between delay requests
- **P2P Delay Req Interval:** Mean time interval between delay requests of peers.
- **Grantor Address:** For PTP unicast input profiles only, IP address (es) of the unicast GrandMasters to use as the 'grantor' for the requests.
- **PTP Clock Id:** ID of the PTP clock
- **Priority 1:** Priority 1 value between 0 and 255
- **Priority 2:** Priority 2 value between 0 and 255
- **Clock Class:** View the clock class.
- **Multicast TTL:** Set the multicast ttl value for the transmission (from 1 to 6).
- **DiffServ Code Point:** Diff Serv Code Point
- **Lease Duration:** For unicast grant messages, set the duration field.



Logout ☒ Disable auto-logout
Welcome *trimblesuper*.  
You have *super* access rights.

# Thunderbolt PTP GM200

**SYSTEM STATUS**

---

**INTERFACE MANAGEMENT**

---

**SYNCHRONIZATION MANAGEMENT**

---

**PTP**

NTP

GNSS

Sync Source

Output

---

**SECURITY MANAGEMENT**

---

**SYSTEM MANAGEMENT**

### PTP Configuration

Ethernet Port 0
Ethernet Port 1


<p><b>PTP Port Status</b></p> <p>Disabled</p> <p><b>PTP Profile</b></p> <p>G8265.1 Opt II</p> <p><b>Sync Mode</b></p> <p>One-Step</p> <p><b>Transport Protocol</b></p> <p>IPV4</p> <p><b>IP Mode</b></p> <p>Unicast</p> <p><b>Delay Mechanism</b></p> <p>P2P</p> <p><b>PTP Mode</b></p> <p>GrandMaster</p>	<p><b>Domain Number</b></p> <p>4</p> <p><b>Announce Interval</b></p> <p>1</p> <p><b>Announce Timeout</b></p> <p>-999</p> <p><b>Sync Interval</b></p> <p>-4</p> <p><b>Delay Request Interval</b></p> <p>-4</p> <p><b>P2P Delay Request Interval</b></p> <p>-999</p> <p><b>Grantor Address</b></p> <p>-</p>	<p><b>PTP Clock ID</b></p> <p>Not operational</p> <p><b>Priority 1</b></p> <p>128</p> <p><b>Priority 2</b></p> <p>128</p> <p><b>Clock Class</b></p> <p>-999</p> <p><b>Multicast TTL</b></p> <p>-999</p> <p><b>DiffServ Code Point</b></p> <p>0</p> <p><b>Lease Duration</b></p> <p>300</p>
--	---	--


- **PTP Port Status:** PTP port status - enabled or disabled
- **PTP Profile:** G8275, G8265, G8265 –I, telecom or 1588
- **Sync Mode:** 1-step or 2-Step
- **Transport Protocol:** Transport mechanism – IP or Ethernet
- **IP Mode:** Multicast or Unicast
- **Delay Mechanism:** E2E or P2P
- **PTP Mode:** Master or Slave clock.
- **Domain Number:** The PTP domain number
- **Announce Interval:** Mean time interval between successive announce messages.
- **Announce Timeout:** Mean timeout between successive announce
- **Sync Interval:** Mean time interval between successive sync messages
- **Delay Request Interval:** Mean time interval between delay requests
- **P2P Delay Req Interval:** Mean time interval between delay requests of peers.
- **Grantor Address:** For PTP unicast input profiles only, IP address (es) of the unicast GrandMasters to use as the 'grantor' for the requests.
- **PTP Clock Id:** ID of the PTP clock
- **Priority 1:** Priority 1 value between 0 and 255
- **Priority 2:** Priority 2 value between 0 and 255
- **Clock Class:** View the clock class.
- **Multicast TTL:** Set the multicast ttl value for the transmission (from 1 to 6).
- **DiffServ Code Point:** Diff Serv Code Point
- **Lease Duration:** For unicast grant messages, set the duration field.

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works



SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

PTP

**NTP**

GNSS

Sync Source

Output

# Thunderbolt PTP GM200

## NTP Configuration

Ethernet Port 0

Ethernet Port 1

NTP Security

NTP Peers

**NTP Server**  
Enabled

**NTP Broadcast**  
Disabled

**NTP Broadcast IP**  
-

**NTP Broadcast Interval**  
-


**NTP Broadcast TTL**  
-

- **NTP Server:** Enabled, disabled or default.
- **NTP Broadcast:** Enabled or disabled
- **NTP Broadcast IP:** Broadcast IP for NTP (has to be in same domain as that of port)
- **NTP Broadcast Interval:** Values between 4 and 17 representing  $2^4$  (16 secs) and  $2^{17}$  (36.4 hours)
- **NTP Broadcast TTL:** Values between 1 to 7 hops.

## NTP Time Server Ethernet Port 1

The screenshot shows the web interface of the Thunderbolt PTP GM200. At the top, there is a navigation bar with a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message: 'Welcome trimblesuper. You have super access rights.' Below this is the Trimble logo and the tagline 'Transforming the way the world works'. The main title 'Thunderbolt PTP GM200' is prominently displayed. On the left, there is a sidebar with navigation links: 'SYSTEM STATUS', 'INTERFACE MANAGEMENT', and 'SYNCHRONIZATION MANAGEMENT'. Under 'SYNCHRONIZATION MANAGEMENT', there are sub-links: 'PTP', 'NTP' (highlighted in orange), 'GNSS', 'Sync Source', and 'Output'. The main content area is titled 'NTP Configuration' and has four tabs: 'Ethernet Port 0', 'Ethernet Port 1' (selected and highlighted in orange), 'NTP Security', and 'NTP Peers'. Under the 'Ethernet Port 1' tab, there are two sections: 'NTP Server' and 'NTP Broadcast'. The 'NTP Server' section has a dropdown menu set to 'Enabled'. The 'NTP Broadcast' section has a dropdown menu set to 'Disabled'. Below these are three input fields: 'NTP Broadcast IP' (with a '-' placeholder), 'NTP Broadcast Interval' (with a '-' placeholder), and 'NTP Broadcast TTL' (with a '-' placeholder).

- **NTP Server:** Enabled, disabled or default.
- **NTP Broadcast:** Enabled or disabled
- **NTP Broadcast IP:** Broadcast IP for NTP (has to be in same domain as that of port)
- **NTP Broadcast Interval:** Values between 4 and 17 representing  $2^4$  (16 secs) and  $2^{17}$  (36.4 hours)
- **NTP Broadcast TTL:** Values between 1 to 7 hops.

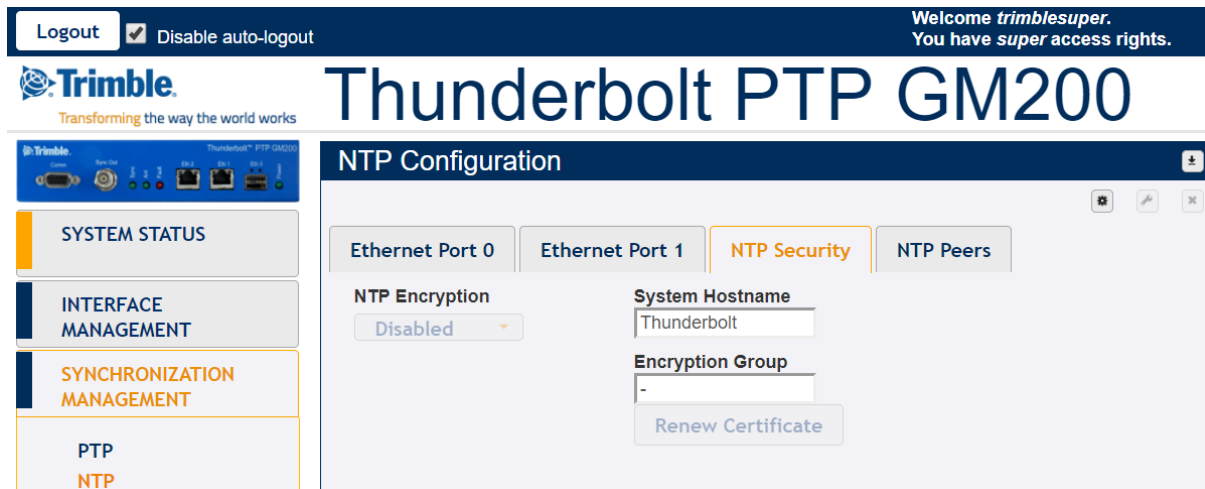


- **NTP Encryption:** Disabled or Enabled
- **NTP Encryption Hostname:** Hostname of encryption certificate
- **NTP Encryption Group:** Group name for encryption certificate

## NTP Time Server - NTP Peers


The screenshot shows the web interface of the Thunderbolt PTP GM200. At the top, there is a navigation bar with a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message: 'Welcome trimblesuper. You have super access rights.' Below this is the Trimble logo and the title 'Thunderbolt PTP GM200'. On the left, a sidebar contains menu items: 'SYSTEM STATUS', 'INTERFACE MANAGEMENT', 'SYNCHRONIZATION MANAGEMENT', and a sub-menu for 'PTP' which includes 'NTP' (highlighted) and 'GNSS'. The main content area is titled 'NTP Configuration' and has four tabs: 'Ethernet Port 0', 'Ethernet Port 1', 'NTP Security', and 'NTP Peers' (which is active). Under the 'NTP Peers' tab, the text 'NTP Peers for Port 0 and Port 1' is displayed above four empty input fields for IP addresses.

- **NTP Peers :** IP Addresses for up to 4 NTP Peers, valid for Port0 and Port1.

Logout
☒ Disable auto-logout
Welcome *trimblesuper*.  
You have *super* access rights.


Transforming the way the world works

# Thunderbolt PTP GM200



SYSTEM STATUS
INTERFACE MANAGEMENT
SYNCHRONIZATION MANAGEMENT
PTP
NTP
GNSS
Sync Source
Output
SECURITY MANAGEMENT

### GNSS Configuration

**Constellation Selection**  
☒ GPS
☒ GLONASS
☐ Beidou
☐ Galileo
☐ QZSS

**Position Settings**  
**Positioning Mode**  
Automatic

**Survey Length (secs)**  
2000

**Latitude (degrees)**  
19.45909

**Elevation Mask**  
10.0

**Longitude (degrees)**  
-99.17947

**PDOP Mask**  
3.0

**Height (meters)**  
2247.38

**Signal Level Mask**  
0.00

**Receiver Status**  
Normal

**Receiver Mode**  
Overdet Clock (Time)

**Antenna Delay (nS)**  
0

**Restart GNSS Receiver**  
Do nothing

- **GNSS Constellations:** Combination of GPS, GLONASS, Beidou, Galileo and/or QZSS
- **Positioning Mode:** Automatic, Surveyed or Manual
- **Latitude:** Latitude in degrees
- **Longitude:** Longitude in degrees
- **Height:** Height in meters
- **Elevation Mask:** Satellite elevation mask level
- **PDOP Mask:** Satellite PDOP mask level
- **Signal Level Mask:** Set signal level mask
- **Antenna Delay (ns):** Delay compensation of antenna cable.
- **Restart GNSS Engine:** Warm, Cold or Do Nothing

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.

You have *super* access rights.

Transforming the way the world works

Thunderbolt PTP GM200

SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

PTP

NTP

GNSS

Sync Source

Output

Sync Source Configuration

Sync Source Selection

☒ GNSS
☒ SyncE-eth0
☐ SyncE-eth1
☐ PTP-eth0
☒ PTP-eth1

NOTE: Source must be configured as an input to be used as a Sync Source.

Sync Source Statistics

Sync Source	Time Offset	Mean	Sigma	Freq Offset
*GNSS	3.957 ns	1.089 ns	5.427 ns	-0.00038 ppb
SyncE eth0	N/A	N/A	N/A	N/A
PTP eth1	N/A	N/A	N/A	N/A

\*Selected Sync Source

This page displays the list of Sync Sources or Inputs of the system. It is possible to select or deselect the possible Inputs of the system:

- GNSS
- PTP-eth0
- PTP-eth1
- SyncE-eth0
- SyncE-eth1


The list displays as well the selected Sync Source actually used by GM-200.


## Output Configuration

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works



SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

PTP  
NTP  
GNSS  
Sync Source  
Output

# Thunderbolt PTP GM200

## Output Configuration

Output Ports

Sync Out

PPS

Output Settings

Width (ns)

1000

Delay (ns)

0

Periodic Settings

Width (ns)

1000

Period (seconds)

10

Value (0 - Period-1)

0

- **BNC Output:** The type of out signal – PPS, PP2S, Periodic or 10MHz
- **Output Width:** Width of Output in nS
- **Output Delay:** Delay of Output in nS
- **Periodic Width:** Periodic width in ns
- **Period:** Period in seconds
- **Periodic Value:** Periodic value



## 5.7 Security Management

### *User Management - Active Sessions*

The screenshot displays the Thunderbolt PTP GM200 web interface. At the top, a dark blue header bar contains a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message: 'Welcome trimblesuper. You have super access rights.' Below the header, the Trimble logo and tagline 'Transforming the way the world works' are on the left, and the title 'Thunderbolt PTP GM200' is on the right. A left sidebar menu includes 'SYSTEM STATUS', 'INTERFACE MANAGEMENT', 'SYNCHRONIZATION MANAGEMENT', 'SECURITY MANAGEMENT' (highlighted in orange), 'User Authentication' (sub-item under Security), and 'SYSTEM MANAGEMENT'. The main content area is titled 'User Management' and has three tabs: 'Active Sessions' (selected), 'Users Accounts', and 'Password Rules'. Under 'Active Sessions', there is a 'List of Active Sessions' table with the following data:

	Name	Email	Service	Active
You	trimblesuper		Rem-37.13.44.93	50 mins

Below the table is a 'User Logoff' button.

- **Name:** Existing username
- **Email:** Updated email
- **Service:** IP Address used to connect to
- **Active:** The time that the session has been active

## User Management - User Accounts

Logout ☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

# Thunderbolt PTP GM200

Trimble  
Transforming the way the world works

Trimble Thunderbolt PTP GM200

SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

User Authentication

SYSTEM MANAGEMENT

### User Management

Active Sessions | **Users Accounts** | Password Rules

Account Management

Select Action:

Username:

Access Level:

Email:

Password:

Confirm Password:

**User Account Selection**

	User	Level	Email
<input type="radio"/>	trimblesuper	super	
<input type="radio"/>	trimbleadmin	admin	
<input type="radio"/>	trimble	user	
<input type="radio"/>	vcruz	super	victor_cruz@trimble.com
<input type="radio"/>	test01	super	


- **Select Action:** No Action, Add, Modify, Delete
- **Username:** New username to be added
- **Password:** New password to be chosen
- **Confirm Password:** Confirm password. Should be same as password.
- **Access Level:** User, Admin or Super(visor)
- **Email:** New email
- **User Account Selection:** This is a list of all users created in GM200

The screenshot shows the 'User Management' interface of the Thunderbolt PTP GM200. The top navigation bar includes a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message for 'trimblesuper'. The main header displays the 'Thunderbolt PTP GM200' title. On the left, a sidebar lists management categories: SYSTEM STATUS, INTERFACE MANAGEMENT, SYNCHRONIZATION MANAGEMENT, SECURITY MANAGEMENT (highlighted), User Authentication, and SYSTEM MANAGEMENT. The 'Password Rules' tab is active, showing configuration options for password criteria, complexity metrics, and requirements for different passwords when changed.

Configuration Option	Value
Preconfigured password criteria	None
Require different password when password is changed	Yes
Password rule complexity metric	6
Minimum number of characters in password	6
Minimum number of lowercase letter	0
Minimum number of uppercase letter	0
Minimum number of digits	0
Minimum number of other characters	0

- **Preconfigured password criteria:** 5 criteria of password already configured
  - None the password doesn't require any rule to be accepted by GM200
  - p0: 6 characters as minimum (complexity = 6)
  - p1: 7 characters as minimum, 1 uppercase letter as minimum (complexity 8)
  - p2: 9 characters as minimum, 1 uppercase letter as minimum, 2 lowercase letter as minimum (complexity 12)
  - p3: 10 characters as minimum, 1 uppercase letter as minimum, 2 lowercase letter as minimum, 1 digit as minimum (complexity 14)
  - p4: 11 characters as minimum, 1 uppercase letter as minimum, 2 lowercase letter as minimum, 1 digit as minimum, 1 other character as minimum (complexity 16)
- **Require different password when password is changed:** Yes or No. It sets if the user is required to enter a different password when changing their password
- **Password rule complexity metric:** the sum of all conditions configured
- **Minimum number of characters in password:** password requires <n> characters as minimum
- **Minimum number of lowercase letter:** password requires <n> lowercase letters as minimum
- **Minimum number of uppercase letter:** password requires <n> uppercase letters as minimum
- **Minimum number of digits:** password requires <n> digits as minimum
- **Minimum number of other characters:** password requires <n> other characters as minimum. These other characters can be any printable character, except for space.

## Authentication Portal

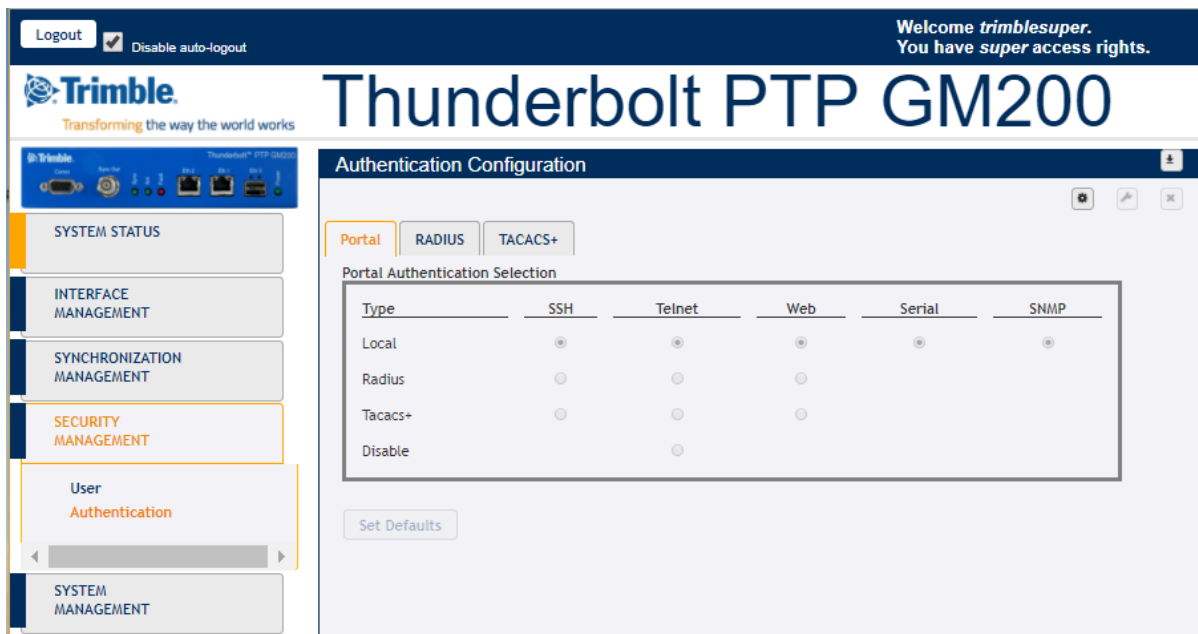

This page shows the authentication type Local, Radius or TACACS+ with the three different portal types: SSH, Telnet or Web.

'Set Defaults' button sets the authentication to the default values.

Disable option allow to disable telnet access to GM200.

## Authentication RADIUS

The screenshot shows the web interface of the Thunderbolt PTP GM200. At the top, there is a navigation bar with a 'Logout' button and a 'Disable auto-logout' checkbox. On the right, a welcome message reads: 'Welcome *trimblesuper*. You have *super* access rights.' The main header features the Trimble logo and the text 'Transforming the way the world works' followed by 'Thunderbolt PTP GM200'. A left sidebar contains a menu with the following items: 'SYSTEM STATUS', 'INTERFACE MANAGEMENT', 'SYNCHRONIZATION MANAGEMENT', 'SECURITY MANAGEMENT' (highlighted in orange), 'User Authentication' (highlighted in orange), and 'SYSTEM MANAGEMENT'. The main content area is titled 'Authentication Configuration' and has three tabs: 'Portal', 'RADIUS' (selected), and 'TACACS+'. Under the 'RADIUS' tab, there is a 'RADIUS Settings' section with the following fields: 'Primary Server Address' (0.0.0.0), 'Secondary Server Address' (0.0.0.0), 'Protocol Port' (1812), and 'Server Time Out' (3). There is also a 'Secret' field with a hyphen and a 'Set Defaults' button. Below these fields is a 'RADIUS Dictionary for GM200' section containing a text area with the following content:

```
# Copyright (c) Trimble, Inc.
# RADIUS Dictionary for the Thunderbolt GM200
# Access Levels: 1 user, 3 admin, 5 super
VENDOR      Trimble      46285
BEGIN-VENDOR Trimble
ATTRIBUTE    Trimble-AdminLevel 10 integer
END-VENDOR   Trimble
```

- **Primary Address:** Displays or allows to enter the primary server address for the RADIUS server.
- **Secondary Address:** Displays or allows to enter the secondary server address for the RADIUS server.
- **Protocol Port:** Displays or allows to set the IP port for the RADIUS server (same for primary and secondary).
- **Server Time Out:** Sets the RADIUS server timeout value. 1-60 seconds.
- **Secret:** Sets the shared secret value for the RADIUS server
- **RADIUS Dictionary**
- **Set Defaults Button:** Sets the RADIUS server information to defaults.

The screenshot shows the web interface of the Thunderbolt PTP GM200. At the top, there is a navigation bar with a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message: 'Welcome trimblesuper. You have super access rights.' Below the navigation bar is the Trimble logo and the title 'Thunderbolt PTP GM200'. On the left side, there is a sidebar menu with the following options: 'SYSTEM STATUS', 'INTERFACE MANAGEMENT', 'SYNCHRONIZATION MANAGEMENT', 'SECURITY MANAGEMENT' (highlighted in orange), 'User Authentication' (highlighted in orange), and 'SYSTEM MANAGEMENT'. The main content area is titled 'Authentication Configuration' and has three tabs: 'Portal', 'RADIUS', and 'TACACS+' (highlighted in orange). Under the 'TACACS+' tab, there is a section titled 'TACACS+ Settings' with the following fields: 'Primary Server Address' (0.0.0.0), 'Secondary Server Address' (0.0.0.0), 'Protocol Port' (49), 'Server Time Out' (3), 'Protocol Type' (ip), 'Service Type' (ppp), and 'Secret' (-). There is a 'Set Defaults' button next to the 'Secret' field.

- **Primary Address:** Displays or allows to enter the primary server address for the TACACS+ server.
- **Secondary Address:** Displays or allows to enter the secondary server address for the TACACS+ server.
- **Protocol Port:** Displays or allows to set the IP port for the TACACS+ server (same for primary and secondary).
- **Server Time Out:** Sets the TACACS+ server timeout value. 1-60 seconds.
- **Protocol Type:** Sets the TACACS+ server protocol string
- **Service Type:** Sets the TACACS+ server service string
- **Secret:** Sets the shared secret value for the RADIUS server
- **Set Defaults Button:** Sets the TACACS+ server information to defaults.

## 5.8 System Management

### Alarm

Logout

☐ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works



SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

Alarm System

## Thunderbolt PTP GM200

### Alarm Configuration

Alarm No.  
0

Name  
GNSS-Comm-E1

Level  
CRI

Set Time  
0

Clear Time  
0

Alm #	Description	Level	Set Time	Clr Time	Set
0	GNSS-Comm-E1	CRI	0	0	No
1	GNSS-Comm-E2	CRI	0	0	No
2	GNSS-Comm-Loss	CRI	2	5	No
3	GNSS-Ant-Shorted	MIN	0	2	No
4	GNSS-Ant-Open	MIN	0	2	No
5	GNSS-Track-No	MIN	0	2	No
6	PTP-PPS-Loss	MIN	0	10	No
7	GNSS-PPS-Loss	MIN	0	10	No
8	Time-Sync-Bad	MAJ	2	10	No
9	Freq-Range-Bad	CRI	0	10	No
11	GNSS-Time-Bad	MIN	0	0	No
12	Freq-Loop-Unlock	MIN	2	5	No
13	Freq-Hold-Exceed	MAJ	0	0	No
14	PPS-Sync-Bad	MAJ	5	10	No
15	Freq-Out-Bad	MAJ	0	10	No
16	PTP-System-Bad	CRI	5	10	No
17	FPGA-Load-Bad	CRI	0	0	No
18	GNSS-Pos-Integrity	MIN	60	2	No
19	UTC-Corr-Unk	MAJ	0	0	No
20	Eth-Port0-Down	MAJ	0	2	No
21	Eth-Port1-Down	IGN	0	2	No
22	Eth-Mgmt-Down	MAJ	0	2	No
23	Eth-Same-Subnet	CRI	0	0	No
24	SyncE0-Unsupported	CRI	0	0	No
25	SyncE1-Unsupported	CRI	0	0	No
26	Time-Set-Bad	CRI	0	0	No

- **Alarm No.:** Select the alarm number to be configured.
- **Level:** IGN(ignored), NFY(notification), MIN(minor),MAJ(major) or CRI(critical)
- **setTime:** Time for which the alarm condition must be active before it is set
- **clrTime:** Time for which alarm condition is inactive before it is cleared

*The table shows the list of available alarms along with their current level, set and clear time.  
The table allows changing the severity level, the set and clear time.*

## System Configuration

The screenshot shows the 'System Configuration' web interface for the Thunderbolt PTP GM200. At the top, there is a navigation bar with a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message for 'trimblesuper'. The main header features the Trimble logo and the product name 'Thunderbolt PTP GM200'. A left sidebar contains a menu with options: SYSTEM STATUS, INTERFACE MANAGEMENT, SYNCHRONIZATION MANAGEMENT, SECURITY MANAGEMENT, and SYSTEM MANAGEMENT (which is highlighted). Under SYSTEM MANAGEMENT, there are links for 'Alarm' and 'System'. The main content area is titled 'System Configuration' and has two tabs: 'System Configuration' (active) and 'System Firmware'. The 'System Configuration' tab contains a 'System Hostname' field with the value 'Thunderbolt'. Below this, there is a section for 'System Configuration' with buttons for 'Save User Config' and 'Load User Config', a file upload area with a 'Choose File' button and 'No file chosen' text, and buttons for 'Upload Config File' and 'Download Config File'. At the bottom, there is a 'Supervisor Options' section with buttons for 'Load Factory Config' and 'System Reboot'.

This tab allows Users to Configure System with following options:-

- **System Hostname:** Enter hostname
- **Save User Configuration**
- **Load User Config:**
- **Upload Config File** Load file selected in 'Choose File' button.
- **Download Conf File**
- **Load Factory Config:** To set factory configuration
- **System Reboot**



## System Software Upload

This page displays the Current System version running on Thunderbolt PTP GM200 alone with the current GNSS version and current FPGA version.

This page allows users to upload the Thunderbolt PTP GM200 firmware package to the system.

The uploading of the package doesn't automatically update the system firmware. Another step to "Update System" is required.

Logout ☒ Disable auto-logout Welcome *trimblesuper*. You have *super* access rights.

# Thunderbolt PTP GM200

Transforming the way the world works

**SYSTEM STATUS**

**INTERFACE MANAGEMENT**

**SYNCHRONIZATION MANAGEMENT**

**SECURITY MANAGEMENT**

**SYSTEM MANAGEMENT**

Alarm  
System

## System Configuration

System Configuration **System Firmware**

<u>Current System Version</u>	<u>Current GNSS Version</u>	<u>Current FPGA Version</u>
20180204-0.0.9.0	20170515-1.4.0.0	18.3.15

---

**Firmware Patch Staging**

No file chosen

---

<u>System Patches</u>	<u>GNSS Patches</u>
<input type="radio"/> 20171003-0.0.7.0.pkg	<input type="radio"/> ResSMT360_v1_03.bin
<input type="radio"/> 20171212-0.0.7.0+.pkg	<input type="radio"/> ResSMT360_v1_04.5.bin
<input type="radio"/> 20180204-0.0.9.0.pkg	

**NOTE** – The software upload tab is available when logged with super user level access.



## Chapter 6: SNMP Support

In this chapter:

[SNMP Overview](#)

[SNMP Traps & MIB](#)

This chapter describes the SNMP and SNMP notification setting procedure for Thunderbolt PTP Grandmaster Clock GM200.

## 6.1 SNMP Overview

Simple Network Management Protocol (SNMP) is an Internet-standard application-layer protocol for managing and monitoring network elements. It has been defined by the Internet Engineering Task Force (IETF) under RFC 1157 for exchanging management information between network devices.

An SNMP-managed network consists of three key components:

- Managed device
- Agent — software which runs on managed devices
- Network management station (NMS) — software which runs on the manager

SNMP agents expose management data on the managed systems as variables. The variables accessible via SNMP are organized in hierarchies. These hierarchies, and other metadata (such as type and description of the variable), are described by Management Information Bases (MIBs).

Thunderbolt PTP GMC supports SNMP v2c.

## 6.2 SNMP Traps

SNMP traps enable an agent to notify the management station of significant events by way of an unsolicited SNMP message.

Thunderbolt PTP Grandmaster Clock GM-200 provides a command line interface to enable the traps. (Refer to [Chapter 4: Command Line Interface Reference](#))

## 6.3 Accessing the SNMP MIB Files

Thunderbolt PTP Grandmaster Clock GM-200's private MIB files can be downloaded through the WebUI of the system. The MIB download option is available under the "Interface Management" tab of the unit.

The Thunderbolt PTP Grandmaster Clock GM-200's SNMP MIB consist of two files:

- TRIMBLE-MIB.mib
- TRIMBLE-TBOLT2-MIB.mib

## Chapter 7: GM200 Provisioning

In this chapter:


CLI Command Set for  
provisioning

WebUI used

This chapter describes the basic GM200 configuration steps when customer will interact with the first time. There are examples of CLI commands used for provisioning, as well the equivalent WebUI configuration.

## 7.1 Help Commands

### 7.1.1 help set

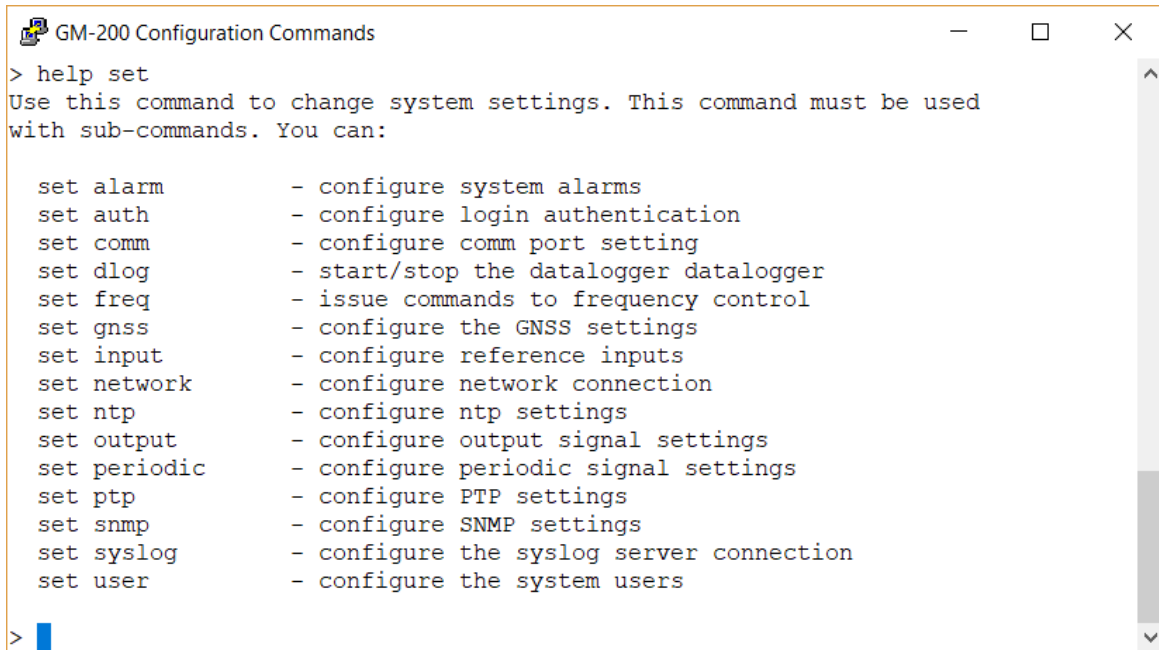

```
GM-200 Configuration Commands
> help set
Use this command to change system settings. This command must be used
with sub-commands. You can:

set alarm          - configure system alarms
set auth           - configure login authentication
set comm           - configure comm port setting
set dlog           - start/stop the datalogger datalogger
set freq           - issue commands to frequency control
set gnss           - configure the GNSS settings
set input          - configure reference inputs
set network        - configure network connection
set ntp            - configure ntp settings
set output         - configure output signal settings
set periodic       - configure periodic signal settings
set ptp            - configure PTP settings
set snmp           - configure SNMP settings
set syslog         - configure the syslog server connection
set user           - configure the system users

> 
```

There is not an equivalent in WebUI since this web user interface is very intuitive.

## 7.1.2 help set ptp

```
GM-200 Configuration Commands

> help set ptp
Use this command to configure the PTP interface.

Format:
    set ptp eth0|eth1 <options>

Where <options> are:
    default      Restore default settings for the used profile.
    disable      Disable this PTP port. PTP on the interface must
                  be disabled before any configuration changes are
                  allowed.
    enable       Enable this PTP port. By default all ports are
                  enabled.
    mode <m>     Set the current clock mode. <m> may be one of:
                  master - this port is to operate as a GM output.
                  slave  - this port is to operate as a slave clock,
                           making this available to be selected as an
                           input. Note that for this to be used by the
                           system as a clock source also requires the
                           port is set as a selectable input with the
                           set input command.
    profile <p>  Set the current profile. <p> may be one of:
                  g8275      - select the g8275 profile
                  g8275.1    - select the g8275.1 profile
                  g8275.2    - select the g8275.2 profile
                  g8265      - select the g8265 profile, with Option-II
                           clock class output
                  g8265-i    - Select the g8265.1 profile, with Option-I
                           clock class output
                  1588       - select IEEE-1588 operational defaults
                  power      - select the Power (C37.238 2011) profile.
                  smpte      - select the SMPTE (ST-2059-2) profile.
                  telecom     - select the IEEE-1588 Telecom profile.
                  enterprise  - select the enterprise (prelim) profile
    dscp <d>     Set the DSCP (Differentiated Services Code Point) field to
                  <d> for the PTP traffic generated from this port. This
                  may be disabled (default) by either setting <d> to '0'
                  or '-'.

The following options allow altering profiles. Note that the ability
to alter profile settings is determined by the profile selected. In
addition, the profile may limit the allowable values.

    ai <n>       Set the announce interval.
    ar <n>       Set the announce receipt timeout. The number of announce
                  intervals allowed to pass without the receipt of an
                  announce message.
    class <n>    Set the clock class.
    df <n>       Set the duration field (for unicast grant messages).
                  Range: dependent on profile, absolute range 10 - 1000.
                  Most profiles have a default of 300.
    dm <a>       Set the delay mechanism, may be one of E2E or P2P.
    domain <n>   Set the domain number for the profile.
    dr <n>       Set the delay request interval.
    pdr <n>      Set the pdelay request interval (only some profiles)
    grantor <g> For PTP unicast input profiles only: this allows setting
                  the unicast GrandMasters to use as the 'grantor' for the
                  requests. <g> may be a comma separated list of up to 3
                  GMs to use. This list must contain no spaces and be made
                  up of the same transport types (i.e. no mixing of IPv6
                  and IPv4 addresses).
    ipmode <a>   Set the IP Mode of operation. May be one of:
                  multi - set Multicast mode
                  uni   - set Unicast mode
                  hybrid - set Hybrid mode; allow multicast for GM
                           announcement and sync, but time information delivered
                           through unicast requests from slave clocks.
    pri1 <n>     Set the priority 1 value. This must be a number from
                  0 to 255.
    pri2 <n>     Set the priority 2 value. This must be a number from
                  0 to 255.
    si <n>       Set the sync interval.
    sm <n>       Set the step mode. Must be '1' or '2'.
    transport <a> Set the transport mechanism. May be one of:
                  IPv4 - IPv4 transport
                  IPv6 - IPv6 transport
                  eth  - 802.3 transport
    ttl <t>      Set the multicast ttl value for the transmission. Note
                  that this setting is only available if the profile
                  selected allows multicast. Any valid TTL may be
                  set (1-255) but, realistically, the user should limit
                  their value to be between 1 and 6. Please be aware
                  that a profile may limit the range even further than
                  the 1-6 values.

NOTE: You must disable PTP on the port you are making operational
changes on before any changes are allowed.

Examples:
    set ptp eth1 disable profile g8275 domain 30 ttl 3

>
```

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.

You have *super* access rights.

Transforming the way the world works

# Thunderbolt PTP GM200

SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

PTP

NTP

GNSS

Sync Source

Output

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

## PTP Configuration

Ethernet Port 0

Ethernet Port 1

PTP Port Status	Domain Number	PTP Clock ID
Disabled	-999	Not operational
PTP Profile	Announce Interval	Priority 1
G8275.1	-999	-999
Sync Mode	Announce Timeout	Priority 2
One-Step	-999	-999
Transport Protocol	Sync Interval	Clock Class
802.3	-999	-999
IP Mode	Delay Request Interval	Multicast TTL
Multicast	-999	-999
Delay Mechanism	P2P Delay Request Interval	DiffServ Code Point
P2P	-999	-999
PTP Mode	Grantor Address	Lease Duration
GrandMaster	-	-999




## 7.2 View System and Hardware Version

### 7.2.1 view version

```
GM-200 Configuration Commands
>
>
>
>
>
>
>
> view version
20180204-0.0.9.0, February 04 2018 11:03:26
>
```

[Logout](#) ☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

 Transforming the way the world works

# Thunderbolt PTP GM200

SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

## System Status


<b>Alarm Status</b> Major	<b>Input Status</b> GNSS: Lock
<b>Configuration Status</b> Configuration is not saved	<b>Output Status</b> Sync Out: PPS
<b>Management Port Status</b> Connected 100MB	<b>Product ID</b> 111224-10
<b>Session Status</b> 1 active session	<b>Software Version</b> 20180204-0.0.9.0
<b>Ethernet Port 0 Status</b> Not Connected SyncE is Off NTP Server PTP is Disabled	<b>Date (UTC)</b> 03/02/2018 02:45 <b>Date (Local)</b> 03/01/2018 20:45
<b>Ethernet Port 1 Status</b> Not Connected SyncE is Off NTP Server PTP is Disabled	<b>Host Up Time</b> 20:14 <b>Host Name</b> Thunderbolt


## 7.2.2 view prodconf

```
GM-200 Configuration Commands
>
>
>
>
> view prodconf
Serial Number: 1370000073
  Build Date: 09/01/2017 15
  Premium bits: 00000000
  Product ID: 111224-10
  Hardware ID: 111222-00
  Extended S/N:
>
>
>
>
```

[Logout](#) ☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

 **Thunderbolt PTP GM200**  
Transforming the way the world works



**SYSTEM STATUS**

- Alarms and Events
- System Info**
- Timing
- GNSS
- Network

**INTERFACE MANAGEMENT**

**SYNCHRONIZATION MANAGEMENT**

**SECURITY MANAGEMENT**

**SYSTEM MANAGEMENT**

**System Information**

<b>Product ID</b> 111224-10	<b>Time (UTC)</b> 03/02/2018 02:48
<b>Hardware ID</b> 111222-00	<b>Up Time</b> 20:17
<b>Serial Number</b> 1370000073	<b>CPU Load Average</b> 19 %
<b>Extended S/N</b> -	<b>System Temperature</b> 35.0 °C
<b>Software Version</b> 20180204-0.0.9.0	<b>Memory - Active</b> 223412 kB
<b>Hardware Build Date</b> 09/01/2017 15	<b>Memory - Available</b> 978924 kB

[Download Support Info](#)

[Realtime Graph View](#)

[System Stats](#) ▼

[Close Graph](#)

## 7.3 View Alarms, Status and Firmware


### 7.3.1 get alarm

```
GM-200 Configuration Commands
>
>
> get alarm
Current alarm settings:
#           Alarm Desc           Level   Set Time   Clr Time
-----
0          GNSS-Comm-E1          CRI      0          0
1          GNSS-Comm-E2          CRI      0          0
2          GNSS-Comm-Loss        CRI      2          5
3          GNSS-Ant-Shorted      MIN      0          2
4          GNSS-Ant-Open         MIN      0          2
5          GNSS-Track-No         MIN      0          2
6          PTP-PPS-Loss          MIN      0         10
7          GNSS-PPS-Loss         MIN      0         10
8          Time-Sync-Bad         MAJ      2         10
9          Freq-Range-Bad        CRI      0         10
11         GNSS-Time-Bad         MIN      0          0
12         Freq-Loop-Unlock      MIN      2          5
13         Freq-Hold-Exceed      MAJ      0          0
14         PPS-Sync-Bad          MAJ      5         10
15         Freq-Out-Bad          MAJ      0         10
16         PTP-System-Bad        CRI      5         10
17         FPGA-Load-Bad         CRI      0          0
18         GNSS-Pos-Integrity    MIN     60          2
19         UTC-Corr-Unk          MAJ      0          0
20         Eth-Port0-Down        MAJ      0          2
21         Eth-Port1-Down        MAJ      0          2
22         Eth-Mgmt-Down         MAJ      0          2
23         Eth-Same-Subnet       CRI      0          0
24         SyncE0-Unsupported    CRI      0          0
25         SyncE1-Unsupported    CRI      0          0
26         Time-Set-Bad          CRI      0          0
>
```

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

 Transforming the way the world works

SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

Alarm System

## Thunderbolt PTP GM200

### Alarm Configuration

Alarm No. 0

Name GNSS-Comm-E1

Level CRI

Set Time 0

Clear Time 0

Aim #	Description	Level	Set Time	Clr Time	Set
0	GNSS-Comm-E1	CRI	0	0	No
1	GNSS-Comm-E2	CRI	0	0	No
2	GNSS-Comm-Loss	CRI	2	5	No
3	GNSS-Ant-Shorted	MIN	0	2	No
4	GNSS-Ant-Open	MIN	0	2	No
5	GNSS-Track-No	MIN	0	2	No
6	PTP-PPS-Loss	MIN	0	10	No
7	GNSS-PPS-Loss	MIN	0	10	No
8	Time-Sync-Bad	MAJ	2	10	No
9	Freq-Range-Bad	CRI	0	10	No
11	GNSS-Time-Bad	MIN	0	0	No
12	Freq-Loop-Unlock	MIN	2	5	No
13	Freq-Hold-Exceed	MAJ	0	0	No
14	PPS-Sync-Bad	MAJ	5	10	No
15	Freq-Out-Bad	MAJ	0	10	No
16	PTP-System-Bad	CRI	5	10	No
17	FPGA-Load-Bad	CRI	0	0	No
18	GNSS-Pos-Integrity	MIN	60	2	No
19	UTC-Corr-Unk	MAJ	0	0	No
20	Eth-Port0-Down	MAJ	0	2	Yes
21	Eth-Port1-Down	MAJ	0	2	Yes
22	Eth-Mgmt-Down	MAJ	0	2	No
23	Eth-Same-Subnet	CRI	0	0	No
24	SyncE0-Unsupported	CRI	0	0	No
25	SyncE1-Unsupported	CRI	0	0	No
26	Time-Set-Bad	CRI	0	0	No


### 7.3.2 view logs

```
GM-200 Configuration Commands
>
>
>
> view logs
2018-02-14 04:52:18.446 cli : Firmware update ended.
2018-02-14 04:52:18.467 cli : Firmware update started.
2018-02-14 04:52:21.263 cli : Firmware update ended.
2018-02-14 04:52:23.175 cli : Firmware update started.
2018-02-14 04:52:23.198 cli : Firmware update ended.
2018-02-14 04:52:23.219 cli : Firmware update started.
2018-02-14 04:52:25.529 cli : Firmware update ended.
2018-02-14 04:52:27.832 cli : Firmware update started.
2018-02-14 04:52:27.853 cli : Firmware update ended.
2018-02-14 04:52:32.573 cli : Firmware update started.
2018-02-14 04:52:32.595 cli : Firmware update ended.
2018-02-14 04:52:32.616 cli : Firmware update started.
2018-02-14 04:52:34.702 cli : Firmware update ended.
2018-02-14 04:52:36.696 cli : Firmware update started.
2018-02-14 04:52:36.718 cli : Firmware update ended.
2018-02-14 04:57:07.594 cli : Firmware update ended.
2018-02-14 04:57:07.723 cfg : 'vcruz' LOGOUT as super on Rem-::ffff:37.13.44.93:58461
2018-02-14 17:00:58.584 cfg : 'vcruz' LOGIN as super on Rem-::ffff:37.13.44.94:63373
2018-02-14 17:13:27.547 cfg : 'vcruz' LOGOUT as super on Rem-::ffff:37.13.44.94:63373
2018-02-15 01:43:13.654 cfg : 'vcruz' LOGIN as super on Rem-::ffff:37.13.44.94:51698
>
>
>
>
```


```
GM-200 Configuration Commands
>
>
>
> view logs cfg
2018-02-14 04:46:54.801 cfg : 'vcruz' LOGOUT as super on Rem-37.13.44.94
2018-02-14 04:46:54.806 cfg : 'vcruz' LOGOUT as super on Rem-37.13.44.94
2018-02-14 04:47:25.786 cfg : 'vcruz' LOGOUT as super on Rem-37.13.44.94
2018-02-14 04:47:25.789 cfg : 'trimblesuper' LOGOUT as super on Rem-37.13.44.94
2018-02-14 04:47:56.905 cfg : 'vcruz' LOGOUT as super on Rem-37.13.44.94
2018-02-14 04:48:17.771 cfg : 'vcruz' LOGOUT as super on Rem-37.13.44.93
2018-02-14 04:48:27.819 cfg : 'vcruz' LOGOUT as super on Rem-37.13.44.94
2018-02-14 04:49:30.361 cfg : 'vcruz' LOGOUT as super on Rem-::ffff:37.13.44.94:51099
2018-02-14 04:49:30.821 cfg : 'vcruz' LOGOUT as super on Rem-::ffff:37.13.44.93:51505
2018-02-14 04:50:17.282 cfg : Change SNMP Version: v2c
2018-02-14 04:50:17.293 cfg : Change SNMP Host IP: 37.13.44.113
2018-02-14 04:50:17.297 cfg : Change SNMP Host Port: 162
2018-02-14 04:50:17.301 cfg : Change SNMP Community: public
2018-02-14 04:50:17.304 cfg : Change SNMP Read-only community: public
2018-02-14 04:50:17.309 cfg : Change SNMP Read-write community: private
2018-02-14 04:50:40.558 cfg : 'vcruz' LOGIN as super on Rem-::ffff:37.13.44.93:58461
2018-02-14 04:57:07.723 cfg : 'vcruz' LOGOUT as super on Rem-::ffff:37.13.44.93:58461
2018-02-14 17:00:58.584 cfg : 'vcruz' LOGIN as super on Rem-::ffff:37.13.44.94:63373
2018-02-14 17:13:27.547 cfg : 'vcruz' LOGOUT as super on Rem-::ffff:37.13.44.94:63373
2018-02-15 01:43:13.654 cfg : 'vcruz' LOGIN as super on Rem-::ffff:37.13.44.94:51698
>
>
>
>
```

Logout
☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.



# Thunderbolt PTP GM200



SYSTEM STATUS

Alarms and Events  
System Info  
Timing  
GNSS  
Network

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

Alarm Status and Event Log

Alarms

Event Log

Event Filter

Number of Events

Download Log

Clear Log

Event Filter	Number of Events
All	All


```

2018-03-02 02:43:00.852 scgi : Firmware update ended.
2018-03-02 02:42:59.082 scgi : Firmware update started.
2018-03-02 02:42:49.864 scgi : Firmware update ended.
2018-03-02 02:42:48.074 scgi : Firmware update started.
2018-03-02 02:42:38.858 scgi : Firmware update ended.
2018-03-02 02:42:37.088 scgi : Firmware update started.
2018-03-02 02:42:27.860 scgi : Firmware update ended.
2018-03-02 02:42:26.104 scgi : Firmware update started.
2018-03-02 02:42:16.858 scgi : Firmware update ended.
2018-03-02 02:42:15.110 scgi : Firmware update started.
2018-03-02 02:42:05.845 scgi : Firmware update ended.
2018-03-02 02:42:04.081 scgi : Firmware update started.
2018-03-02 02:41:54.977 scgi : Firmware update ended.
2018-03-02 02:41:53.157 scgi : Firmware update started.
2018-03-02 02:41:43.862 scgi : Firmware update ended.
2018-03-02 02:41:42.084 scgi : Firmware update started.
2018-03-02 02:41:32.861 scgi : Firmware update ended.
2018-03-02 02:41:31.081 scgi : Firmware update started.
2018-03-02 02:41:21.855 scgi : Firmware update ended.
2018-03-02 02:41:20.105 scgi : Firmware update started.
2018-03-02 02:41:10.866 scgi : Firmware update ended.
2018-03-02 02:41:09.124 scgi : Firmware update started.
2018-03-02 02:40:59.890 scgi : Firmware update ended.
2018-03-02 02:40:58.137 scgi : Firmware update started.
2018-03-02 02:40:48.850 scgi : Firmware update ended.
2018-03-02 02:40:47.074 scgi : Firmware update started.


```

Logout
☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.



# Thunderbolt PTP GM200



SYSTEM STATUS

Alarms and Events  
System Info  
Timing  
GNSS  
Network

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

Alarm Status and Event Log

Alarms

Event Log

Event Filter

Number of Events

Download Log

Clear Log

Event Filter	Number of Events
Config Mo...	All

```

2018-03-02 01:56:38.239 cfg : 'voruz' LOGOUT as admin on Rem-::ffff:37.13.44.93:53352
2018-03-02 01:48:27.686 cfg : 'voruz' LOGIN as admin on Rem-::ffff:37.13.44.93:53352
2018-03-02 01:25:45.231 cfg : 'voruz' LOGOUT as admin on Rem-::ffff:37.13.44.93:53140
2018-03-02 01:25:03.114 cfg : 'voruz' LOGIN as admin on Rem-::ffff:37.13.44.93:53140
2018-03-02 01:06:57.536 cfg : 'trimblesuper' LOGIN as super on Rem-37.13.44.93
2018-03-01 06:47:44.601 cfg : 'voruz' LOGOUT as admin on Rem-37.13.44.93
2018-03-01 06:41:39.234 cfg : 'voruz' LOGOUT as admin on Comm-1
2018-03-01 06:34:55.500 cfg : 'voruz' LOGIN as admin on Rem-37.13.44.93
2018-03-01 06:34:46.371 cfg : 'voruz' LOGOUT as admin on Rem-37.13.44.93
2018-03-01 06:31:44.412 cfg : 'voruz' LOGIN as admin on Rem-37.13.44.93
2018-03-01 06:31:38.875 cfg : 'voruz' LOGIN as admin on Comm-1
1970-01-01 00:00:28.690 cfg : Change SNMP Read-write community: private
1970-01-01 00:00:28.683 cfg : Change SNMP Read-only community: public
1970-01-01 00:00:28.679 cfg : Change SNMP Community: public
1970-01-01 00:00:28.676 cfg : Change SNMP Host Port: 162
1970-01-01 00:00:28.673 cfg : Change SNMP Host IP: 0.0.0.0
1970-01-01 00:00:28.656 cfg : Change SNMP Version: v2c
1970-01-01 00:06:09.184 cfg : Change SNMP Read-write community: private
1970-01-01 00:06:09.177 cfg : Change SNMP Read-only community: public
1970-01-01 00:06:09.174 cfg : Change SNMP Community: public
1970-01-01 00:06:09.170 cfg : Change SNMP Host Port: 162
1970-01-01 00:06:09.167 cfg : Change SNMP Host IP: 0.0.0.0
1970-01-01 00:06:09.153 cfg : Change SNMP Version: v2c
2018-03-01 06:14:33.233 cfg : 'voruz' LOGIN as admin on Rem-37.13.44.93
2018-03-01 06:14:15.666 cfg : 'voruz' LOGOUT as admin on Rem-37.13.44.93
2018-03-01 06:14:03.857 cfg : 'voruz' LOGIN as admin on Rem-37.13.44.93

```

User Guide Thunderbolt® PTP GM200 Grandmaster Clock

Page | 130

## 7.4 GNSS and Lock Status


### 7.4.1 view gnss


```
GM-200 Configuration Commands
>
>
>
> view gnss
Time of Week: Thu 01:58:12 am GMT
UTC offset: 18
Leap Status: 0
Status: Normal
Constellation: GPS|GLO
Available SVs: 13
SVs Used: 13
Antenna: Off

SVs: T19(47) T11(40) T17(49) T30(47) T13(33) T06(40)
T07(48) T28(47) T01(47) T75(43) T76(42) T87(48)
T86(47)
>
>
>
>
>
```

[Logout](#) ☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

 **Thunderbolt PTP GM200**  
Transforming the way the world works



**SYSTEM STATUS**

[Alarms and Events](#)  
[System Info](#)  
[Timing](#)  
**[GNSS](#)**  
[Network](#)

**INTERFACE MANAGEMENT**

**GNSS Receiver Information**

**GNSS Receiver** **Satellite Data**

**Receiver Status**  
GNSS Quality  
11 Very Good SVs  
Receiver Operation  
Normal  
Receiver Mode  
Overdet Clock (Time)


**Position Info**  
Survey Length  
2000 secs  
Latitude  
N 19° 27.54540'  
Longitude  
W 99° 10.76855'  
Altitude  
2247.38 m HAE


**Receiver Info**  
GNSS Almanac  
Good  
Constellations  
GPS|GLO  
UTC Offset  
18  
Pending Leap  
0

**Antenna Info**  
Antenna Delay  
0 ns

[Logout](#) ☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

 **Thunderbolt PTP GM200**  
Transforming the way the world works



**SYSTEM STATUS**

[Alarms and Events](#)  
[System Info](#)  
[Timing](#)  
**[GNSS](#)**  
[Network](#)

**INTERFACE MANAGEMENT**

**GNSS Receiver Information**

**GNSS Receiver** **Satellite Data**

SV	C/No	Az.	Elev.
6	48.0	214.0	81.0
19	47.0	345.0	48.0
30	41.0	161.0	20.0
17	46.0	14.0	41.0
13	36.0	232.0	12.0
24	30.0	313.0	18.0
28	42.0	85.0	43.0

SV	C/No	Az.	Elev.
2	49.0	221.0	42.0
76	45.0	339.0	71.0
87	48.0	270.0	39.0
75	47.0	148.0	55.0
86	45.0	354.0	43.0
77	0.0	333.0	10.0


## 7.4.2 get gnss

```
HALORevD
>
>
>
>
>
>
> get gnss
Constellation: GPS|GLO
Elevation mask: 10.0 deg
Signal level mask: 0.00 db/Hz
PDOP mask: 3.0
Antenna delay: 0 ns
Pos: auto
Survey length: 2000
Antenna: Off
>
>
>
>
>
>
```

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works

Thunderbolt® PTP GM200

SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

PTP

NTP

GNSS

Sync Source

Output

SECURITY MANAGEMENT

GNSS Configuration

Constellation Selection

☒ GPS ☒ GLONASS ☐ Beidou ☐ Galileo ☐ QZSS

Position Settings

Positioning Mode

Automatic

Survey Length (secs)

2000

Latitude (degrees)

19.45909

Elevation Mask

10.0

Longitude (degrees)

-99.17947

PDOP Mask

3.0

Height (meters)

2247.38

Signal Level Mask

0.00

Receiver Status

Normal

Receiver Mode

Overdet Clock (Time)

Antenna Delay (nS)

0


Restart GNSS Receiver

Do nothing

### 7.4.3 view freq

```
HALORevD
>
>
>
>
> view freq
Time: 2018-02-15 02:00:20
Mode: Lock
Temp: 36.1
GnssTemp: 35.9
Tau: 40
Ref: GNSS
RawPhase: -5.00E-09
Phase: +0.8 ns
Sigma: +0.9 ns
Freq: -3.063455E-07
DeltaF: -2.4E-11
Hold Time: 0 secs
Used?: 1
>
>
>
```

[Logout](#) ☒ Disable auto-logout Welcome *trimblesuper*.  
You have *super* access rights.

 **Thunderbolt PTP GM200**

SYSTEM STATUS

Alarms and Events

System Info

Timing

GNSS

Network

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

Timing Information

Timing Status

NTP Status

PTP Status

Input Status

Sync Source

GNSS

Output Status

Sync Out

PPS

Sync Source Statistics

Sync Source	Phase Offset	Mean	Sigma	Freq Offset
GNSS	0.610 ns	-0.602 ns	3.725 ns	-0.00022 ppb

Control Loop Status

Loop State	Holdover	Phase Offset	Freq Offset	Delta Freq
Lock	1 seconds	-0.306ns	-3.06193e-07	1.210e-12

Realtime Graph View

Sync Source

Graph Type

Close Graph



## 7.5 Network Configuration

### 7.5.1 get network

```
HALORevD
>
> get network

Current settings for eth0:
  Status: Not Present
  IPv4Mode: Static
  Address: 1.1.1.251
  Mask: 255.255.255.0
  Broadcast: 1.1.1.255
  Gateway: 1.1.1.1
  IPv6Mode: Static
  IPv6 Addr: fd6b:fd64:9e0c::/128 Scope:Global
  syncE: Off


Current settings for eth1:
  Status: Not Connected
  IPv4Mode: Static
  Address: 4.4.4.251
  Mask: 255.255.255.0
  Broadcast: 4.4.4.255
  Gateway:
  IPv6Mode: Static
  IPv6 Addr: fd6b:fd64:9e0c:1::/128 Scope:Global
  syncE: Off

Current settings for eth2:
  Status: Connected 100MB
  IPv4Mode: Static
  Address: 37.13.44.151
  Mask: 255.255.255.0
  Broadcast: 37.13.44.255
  Gateway: 37.13.44.1
  IPv6Mode: Static
  IPv6 Addr: fd6b:fd64:9e0c:2::/128 Scope:Global
  IPv6 Addr: fe80::217:47ff:fe7f:feb4/64 Scope:Link
>
```

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works

SYSTEM STATUS

Alarms and Events  
System Info  
Timing  
GNSS  
**Network**

INTERFACE  
MANAGEMENT

SYNCHRONIZATION  
MANAGEMENT

Thunderbolt PTP GM200

Network Information

Ethernet Port 0

Ethernet Port 1

Management Port

Ethernet Statistics

Connection Status  
Not Connected

MAC Address  
00:17:47:7F:FE:B2

IPv4 Assignments  
Address - Static  
1.1.1.251

Subnet Mask  
255.255.255.0

Gateway  
1.1.1.1

Broadcast  
1.1.1.255

IPv6 Assignments

Ethernet Assignments  
VLAN IDs  
20, 30

SyncE Status  
Off


**Note:** Each network interface should be on different subnet

## 7.5.2 set network

```
GM200 Configuration Commands
>
>
> set network eth0 disable
Interface: eth0
Disabling interface
>
> set network eth0 addr 1.1.1.251 mask 255.255.255.0 gateway 1.1.1.1
Interface: eth0
Setting IP address to 1.1.1.251
Setting network mask to 255.255.255.0
Setting gateway address to 1.1.1.1
>
>
>
>
>
>
```

Logout ☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works

# Thunderbolt PTP GM200

SYSTEM STATUS

INTERFACE MANAGEMENT

Ethernet

VLAN

SNMP

Syslog

Serial Port

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

SYSTEM

### Ethernet Configuration

Ethernet Port 0 Ethernet Port 1 Management Port

Port Configuration

Static

Connection Status

Not Connected

SyncE Configuration

Off

SyncE support unknown

IPv4 Assignments

Address

1.1.1.251

Subnet Mask

255.255.255.0

Gateway

1.1.1.1

Broadcast

1.1.1.255

IPv6 Assignments

IPv6 Mode

SLAAC

Address

-

Scope

Global

IPv4 Address

<IPv4 address to ping>

Ping IPv4

IPv6 Address

<IPv6 address to ping>

Ping IPv6


### 7.5.3 get network eth<x>


```
GM200 Configuration Commands
>
>
>
> get network eth0

Current settings for eth0:
  Status: Not Present
  IPv4Mode: Static
  Address: 1.1.1.251
  Mask: 255.255.255.0
  Broadcast: 1.1.1.255
  Gateway: 1.1.1.1
  IPv6Mode: Static
  IPv6 Addr: fd6b:fd64:9e0c::/128 Scope:Global
  syncE: Off
>
>
>
>
>
```

[Logout](#) ☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

 **Thunderbolt PTP GM200**

 **SYSTEM STATUS**

Alarms and Events

System Info

Timing

GNSS

**Network**

**INTERFACE MANAGEMENT**

**SYNCHRONIZATION MANAGEMENT**

**Network Information**

**Ethernet Port 0**

Ethernet Port 1

Management Port

Ethernet Statistics

Connection Status  
Not Connected

MAC Address  
00:17:47:7F:FE:B2

IPv4 Assignments

Address - Static  
1.1.1.251

Subnet Mask  
255.255.255.0

Gateway  
1.1.1.1

Broadcast  
1.1.1.255

IPv6 Assignments

Ethernet Assignments

VLAN IDs  
20, 30

SyncE Status  
Off


## 7.5.4 view network eth<x>

```
GM200 Configuration Commands
>
>
>
> view network eth2

Current stats for eth2:
    Status: Connected 100MB
    Mode: Static
Collisions: 0
    RX Bytes: 344 kB
RX Packets: 4987
RX Dropped: 639
    RX Errors: 1265

    TX Bytes: 463 kB
TX Packets: 1989
TX Dropped: 0
    TX Errors: 0
>
>
>
```

[Logout](#) ☒ [Disable auto-logout](#) Welcome *trimblesuper*.  
You have *super* access rights.

Transforming the way the world works

# Thunderbolt PTP GM200

SYSTEM STATUS

Alarms and Events  
System Info  
Timing  
GNSS  
**Network**

INTERFACE  
MANAGEMENT

SYNCHRONIZATION  
MANAGEMENT

SECURITY  
MANAGEMENT

SYSTEM  
MANAGEMENT

Ethernet Port 0Ethernet Port 1Management Port**Ethernet Statistics**

Statistic	Ethernet Port 0	Ethernet Port 1	Management Port
RX Bytes	N/A	N/A	18 MB
RX Packets	N/A	N/A	71133
RX Packets/Sec	N/A	N/A	2
RX Dropped	N/A	N/A	3
RX Errors	N/A	N/A	0
TX Bytes	N/A	N/A	42 MB
TX Packets	N/A	N/A	70532
TX Packets/Sec	N/A	N/A	3
TX Dropped	N/A	N/A	0
TX Errors	N/A	N/A	0
	1-second	10-seconds avg	
RX+TX Pkts/Sec	5	5	



## 7.6.2 get network eth0

```
GM200 Configuration Commands
> get network eth0

Current settings for eth0:
  Status: Not Present
  IPv4Mode: Static
  Address: 1.1.1.251
  Mask: 255.255.255.0
  Broadcast: 1.1.1.255
  Gateway: 1.1.1.1
  IPv6Mode: Static
  IPv6 Addr: fd6b:fd64:9e0c::/128 Scope:Global
  VLAN IDs: 20, 30
  syncE: Off


Current settings for eth0.20:
  Status: Not Present
  IPv4Mode: Static
  Address: 15.15.15.15
  Mask: 255.255.255.0
  Broadcast: 15.15.15.255
  Gateway:
  IPv6Mode: Static

Current settings for eth0.30:
  Status: Not Present
  IPv4Mode: Static
  Address: 5.5.5.5
  Mask: 255.255.255.0
  Broadcast: 5.5.5.255
  Gateway:
  IPv6Mode: Static
>
```

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights

  
Transforming the way the world works

Thunderbolt PTP GM200

SYSTEM STATUS

INTERFACE MANAGEMENT

ETHERNET

VLAN

SNMP

Syslog

Serial Port

SYNCHRONIZATION

VLAN Configuration

Ethernet Port 0 Ethernet Port 1

VLAN Configuration

VLAN ID Assignments

20 30 VID3 VID4

Priority 0

To remove a VLAN ID, delete its entry from the list.

VLAN Interface Assignments

Edit	Interface	Address	Mask	Gateway
<input type="radio"/>	eth0.20	10.0.0.1	255.255.255.0	
<input type="radio"/>	eth0.30	0.0.0.0	255.255.255.0	

Only one VLAN Interface may be assigned or modified per 'Set' command

```
GM200 Configuration Commands
>
>
>
>
>
>
>
>
>
>
>
>
>
>
>
>
>
>
>
>
> set network eth0.20 addr 3.1.30.100 mask 255.0.0.0 gateway 3.1.30.1
Interface: eth0.20
Setting IP address to 3.1.30.100
Setting network mask to 255.0.0.0
Setting gateway address to 3.1.30.1
>
>
> set network eth0.30 addr 4.1.42.100 mask 255.0.0.0 gateway 4.1.42.1
Interface: eth0.30
Setting IP address to 4.1.42.100
Setting network mask to 255.0.0.0
Setting gateway address to 4.1.42.1
>
>
>
>
>
>
```

Welcome **trimblesuper**.  
You have *super* access rights.
[Logout](#)
☒ Disable auto-logout

# Thunderbolt PTP GM200

Transforming the way the world works

VLAN Configuration

Changing VLANs will restart NTP & PTP services

Ethernet Port 0
Ethernet Port 1

### VLAN Configuration

VLAN ID Assignments

20	30	VID3	VID4	Priority 0
----	----	------	------	---------------

To remove a VLAN ID, delete it's entry from the list.

### VLAN Interface Assignments

Edit	Interface	Address	Mask	Gateway
<input type="radio"/>	eth0.20	3.1.30.100	255.0.0.0	3.1.30.1
<input type="radio"/>	eth0.30	4.1.42.100	255.0.0.0	4.1.42.1

Only one VLAN Interface may be assigned or modified per 'Set' command.

## 7.6.4 get network eth0

```
GM200 Configuration Commands
> get network eth0

Current settings for eth0:
  Status: Not Present
  IPv4Mode: Static
  Address: 1.1.1.251
  Mask: 255.255.255.0
  Broadcast: 1.1.1.255
  Gateway: 1.1.1.1
  IPv6Mode: Static
  IPv6 Addr: fd6b:fd64:9e0c::/128 Scope:Global
  VLAN IDs: 20, 30
  syncE: Off


Current settings for eth0.20:
  Status: Not Present
  IPv4Mode: Static
  Address: 3.1.30.100
  Mask: 255.0.0.0
  Broadcast: 3.255.255.255
  Gateway: 3.1.30.1
  IPv6Mode: Static

Current settings for eth0.30:
  Status: Not Present
  IPv4Mode: Static
  Address: 4.1.42.100
  Mask: 255.0.0.0
  Broadcast: 4.255.255.255
  Gateway: 4.1.42.1
  IPv6Mode: Static
>
```

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works

SYSTEM STATUS

INTERFACE MANAGEMENT

Ethernet

VLAN

SNMP

Syslog

Serial Port

SYNCHRONIZATION

# Thunderbolt PTP GM200

## VLAN Configuration

Ethernet Port 0

Ethernet Port 1

VLAN Configuration

VLAN ID Assignments

20

30

VID3

VID4

Priority

0

To remove a VLAN ID, delete it's entry from the list.

VLAN Interface Assignments

Edit	Interface	Address	Mask	Gateway
<input type="radio"/>	eth0.20	3.1.30.100	255.0.0.0	3.1.30.1
<input type="radio"/>	eth0.30	4.1.42.100	255.0.0.0	4.1.42.1

Only one VLAN Interface may be assigned or modified per 'Set' command.



## 7.7 PTP Configuration

### 7.7.1 set ptp eth1 profile g8265


*Note: stop the ptp first to setup up.*

```
GM200 Configuration Commands
>
>
>
> set ptp eth1 disable
> set ptp eth1 profile g8265
> set ptp eth1 default
> set ptp eth1 si -7 dr -7 ai -3
> set ptp eth1 enable
>
```

Logout

☒ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

Transforming the way the world works

SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

PTP

NTP

GNSS

Sync Source

Output

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

# Thunderbolt PTP GM200

## PTP Configuration

Ethernet Port 0

Ethernet Port 1

PTP Port Status	Domain Number	PTP Clock ID
Disabled	4	Not operational
PTP Profile	Announce Interval	Priority 1
G8265.1 Opt II	-3	128
Sync Mode	Announce Timeout	Priority 2
One-Step	-999	128
Transport Protocol	Sync Interval	Clock Class
IPV4	-7	84
IP Mode	Delay Request Interval	Multicast TTL
Unicast	-7	1
Delay Mechanism	P2P Delay Request Interval	DiffServ Code Point
P2P	-999	0
PTP Mode	Grantor Address	Lease Duration
GrandMaster	-	300

### 7.7.2 set ptp eth1 profile mode slave


*Note: must add grantor address when using unicast profile on slave mode.*

A screenshot of a terminal window titled "GM200 Configuration Commands". The window has standard Windows-style window controls (minimize, maximize, close) in the top right corner. The terminal displays a sequence of commands entered at a prompt. There are several blank lines at the beginning, followed by five more blank lines after the last command shown. The commands are:  

```
>  
>  
>  
>  
>  
>  
>  
>  
>  
>  
>  
>  
> set ptp eth1 disable  
> set ptp eth1 profile g8265  
> set ptp eth1 default  
> set ptp eth1 mode slave  
> set ptp eth1 grantor 192.168.0.4  
> set ptp eth1 enable  
>
```

Logout

☐ Disable auto-logout



Transforming the way the world works

# Thunderbolt PTP GM200

## PTP Configuration

SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

PTP

NTP

GNSS

Sync Source

Output

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

Thunderbolt™ PTP (GM200)


### 7.7.3 set ptp eth1 profile g8275

```
GM200 Configuration Commands
>
>
>
>
>
> set ptp eth1 disable
> set ptp eth1 profile g8275
> set ptp eth1 default
> set ptp eth1 enable
>
```

Logout

☐ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works

SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

PTP

NTP

GNSS

Sync Source

Output

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

# Thunderbolt PTP GM200


## PTP Configuration

Ethernet Port 0

Ethernet Port 1

PTP Port Status	Domain Number	PTP Clock ID
Enabled	24	001747FFFE7FFEB3-1
PTP Profile	Announce Interval	Priority 1
G8275.1	-3	128
Sync Mode	Announce Timeout	Priority 2
One-Step	3	128
Transport Protocol	Sync Interval	Clock Class
802.3	-4	248
IP Mode	Delay Request Interval	Multicast TTL
Multicast	-4	1
Delay Mechanism	P2P Delay Request Interval	DiffServ Code Point
E2E	0	0
PTP Mode	Grantor Address	Lease Duration
GrandMaster	-	300

### 7.7.4 set ptp eth1 mode slave

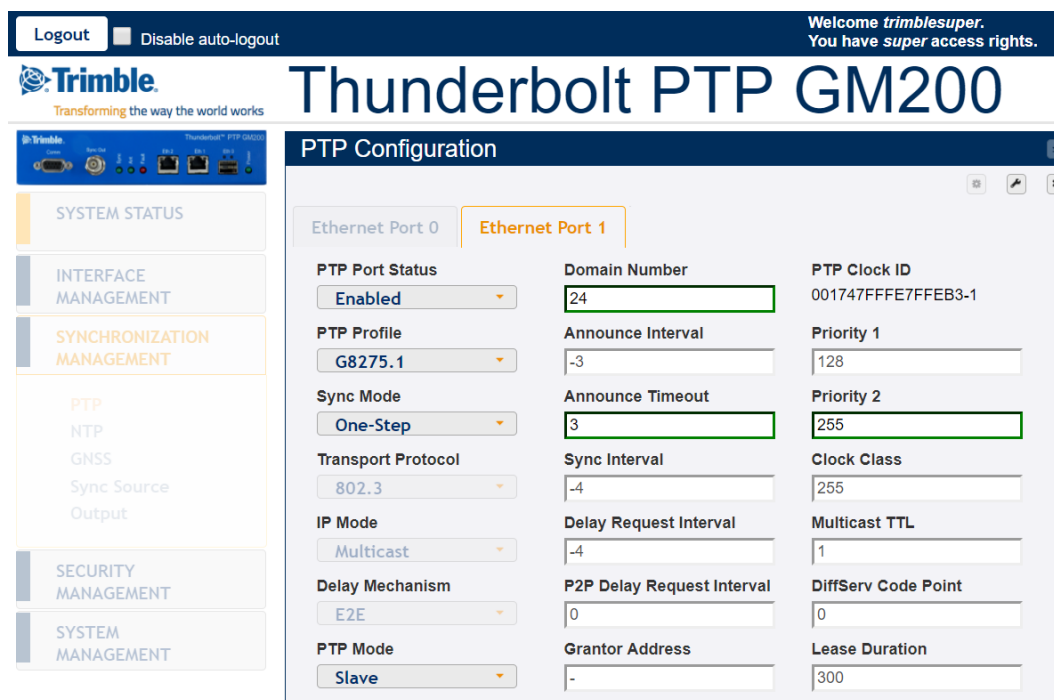

## 7.7.5 get ptp

```
GM200 Configuration Commands
>
> get ptp


PTP settings for ETH0
  Enabled : Yes
  Mode : Master
  Clock ID : 001747FFFE7FFEB2-1
  Profile : G8265.1-I
  Domain number : 4
  Transport protocol : IPV4
  IP Mode : Unicast
  Delay Mechanism : E2E
  Sync Mode : One-Step
  Clock Class : 96
  Priority 1 : 128
  Priority 2 : 128
  Sync interval : -7
  Del Req interval : -7
  PDel Req interval : 0
  Ann. interval : 0
  Ann. receipt timeout : 2

PTP settings for ETH1
  Enabled : Yes
  Mode : Slave
  Clock ID : 001747FFFE7FFEB3-1
  Profile : G8275.1
  Domain number : 24
  Transport protocol : IEEE 802.3
  IP Mode : Multicast
  Delay Mechanism : E2E
  Sync Mode : One-Step
  Clock Class : 255
  Priority 1 : 128
  Priority 2 : 255
  Sync interval : -4
  Del Req interval : -4
  PDel Req interval : 0
  Ann. interval : -3
  Ann. receipt timeout : 3
>
```

Logout

Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.



Transforming the way the world works

# Thunderbolt PTP GM200

SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

PTP

NTP

GNSS

Sync Source

Output

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

PTP Configuration


Ethernet Port 0

Ethernet Port 1


PTP Port Status	Domain Number	PTP Clock ID
Enabled	-999	Not operational
PTP Profile	Announce Interval	Priority 1
G8265.1 Opt I	0	-999
Sync Mode	Announce Timeout	Priority 2
One-Step	-999	-999
Transport Protocol	Sync Interval	Clock Class
IPV4	-7	-999
IP Mode	Delay Request Interval	Multicast TTL
Unicast	-7	-999
Delay Mechanism	P2P Delay Request Interval	DiffServ Code Point
P2P	-999	-999
PTP Mode	Grantor Address	Lease Duration
GrandMaster	-	-999

Logout
☐ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.



# Thunderbolt PTP GM200



SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

PTP

NTP

GNSS

Sync Source

Output

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

## PTP Configuration

Ethernet Port 0

Ethernet Port 1

PTP Port Status	Domain Number	PTP Clock ID
Enabled	24	001747FFFE7FFEB3-1
PTP Profile	Announce Interval	Priority 1
G8275.1	-3	128
Sync Mode	Announce Timeout	Priority 2
One-Step	3	255
Transport Protocol	Sync Interval	Clock Class
802.3	-4	255
IP Mode	Delay Request Interval	Multicast TTL
Multicast	-4	-999
Delay Mechanism	P2P Delay Request Interval	DiffServ Code Point
E2E	0	-999
PTP Mode	Grantor Address	Lease Duration
Slave	-	-999

### 7.7.6 view ptp eth1

```

>
>
>
>
>
>
>
>
>
> view ptp eth1

PTP Status ETH1:
  Phase Offset: 0.000 ns


      Clock ID: 001747FFFE7FFEB2-1
      BMC ID: 001747FFFE7FFEB2
      Domain number: 4
      Transport protocol: IPV4
      IP Mode: Unicast
      Delay Mechanism: E2E
      Sync Mode: One-Step
      Clock Class: 84
      log Variance: 4409
      Priority 1: 128
      Priority 2: 128
      Unicast clients: 2

      Ann Sync Del Addr
0: -3      -7      -7 192.168.0.100
1: 0       0       0 192.168.0.90
>
>

```

Logout

☐ Disable auto-logout


**Trimble**  
 Transforming the way the world works

# Thunderbolt PTP GM200

## Timing Information

SYSTEM STATUS

Alarms and Events

System Info

Timing

GNSS

Network

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

SECURITY

Timing Status

NTP Status

PTP Status

Ethernet Port 0

PTP Profile : Status

G8265.1-1 : GrandMaster

PTP BMC ID

001747FFFE7FFEB2

PTP Clock Class

84

Phase Offset

0.000 ns

PTP Port 0 Unicast Client Count is 0

Address

AnnInt

SyncInt

dReqInt

Ethernet Port 1

PTP Profile : Status

G8275.1 : Slave

PTP BMC ID

001747FFFE7FFEB3

PTP Clock Class

255

Phase Offset

0.000 ns

PTP Port 1 Unicast Client Count is 0

Address

AnnInt



SyncInt

dReqInt

## 7.8. SyncE Configuration


### 7.8.1 set network eth0 sync output

```
GM200 Configuration Commands
>
>
>
>
>
>
>
> set network eth0 sync output
Interface: eth0
Setting syncE to Output
>
>
> set network eth0 sync input
Interface: eth0
Setting syncE to Input
>
```

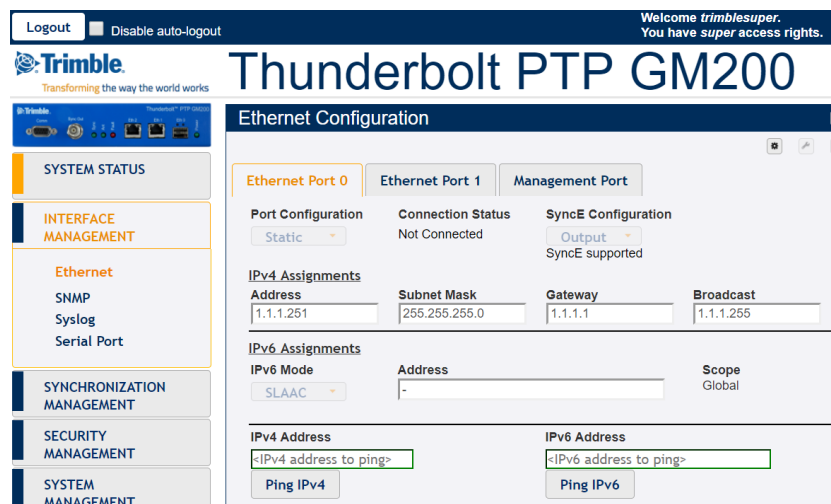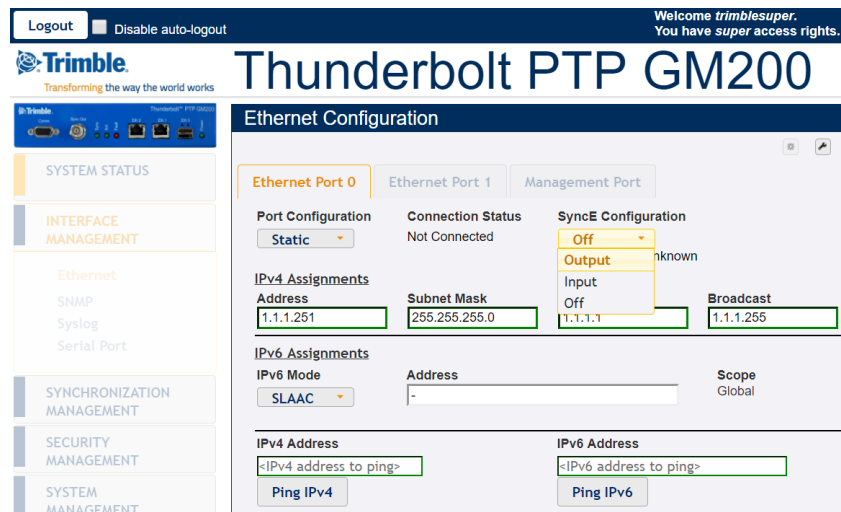




Logout
☐ Disable auto-logout
Welcome *trimblesuper*.  
You have *super* access rights.


Transforming the way the world works

# Thunderbolt PTP GM200



SYSTEM STATUS

INTERFACE MANAGEMENT

Ethernet

SNMP
Syslog
Serial Port

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

## Ethernet Configuration

Ethernet Port 0
Ethernet Port 1
Management Port

Port Configuration
Static

Connection Status
Not Connected

SyncE Configuration
Input
SyncE supported

IPv4 Assignments

Address
1.1.1.251
Subnet Mask
255.255.255.0
Gateway
1.1.1.1
Broadcast
1.1.1.255

IPv6 Assignments

IPv6 Mode
SLAAC
Address
-
Scope
Global

IPv4 Address
<IPv4 address to ping>
Ping IPv4

IPv6 Address
<IPv6 address to ping>
Ping IPv6


*Note: if there is no SFP, there will be a message 'SyncE is not supported'*

## 7.8.2 get network eth0

*Note: if there is no SFP, there will be a message 'SyncE is not supported'*

```
GM200 Configuration Commands
> set network eth0 syncE input
Interface: eth0
Setting syncE to Input
>
>
>
>
>
>
> get network eth0

Current settings for eth0:
  Status: Not Present
  IPv4Mode: Static
  Address: 1.1.1.251
  Mask: 255.255.255.0
  Broadcast: 1.1.1.255
  Gateway: 1.1.1.1
  IPv6Mode: Static
  IPv6 Addr: fd6b:fd64:9e0c::/128 Scope:Global
  syncE: Input - Unsupported
>
>
>
```

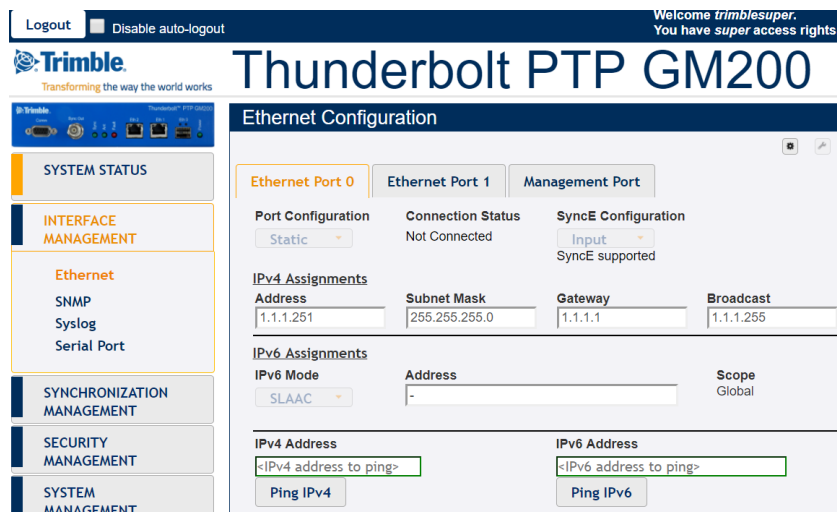


## 7.9 Input Clock Source Control

### 7.9.1 get input

```
GM200 Configuration Commands
> get input
GNSS      : Enabled
SyncE eth0 : Enabled
SyncE eth1 : Disabled
PTP eth0   : Disabled
PTP eth1   : Enabled
>
>
>
>
```

[Logout](#) ☐ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

 Transforming the way the world works

# Thunderbolt PTP GM200

SYSTEM STATUS

[Alarms and Events](#)  
[System Info](#)  
**[Timing](#)**  
[GNSS](#)  
[Network](#)

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

Timing Information

Timing Status

NTP Status

PTP Status

Input Status

Sync Source  
GNSS

Output Status

Sync Out  
PPS

Sync Source Statistics

Sync Source	Phase Offset	Mean	Sigma	Freq Offset
GNSS	9.601 ns	0.512 ns	4.086 ns	-0.00020 ppb
SyncE eth0	N/A	N/A	N/A	N/A
PTP eth1	N/A	N/A	N/A	N/A

Control Loop Status

Loop State	Holdover	Phase Offset	Freq Offset	Delta Freq
Lock	1 seconds	8.025ns	-3.05962e-07	9.364e-12

Realtime Graph View

Sync Source

Graph Type


Close Graph

### 7.9.2 set input

```
GM200 Configuration Commands
```

```
> get input  
GNSS       : Enabled  
SyncE eth0 : Disabled  
SyncE eth1 : Enabled  
PTP eth0   : Disabled  
PTP eth1   : Disabled  
  
>  
>  
>  
>  
>  
>  
>  
>  
>  
>  
>  
>  
  
> set input ptpl enable  
> set input syncel enable  
>
```


Logout    ☐ Disable auto-login



**Trimble.**

Transforming the way the world works

# Thunderbolt PTP GM200



PTP Configuration

SYSTEM STATUS

---

INTERFACE MANAGEMENT

---

SYNCHRONIZATION MANAGEMENT

---

PTP  
NTP  
GNSS  
Sync Source  
Output

---

SECURITY MANAGEMENT

---


SYSTEM MANAGEMENT

Ethernet Port 0

Ethernet Port 1

<p><b>PTP Port Status</b></p> <p><span>Enabled</span></p> <hr/> <p><b>PTP Profile</b></p> <p><span>G8275.1</span></p> <hr/> <p><b>Sync Mode</b></p> <p><span>One-Step</span></p> <hr/> <p><b>Transport Protocol</b></p> <p><span>802.3</span></p> <hr/> <p><b>IP Mode</b></p> <p><span>Multicast</span></p> <hr/> <p><b>Delay Mechanism</b></p> <p><span>E2E</span></p> <hr/> <p><b>PTP Mode</b></p> <p><span>Slave</span></p>	<p><b>Domain Number</b></p> <p><span>24</span></p> <hr/> <p><b>Announce Interval</b></p> <p><span>-3</span></p> <hr/> <p><b>Announce Timeout</b></p> <p><span>3</span></p> <hr/> <p><b>Sync Interval</b></p> <p><span>-4</span></p> <hr/> <p><b>Delay Request Interval</b></p> <p><span>-4</span></p> <hr/> <p><b>P2P Delay Request Interval</b></p> <p><span>0</span></p> <hr/> <p><b>Grantor Address</b></p> <p><span>-</span></p>
	<p><b>PTP Clock ID</b></p> <p>001747FFFE7FFE3-B1</p> <hr/> <p><b>Priority 1</b></p> <p><span>128</span></p> <hr/> <p><b>Priority 2</b></p> <p><span>255</span></p> <hr/> <p><b>Clock Class</b></p> <p><span>255</span></p> <hr/> <p><b>Multicast TTL</b></p> <p><span>1</span></p> <hr/> <p><b>Diffserv Code Point</b></p> <p><span>0</span></p> <hr/> <p><b>Lease Duration</b></p> <p><span>300</span></p>

Logout ☐ Disable auto-logout
Welcome *trimblesuper*.  
You have *super* access rights.



**Trimble**

Transforming the way the world works

# Thunderbolt PTP GM200

SYSTEM STATUS

---

INTERFACE MANAGEMENT

---

Ethernet

SNMP

Syslog

Serial Port

---

SYNCHRONIZATION MANAGEMENT

---

SECURITY

Ethernet Configuration

Ethernet Port 0
Ethernet Port 1
Management Port

**Port Configuration**

Static

**Connection Status**

Not Connected

**SyncE Configuration**

Input  
 Output  
 Input

**IPv4 Assignments**

Address	Subnet Mask	Broadcast
1.1.1.251	255.255.255.0	1.1.1.1

**IPv6 Assignments**

IPv6 Mode	Address	Scope
SLAAC	-	Global

### 7.9.3 view input

```
GM200 Configuration Commands
> set input ptpl enable
> set input syncel enable
>
>
> view input

GNSS : reference
qualified: Yes
level: 0
offset: +4.66 ns
mean: -4.60 ns
sigma: 7.29 ns
freq: +0.320 ppt


SyncE eth1 :
qualified: No
level: 7
No data available

PTP eth1 :
qualified: No
level: 7
No data available
>
```

Logout

Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.



Transforming the way the world works

SYSTEM STATUS

Alarms and Events

System Info

Timing

GNSS

Network

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

Thunderbolt PTP GM200

Timing Information

Timing Status

NTP Status

PTP Status

Input Status

Sync Source

GNSS

Sync Source Statistics

Sync Source	Phase Offset	Mean	Sigma	Freq Offset
GNSS	9.601 ns	0.512 ns	4.086 ns	-0.00020 ppb
SyncE eth0	N/A	N/A	N/A	N/A
PTP eth1	N/A	N/A	N/A	N/A

Control Loop Status

Loop State	Holdover	Phase Offset	Freq Offset	Delta Freq
Lock	1 seconds	8.025ns	-3.05962e-07	9.364e-12

Realtime Graph View

Sync Source

Graph Type

Close Graph

Output Status

Sync Out



PPS

## 7.10 Antenna Cable Delay and BNC Port Output

### 7.10.1 set gnss adelay 40

```
GM200 Configuration Commands

> get gnss
Constellation: GPS|GLO
Elevation mask: 10.0 deg
Signal level mask: 0.00 db/Hz
PDOP mask: 3.0
Antenna delay: 0 ns
Pos: auto
Survey length: 2000
Antenna: Off
> set gnss adelay 40
>
> get gnss
Constellation: GPS|GLO
Elevation mask: 10.0 deg
Signal level mask: 0.00 db/Hz
PDOP mask: 3.0
Antenna delay: 40 ns
Pos: auto
Survey length: 2000
Antenna: Off
>
>
>
```

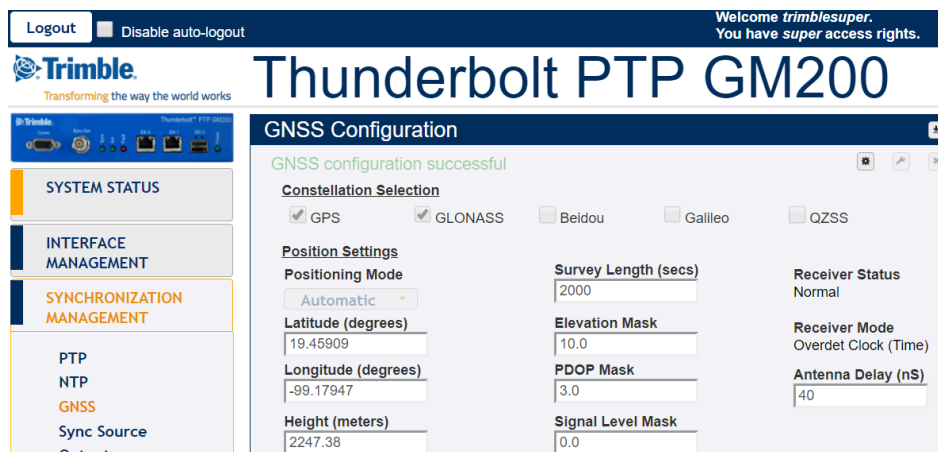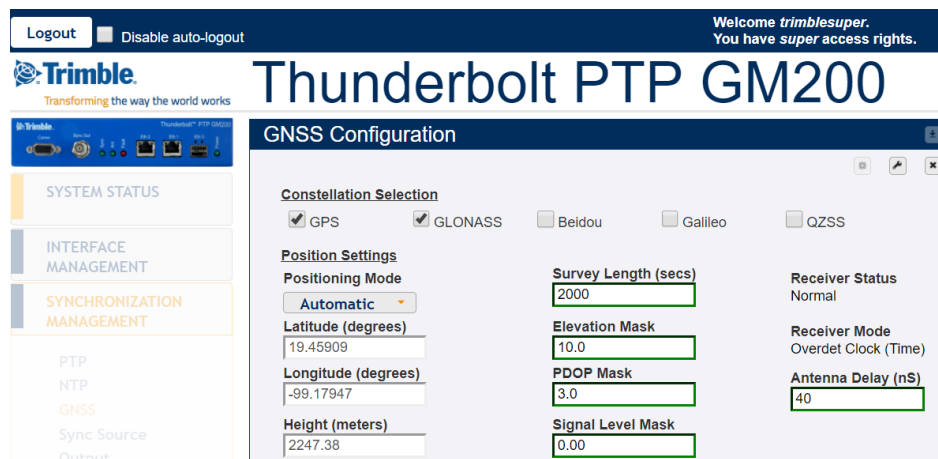


### 7.10.2 set output 10Mhz

```
GM200 Configuration Commands
>
>
>
>
>
>
>
> get output
    BNC output: PPS
Width: 1000 ns
Delay: 0 ns
>
> set output 10mhz
>
> get output
    BNC output: 10MHz
Width: 1000 ns
Delay: 0 ns
>
>
>
>
>
```

[Logout](#) ☐ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

 Transforming the way the world works

# Thunderbolt PTP GM200

SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT


PTP  
NTP  
GNSS


## Output Configuration

Output Ports	Output Settings	Periodic Settings
Sync Out <div>PPS</div>	Width (ns) <div>1000</div>	Width (ns) <div>1000</div>
	Delay (ns) <div>0</div>	Period (seconds) <div>10</div>
		Value (0 - Period-1) <div>0</div>

[Logout](#)
☐ Disable auto-logout

Welcome *trimblesuper*.  
 You have *super* access rights.


**Thunderbolt PTP GM200**  
 Transforming the way the world works



SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT


PTP  
 NTP  
 GNSS  
 Sync Source  
**Output**


### Output Configuration

Output Ports	Output Settings	Periodic Settings
Sync Out <div>             PPS              Off              Low              High              PPS              Even              Periodic  <b>10MHz</b> </div>	Width (ns) <input type="text" value="1000"/> Delay (ns) <input type="text" value="0"/>	Width (ns) <input type="text" value="1000"/> Period (seconds) <input type="text" value="10"/> Value (0 - Period-1) <input type="text" value="0"/>

[Logout](#)
☐ Disable auto-logout

Welcome *trimblesuper*.  
 You have *super* access rights.


**Thunderbolt PTP GM200**  
 Transforming the way the world works



SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

PTP  
 NTP  
 GNSS  
 Sync Source  
**Output**

### Output Configuration

Output configuration successful

Output Ports	Output Settings	Periodic Settings
Sync Out <div>             10MHz           </div>	Width (ns) <input type="text" value="1000"/> Delay (ns) <input type="text" value="0"/>	Width (ns) <input type="text" value="1000"/> Period (seconds) <input type="text" value="10"/> Value (0 - Period-1) <input type="text" value="0"/>



### 7.10.3 config firmware list


```
GM200 Configuration Commands
>
>
>
>
> config firmware list
Available firmware update packages:
P0      : 20171003-0.0.7.0.pkg
P1      : 20171212-0.0.7.0+.pkg
P2      : 20180204-0.0.9.0.pkg


Available GNSS update firmware:
G0      : ResSMT360_v1_03.bin
G1      : ResSMT360_v1_04.5.bin
>
>
```

Logout

☐ Disable auto-logout

Welcome *trimblesuper*.  
You have *super* access rights.

  
Transforming the way the world works



SYSTEM STATUS

INTERFACE MANAGEMENT

SYNCHRONIZATION MANAGEMENT

SECURITY MANAGEMENT

SYSTEM MANAGEMENT

Alarm System

# Thunderbolt PTP GM200

## System Configuration

System Configuration

System Firmware

Current System Version	Current GNSS Version	Current FPGA Version
20180204-0.0.9.0	20170515-1.4.0.0	18.3.15

Firmware Patch Staging

Choose File

No file chosen

Upload Patch File

Reset Upload

System Patches

GNSS Patches

☐ 20171003-0.0.7.0.pkg

☐ 20171212-0.0.7.0+.pkg

☐ 20180204-0.0.9.0.pkg

☐ ResSMT360\_v1\_03.bin

☐ ResSMT360\_v1\_04.5.bin


Update System

Unstage Patch


## 7.11 Save configuration

```
GM200 Configuration Commands
>
>
> config save
>
>
>
>
>
>
>
```


When configuration has been saved, there is an indication as soon as you login, under Configuration Status: 'Configuration is saved'. There is not an icon, indicating that there is not need to save any change in the configuration.

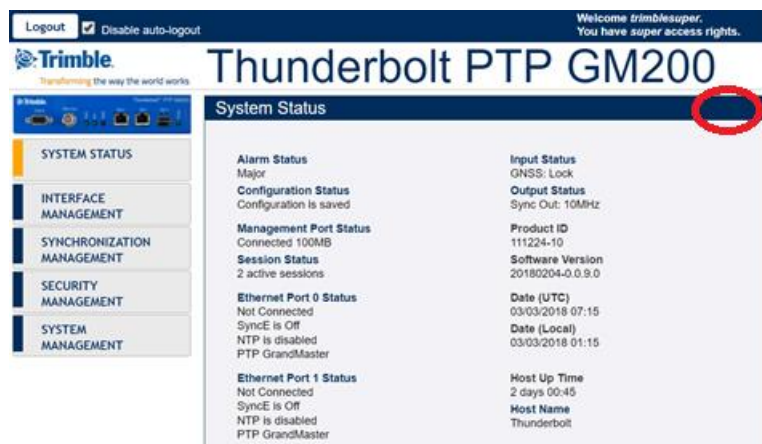


If any change is done, the status will be 'Configuration is not saved'. There is now an icon that allows user to save the configuration.

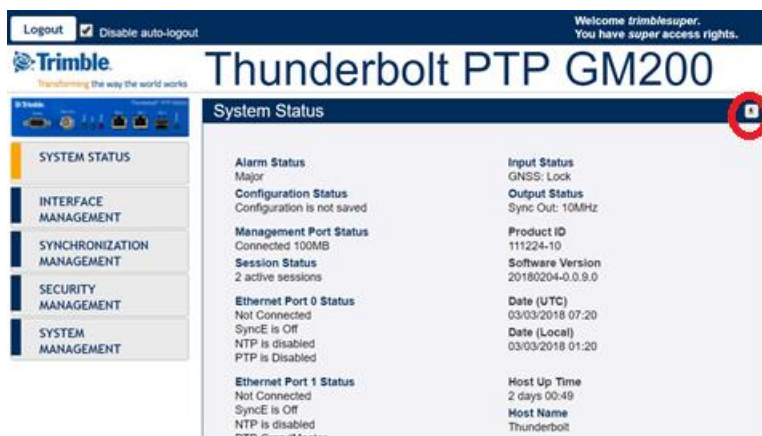

If customer clicks on the icon, there will be a warning message asking customer to confirm the change.

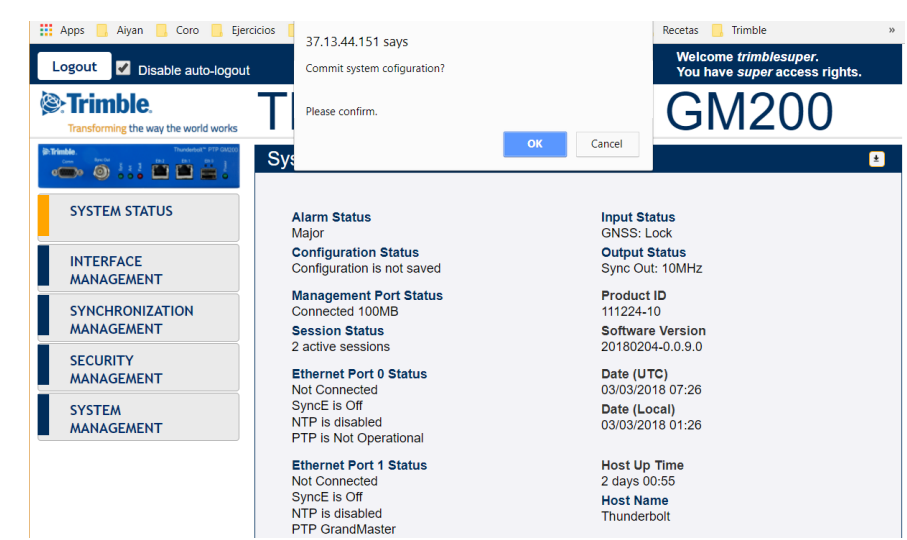

A green message indication will be displayed in order to show that configuration was successfully saved.

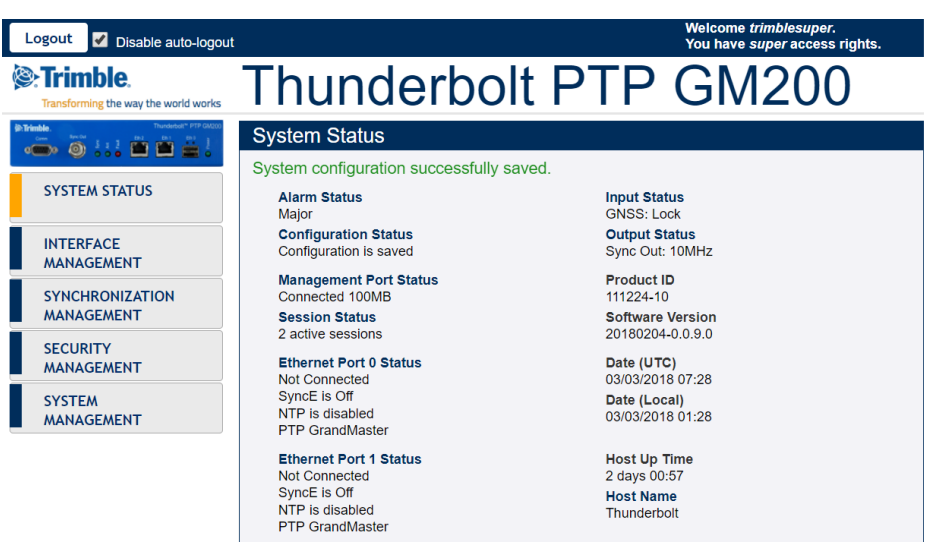



## Chapter 8: PTP Input

In this chapter:

[PTP Input Overview](#)

[How it works](#)

[Configuring with CLI commands](#)

[Configuring with Web Interface](#)

[Procedure to configure PTP Input](#)

Trimble GNSS receivers are used to deliver timing references accurate to  $\pm 15\text{ns}$ . This provides timing-critical applications with the world's most precise and stable source of timing information.

However, when GNSS tracking is unavailable there must be a backup reference besides holdover. PTP Input is the answer to this call, GNSS is complemented by network-based timing distribution to maintain the time base during GNSS reference failure.

## 8.1 PTP Input Overview

Deployment of PTP Grandmasters having GNSS receiver references is very simple and quick, however these devices have a point of failure: the antenna. It is always exposed outside the building, in order to have the best line-of-sight to multiple satellites. The consequence is that it is always subject to lighting strikes, interference due to weather conditions, reflections, and jamming, etc.

Thunderbolt PTP Grandmaster Clock GM-200 has the best holdover in the market, however, in order to provide even more protection and trying to keep longer time accuracy, Thunderbolt PTP Grandmaster Clock GM-200 also has a feature called PTP Input that is a network-based timing distribution backup reference.

The Thunderbolt PTP Grandmaster Clock GM-200 will continue utilizing GNSS as the primary time reference. PTP Input will work as a complement that will help and maintain the time when GNSS reference is not available.

PTP Input feature is then a secondary reference and will be active if GNSS tracking is lost. GM-200 will never work as a Boundary Clock because the GM-200 has superior holdover specifications to a network device due to excellent oscillator specifications.


## 8.2 How it works

PTP Input is designed as a secondary (backup) reference of GNSS reference of PTP Grandmaster Clock GM-200. It can be configured in Ethernet port 0 or 1. It will be an additional input for the PTP Grandmaster Clock GM-200. The Ethernet port will be configured as a PTP slave for GM-200.

Since the Ethernet port will be configured as PTP slave then it will require a grandmaster reference or 'grantor'. GM200's PTP Input supports up to 3 (three) grantors to be configured.

PTP Input can be used with all unicast PTP profiles supported by GM200: G.8265.1 Profile Option I or II and IEEE-1588 Telecom Profile v2 (unicast). All previous grandmasters deployed by telecom operators are working right now with those PTP profiles.

### Phase Synchronization: G.8275.2 Partial On-Path Support Edge Grandmaster with APTS

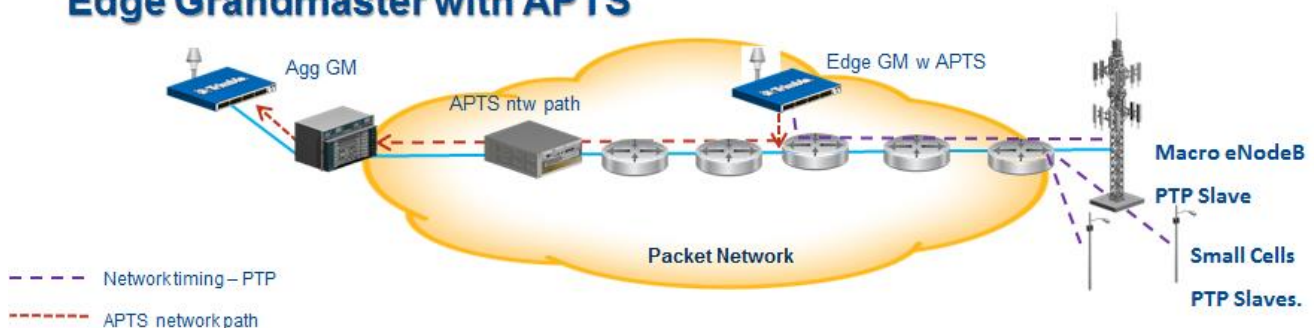

## 8.3 Configuring with CLI commands.

PTP Input is related to the following CLI commands: (please don't forget that you need to first configure the network interface (IP addresses and/or VLAN IDs) in order to use any Ethernet port:

In order to do any ptp configuration change, it is required to disable ptp service in Ethernet port. This commands allows to disable/enable ptp service:

*set ptp eth0/1 enable/disable*

Command set ptp allows to do changes in PTP configuration. In this case, the command will change the profile required, the mode from grandmaster to slave and to add at least one grantor:

*set ptp eth0/1 profile yyyyyyy mode slave grantor x.x.x.x*

x.x.x.x is an IP address

yyyy is one of the following options:

- |         |  |
|---------|--|
| g8265   | - Profile G.8265.1 Option II (clock class 80)    |
| g8265-l | - Profile G.8265.1 Option I (clock class 84)     |
| telecom | - Profile IEEE-1588 Telecom Profile v2 (unicast) |

This command allows to configure port Ethernet 0 or 1 into PTP input:

*set input ptp1/0 enable*

This command allows to see all inputs/references of GM-200 or a specific one: gnss or PTP input in Ethernet 0 (ptp0) or PTP input in Ethernet 1 (ptp1):

*view input (gnss or ptp1 or ptp0)*

This command allows to see PTP configuration in Ethernet ports (for verification purposes). If you need to use this command after doing any change in PTP configuration, please at least 15 seconds before seeing the changes done:

*get ptp eth0/1*

## 8.4 Configuring with Web Interface.

### Configuring Ethernet Port as input.

Ethernet port needs to be configured as input in order to be used as PTP input.

- Open web page using http or https
- Login with proper credentials (admin or super user)
- Click on “SYNCHRONIZATION MANAGEMENT” and then on “Sync Source”

Sync Source	Time Offset	Mean	Sigma	Freq Offset
*GNSS	-2.526 ns	2.496 ns	5.720 ns	-0.00032 ppb

\*Selected Sync Source

- In order to do changes, it is required to click on “Configure” icon.

Sync Source	Time Offset	Mean	Sigma	Freq Offset
*GNSS	8.586 ns	1.515 ns	5.653 ns	-0.00025 ppb

\*Selected Sync Source

The web page will be grayed and it will be possible to select SyncE-eth0 or SyncE-eth1 or PTP-eth0 or PTP-eth1 Inputs.


- Click on PTP-eth0 or PTP-eth1.

Sync Source	Time Offset	Mean	Sigma	Freq Offset
*GNSS	8.586 ns	1.515 ns	5.653 ns	-0.00025 ppb


\*Selected Sync Source



- Click on “Set” icon in order to apply the changes

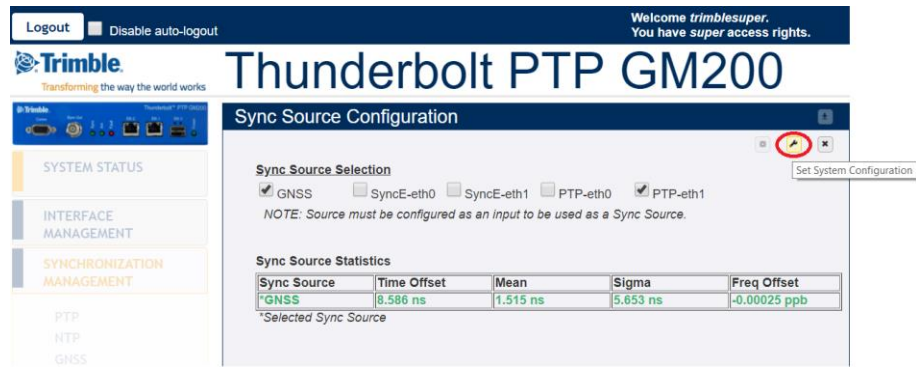

- There will be a green message of confirmation “Sync Source configuration successful” and a new line on the Sync Source Statistics will appear.

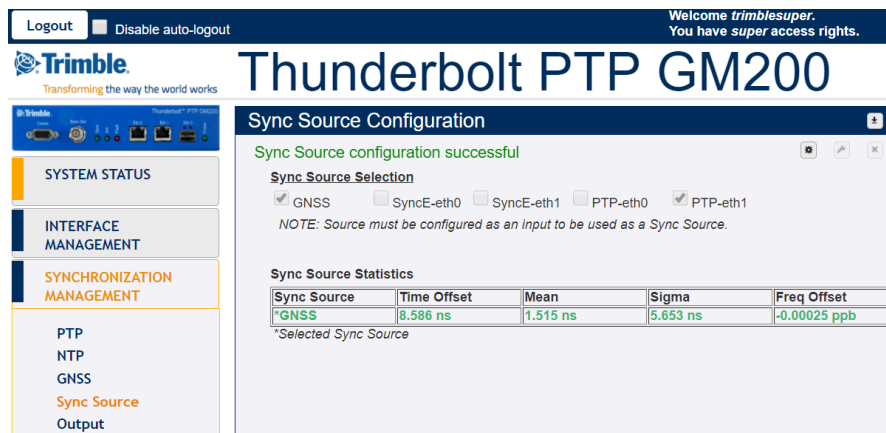



## PTP protocol configuration (slave mode)

- Open web page using http or https
- Login with proper credentials (admin or super user)
- Click on “SYNCHRONIZATION MANAGEMENT” and then on “PTP”
- Select the Ethernet port tab that will be used as PTP Input

The screenshot displays the Thunderbolt PTP GM200 web interface. The top navigation bar includes a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message: 'Welcome trimblesuper. You have super access rights.' The main header shows the 'Trimble' logo and the title 'Thunderbolt PTP GM200'. A left sidebar contains navigation links: 'SYSTEM STATUS', 'INTERFACE MANAGEMENT', 'SYNCHRONIZATION MANAGEMENT' (highlighted), 'PTP', 'NTP', 'GNSS', 'Sync Source', 'Output', 'SECURITY MANAGEMENT', and 'SYSTEM MANAGEMENT'. The 'PTP Configuration' section is active, showing settings for 'Ethernet Port 1'. The configuration is organized into three columns:

PTP Port Status	Domain Number	PTP Clock ID
Enabled	24	001747FFE7FFEB3-1
PTP Profile: G8275.1	Announce Interval: -3	Priority 1: 128
Sync Mode: One-Step	Announce Timeout: 3	Priority 2: 255
Transport Protocol: 802.3	Sync Interval: -4	Clock Class: 255
IP Mode: Multicast	Delay Request Interval: -4	Multicast TTL: 1
Delay Mechanism: E2E	P2P Delay Request Interval: 0	DiffServ Code Point: 0
PTP Mode: Slave	Grantor Address: -	Lease Duration: 300

- Configure the profile, the PTP Mode as slave, the Grantor address (es) and the possible changes on Sync and Delay Request Intervals.
- In order to save changes, it is required to click on “Configure” icon  and in order to apply the changes, it is required to click on “Save System Configuration” icon .

## View PTP configuration.

- Open web page using http or https
- Login with proper credentials (admin or super user)
- Click on “SYNCHRONIZATION MANAGEMENT” and then on “PTP”

The screenshot shows the Thunderbolt PTP GM200 web interface. The left sidebar contains navigation links: SYSTEM STATUS, INTERFACE MANAGEMENT, SYNCHRONIZATION MANAGEMENT (highlighted), and SECURITY MANAGEMENT. Under SYNCHRONIZATION MANAGEMENT, the PTP link is selected. The main content area is titled 'PTP Configuration' and shows settings for Ethernet Port 1. The settings are organized into three columns:

PTP Port Status	Domain Number	PTP Clock ID
Enabled	24	001747FFE7FFEB3-1
PTP Profile: G8275.1	Announce Interval: -3	Priority 1: 128
Sync Mode: One-Step	Announce Timeout: 3	Priority 2: 255
Transport Protocol: 802.3	Sync Interval: -4	Clock Class: 255
IP Mode: Multicast	Delay Request Interval: -4	Multicast TTL: .999
Delay Mechanism: E2E	P2P Delay Request Interval: 0	DiffServ Code Point: .999
PTP Mode: Slave	Grantor Address: -	Lease Duration: .999

## View the list of Sync Sources.

- Open web page using http or https
- Login with proper credentials (admin or super user)
- Click on “SYSTEM STATUS” and then on “Timing”

The screenshot shows the Thunderbolt PTP GM200 web interface. The left sidebar contains navigation links: SYSTEM STATUS (highlighted), INTERFACE MANAGEMENT, SYNCHRONIZATION MANAGEMENT, SECURITY MANAGEMENT, and SYSTEM MANAGEMENT. Under SYSTEM STATUS, the Timing link is selected. The main content area is titled 'Timing Information' and shows the Timing Status tab. The settings are organized into three columns:

Input Status	Output Status
Sync Source: GNSS	Sync Out: PPS

Sync Source Statistics

Sync Source	Phase Offset	Mean	Sigma	Freq Offset
GNSS	9.601 ns	0.512 ns	4.086 ns	-0.00020 ppb
SyncE eth0	N/A	N/A	N/A	N/A
PTP eth1	N/A	N/A	N/A	N/A

Control Loop Status

Loop State	Holdover	Phase Offset	Freq Offset	Delta Freq
Lock	1 seconds	8.025ns	-3.05962e-07	9.364e-12

Realtime Graph View

Sync Source: Graph Type: Close Graph

## 8.5 Procedure to configure PTP Input

In order to provide configuration steps, some examples will be used.

### *Example 1:*

Let's assume eth0 will be used as PTP Input and eth1 will be used as PTP Grandmaster. There will be two grantors used (two grandmasters already used in Aggregation or Core network that will serve as reference of GM-200) with IP addresses 10.173.230.225 and 10.75.134.224. It will be used IEEE-1588 Telecom Profile v2 (unicast). The sequence of commands is:

- set ptp eth0 disable
- set ptp eth0 profile telecom mode slave grantor 10.173.230.225,10.75.134.224
- set ptp eth0 enable
- get ptp eth0
- set input ptp0 enable
- view input ptp0

### *Example 2:*

Let's assume eth1 will be used as PTP Input and eth0 will be used as PTP Grandmaster. There will be one grantors used (one grandmaster already used in Aggregation or Core network that will serve as reference of GM-200) with IP addresses 10.73.130.251. It will be used G.8265.1 Option I Profile. The sequence of commands is:

- set ptp eth1 disable
- set ptp eth1 profile telecom mode slave grantor 10.73.130.251
- set ptp eth1 enable
- get ptp eth1
- set input ptp1 enable
- view input ptp1

## Chapter 9: VLANs

In this chapter:

[VLAN Overview](#)

[Configuring with CLI commands](#)

[Configuring with Web Interface](#)

[Configuring one VLAN ID](#)

[Adding another VLAN ID](#)

[Procedure to remove all VLAN IDs](#)

This chapter describes the VLAN setting procedure for Thunderbolt PTP Grandmaster clock GM200.

## 9.1 VLANs Overview

Thunderbolt PTP Grandmaster Clock GM-200 supports up to 4 VLANs on each port in total 8 VLAN. Each VLAN must have its own address and subnet. There is no default VLAN configuration. These VLANs can be configured with a default gateway. All VLANs configuration can be deleted with a CLI command “set network eth0/1 vlan -1”.

## 9.2 Configuring VLAN support with CLI commands

set network eth0/1 vlan ID1,ID2,...

This command allows to add up to 4 different VLAN IDs for each Ethernet port.

set network eth0/1.ID addr x.x.x.x mask y.y.y.y gateway z.z.z.z

This command allows to configure IP address, subnet mask and gateway address for each VLAN ID

set network eth0/1 vlan -1

This command allows to disable VLAN on the Ethernet port selected.

Please use the special ID of '-1'.

get network eth0/1

This command allows to show Ethernet port configuration including VLAN configuration on the Ethernet port selected.



**NOTE:** When changes are applied to any Ethernet port, it takes up to 30 seconds to see changes in Ethernet port configuration.

## 9.3 Configuring VLAN with Web Interface

Connect to GM-200 using web interface using https. Then login with a proper username with correct privileges like admin or super access level.

Then click on “INTERFACE MANAGEMENT” and then click on “VLAN”.

The screenshot displays the web interface of the Thunderbolt PTP GM200. At the top, there is a navigation bar with a 'Logout' button, a 'Disable auto-logout' checkbox, and a welcome message: 'Welcome trimblesuper. You have super access rights.' Below this is the main header with the 'Trimble' logo and the text 'Transforming the way the world works'. The main title 'Thunderbolt PTP GM200' is prominently displayed. On the left side, there is a sidebar menu with options: 'SYSTEM STATUS', 'INTERFACE MANAGEMENT' (highlighted), 'Ethernet', 'VLAN' (highlighted), 'SNMP', 'Syslog', 'Serial Port', and 'SYNCHRONIZATION'. The main content area is titled 'VLAN Configuration' and features two tabs: 'Ethernet Port 0' (selected) and 'Ethernet Port 1'. Under 'Ethernet Port 0', there is a 'VLAN Configuration' section with 'VLAN ID Assignments' showing a table with columns for VLAN ID (20, 30, VID3, VID4) and Priority (0). Below this is a note: 'To remove a VLAN ID, delete it's entry from the list.' The 'VLAN Interface Assignments' section contains a table with columns: Edit, Interface, Address, Mask, and Gateway. The table lists two entries: eth0.20 with address 3.1.30.100, mask 255.0.0.0, and gateway 3.1.30.1; and eth0.30 with address 4.1.42.100, mask 255.0.0.0, and gateway 4.1.42.1. At the bottom, a note states: 'Only one VLAN Interface may be assigned or modified per 'Set' command.'

In order to save changes, it is required to click on “Configure” icon  and in order to apply the changes, it is required to click on “Set” icon .

***Note – VLAN IDs 1 and 2 are reserved, you cannot use them.***

It is required to add the VLAN ID, Priority (0 is the highest priority), the IP address and subnet mask.

## 9.4 Configuring one VLAN ID

In order to provide configuration steps, some examples will be used.

### Example 1:

Use the following procedure to configure a VLAN on the eth0 port, an ID 452, IPv4 address of 21.153.200.230, a netmask of 255.255.255.248, and a gateway of 21.153.200.225:

- Login with username with admin or super level.
- Disable NTP and PTP services in order to configure any VLAN ID

```
set ptp eth0 disable
set ntp eth0 disable
```
- Type

```
set network eth0 vlan 452
```
- Press Enter
- Type

```
set network eth0.452 addr 21.153.200.230 mask 255.255.255.248 gateway 21.153.200.225
```
- Press Enter
- Type

```
get network eth0
```
- Press Enter
- Console output is below

```
>
>
> get network eth0

Current settings for eth0:
  Status: Connected 1000MB
  Mode: Static
  Address: 192.168.0.250
  Mask: 255.255.255.0
  Broadcast: 192.168.0.255
  Gateway: 192.168.0.1
  IPv6 Addr: fe80::217:47ff:fe7f:fdad/64 Scope:Link
  VLAN IDs: 452
  syncE: Off

Current settings for eth0.452:
  Status: Connected 1000MB
  Mode: Static
  Address: 21.153.200.230
  Mask: 255.255.255.248
  Broadcast: 21.153.200.231
  Gateway: 21.153.200.225
  IPv6 Addr: fe80::217:47ff:fe7f:fdad/64 Scope:Link
>
>
>
```
- It is now possible to enable again NTP or PTP service

```
set ptp eth0 enable
set ntp eth0 enable
```

**Note – VLAN IDs 1 and 2 are reserved, you cannot use them.**



## 9.5 Adding another VLAN ID

In order to provide configuration steps, some examples will be used.

### Example 2:

Use the following procedure to add a VLAN ID 444 on Ethernet eth1 port, this port has already a VLAN ID: VLAN ID 333

IP address 21.134.199.220

Subnet mask 255.255.255.248

Gateway 21.134.199.215

The new VLAN information will be

VLAN ID 444

IP address 11.34.99.20

Subnet mask 255.255.255.248

Gateway 11.34.99.15

- Login with username with admin or super level.
- Disable NTP and PTP services in order to configure any VLAN ID

```
set ptp eth1 disable
set ntp eth1 disable
```

- Type

```
get network eth1
```

- Press Enter

- Console output is below

```
>
```

```
> get network eth1
```

```
Current settings for eth1:
```

```
  Status: Connected 1000MB
```

```
  Mode: Static
```

```
  Address: 4.4.4.4
```

```
  Mask: 255.255.255.0
```

```
Broadcast: 4.4.4.255
```

```
  Gateway:
```

```
IPv6 Addr: fe80::217:47ff:fe7f:fdde/64 Scope:Link
```

```
  VLAN IDs: 333
```

```
  syncE: Off
```

```
Current settings for eth1.333:
```

```
  Status: Connected 1000MB
```

```
  Mode: Static
```

```
  Address: 21.134.199.220
```

```
  Mask: 255.255.255.248
```

```
Broadcast: 21.134.199.223
```

```
  Gateway: 21.134.199.215
```

```
IPv6 Addr: fe80::217:47ff:fe7f:fdde/64 Scope:Link
```

```
>
```

```
>
```

```
>
```

- Type

```
set network eth1 vlan 333,444
```

- Press Enter

- Type

```
get network eth1
```

- Press Enter

- Console output is below

```
>
> get network eth1

Current settings for eth1:
  Status: Connected 1000MB
  Mode: Static
  Address: 4.4.4.4
  Mask: 255.255.255.0
Broadcast: 4.4.4.255
  Gateway:
IPv6 Addr: fe80::217:47ff:fe7f:fdde/64 Scope:Link
  VLAN IDs: 333, 444
  syncE: Off
```

```
Current settings for eth1.333:
  Status: Connected 1000MB
  Mode: Static
  Address: 21.134.199.220
  Mask: 255.255.255.248
Broadcast: 21.134.199.223
  Gateway: 21.134.199.215
IPv6 Addr: fe80::217:47ff:fe7f:fdde/64 Scope:Link
```

```
Current settings for eth1.444:
  Status: Connected 1000MB
  Mode: Static
  Address: 21.134.199.220
  Mask: 255.255.255.248
Broadcast: 21.134.199.223
  Gateway: 21.134.199.215
IPv6 Addr: fe80::217:47ff:fe7f:fdde/64 Scope:Link
>
```

- Type

```
set network eth1.444 addr 11.34.99.20 mask 255.255.255.248 gateway 11.34.99.15
```

- Press Enter

- Type

```
get network eth1
```

- Press Enter

- Console output is below

```
>
> get network eth1

Current settings for eth1:
  Status: Connected 1000MB
  Mode: Static
  Address: 4.4.4.4
  Mask: 255.255.255.0
Broadcast: 4.4.4.255
  Gateway:
IPv6 Addr: fe80::217:47ff:fe7f:fdde/64 Scope:Link
  VLAN IDs: 333, 444
  syncE: Off
```

```

Current settings for eth1.333:
  Status: Connected 1000MB
  Mode: Static
  Address: 21.134.199.220
  Mask: 255.255.255.248
Broadcast: 21.134.199.223
  Gateway: 21.134.199.215
IPv6 Addr: fe80::217:47ff:fe7f:fd4e/64 Scope:Link

Current settings for eth1.444:
  Status: Connected 1000MB
  Mode: Static
  Address: 11.34.99.20
  Mask: 255.255.255.248
Broadcast: 11.34.99.23
  Gateway: 11.34.99.15
IPv6 Addr: fe80::217:47ff:fe7f:fd4e/64 Scope:Link
2017-07-12T07:38:17.731Z: Set alarm 20, 'Eth-Port0-Down'
2017-07-12T07:38:18.744Z: Set alarm 21, 'Eth-Port1-Down'
2017-07-12T07:38:25.265Z: Clear alarm 21, 'Eth-Port1-Down'
>
>
>
>

```

- It is now possible to enable again NTP or PTP service

```

set ptp eth1 enable
set ntp eth1 enable

```

## 9.6 Procedure to remove all VLAN IDs

The command is used to disable all VLAN configuration on a specific Ethernet port:

```

set network eth0/1 vlan -1

```



## Appendix A: SNMP Traps

In this appendix:

[SNMP Traps](#)

This appendix list the available  
alarms through SNMP trap in  
Thunderbolt® PTP Grandmaster  
Clock

Description: Set alarm 0, GNSS-Comm-E1 (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 0, GNSS-Comm-E1 (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 1, GNSS-Comm-E2 (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 1, GNSS-Comm-E2 (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 2, GNSS-Comm-Loss (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 2, GNSS-Comm-Loss (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 3, GNSS-Ant-Shorted (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 3, GNSS-Ant-Shorted (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 4, GNSS-Ant-Open (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 4, GNSS-Ant-Open (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 5, GNSS-Track-No (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 5, GNSS-Track-No (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 6, PTP-PPS-Loss (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 6, PTP-PPS-Loss (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 7, GNSS-PPS-Loss (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 7, GNSS-PPS-Loss (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 8, Time-Sync-Bad (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 8, Time-Sync-Bad (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm



Description: Set alarm 9, Freq-Range-Bad (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 9, Freq-Range-Bad (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 11, GNSS-Time-Bad (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 11, GNSS-Time-Bad (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 12, Freq-Loop-Unlock (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 12, Freq-Loop-Unlock (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 13, Freq-Hold-Exceed (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 13, Freq-Hold-Exceed (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 14, PPS-Sync-Bad (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 14, PPS-Sync-Bad (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 15, Freq-Out-Bad (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 15, Freq-Out-Bad (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 16, PTP-System-Bad (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 16, PTP-System-Bad (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 17, FPGA-Load-Bad (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 17, FPGA-Load-Bad (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 18, GNSS-Pos-Integrity (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 18, GNSS-Pos-Integrity (MIN)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 19, UTC-Corr-Unk (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 19, UTC-Corr-Unk (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 20, Eth-Port0-Down (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 20, Eth-Port0-Down (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 21, Eth-Port1-Down (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 21, Eth-Port1-Down (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 22, Eth-Mgmt-Down (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 22, Eth-Mgmt-Down (MAJ)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 23, Eth-Same-Subnet (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 23, Eth-Same-Subnet (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 24, SyncE0-Unsupported (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 24, SyncE0-Unsupported (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 25, SyncE1-Unsupported (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 25, SyncE1-Unsupported (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Set alarm 26, Time-Set-Bad (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

Description: Clear alarm 26, Time-Set-Bad (CRI)

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyObject.tblt2EvNfyAIDescr.0

Trap OID:

.iso.iso-3.iso-3-6.iso-3-6-1.iso-3-6-1-4.iso-3-6-1-4-

1.trimble.trimbleTiming.trimbleTBlt2.tblt2Events.tblt2EvNotifications.tblt2EvNfyPrefix.tblt2EvNfyAlarm

## Appendix B: Alarms

In this appendix:

[List of alarms](#)

This appendix lists the available alarms in Thunderbolt® PTP Grandmaster Clock

Alarm	Alarm Desc	Level	Set Time	Clear Time	Description	How to resolve
<b>0</b>	GNSS-Comm-E1	CRI	0	0	An internal GNSS communication alarm that indicates that the system is unable to process character from the GNSS receiver as fast as it is being generated. This alarm should never be present and is used as a BIST (build-in self-test) indication of a hardware failure.	Call Trimble Technical Support
<b>1</b>	GNSS-Comm-E2	CRI	0	0	An internal GNSS communication alarm that indicates that the system is unable to process GNSS response data from the GNSS receiver as fast as it is being generated. This alarm should never be present and is used as a BIST (build-in self-test) indication of a hardware issue. This may be caused by excessive processing load on the system (denial of service attack).	Call Trimble Technical Support
<b>2</b>	GNSS-Comm-Loss	CRI	2	5	An indication that complete communication has been lost to the GNSS receiver. This may be due to a bad receiver, or a bad receiver firmware update was recently applied. If an update was recently applied the system administrator can try loading the firmware again, or loading a previous firmware version. Note that this alarm may be set on startup as the GNSS receiver is restarting.	Call Trimble Technical Support
<b>3</b>	GNSS-Ant-Shorted	MIN	0	2	An indication of an over-current indication on the antenna feed. This is an indication that the unit may	Disconnect the antenna cable from the unit and verify the alarm clears; The GNSS-Ant-Open alarm should become



					not be able to acquire satellites as the antenna may be damaged. The condition should be remedied before continuing operation.	active. Replace antenna, verify the alarm is clear; if the alarm is still active replace the antenna cable.
<b>4</b>	GNSS-Ant-Open	MIN	0	2	An indication of an under-current indication on the antenna feed. This may be 'normal' if the antenna input is from a splitter or another device that blocks DC power. In this condition the antenna must be externally powered. It is acceptable for the administrator to set the alarm level for this alarm to 'Ign' to clear this alarm condition.	Verify that the antenna and antenna cable are securely fastened. If they are, replace antenna.
<b>5</b>	GNSS-Track-No	MIN	0	2	An indication that the system is unable to track any satellites at this time. This may be a 'normal' condition the event of poor satellite coverage. For this reason it is acceptable for this alarm to have a set and clear time associated with it to alleviate 'nuisance' type alarms.	This alarm is active whenever the system is powered-up or antenna is disconnected. Ensure the antenna is connected and the view of the sky is good.
<b>6</b>	PTP-PPS-Loss	MIN	0	10	An indication that the system is unable to detect the 1PPS signal from the PTP input.	if the alarm persists for longer than 60 minutes, call Trimble Technical Support
<b>7</b>	GNSS-PPS-Loss	MIN	0	10	An indication that the system is not detecting the 1PPS signal from the GNSS system. This may be due to loss of GNSS signaling, or invalid GNSS data. The unit will enter into holdover in this condition.	if the alarm persists for longer than 60 minutes, call Trimble Technical Support
<b>8</b>	Time-Sync-Bad	MAJ	2	10	An indication that the phase relationship for the PTP vs the time/frequency control is out of specification. This occurs during startup, while the phase is being aligned to GNSS, but it can also be an indication of extreme environmental changes that are causing the	if the alarm persists for longer than 60 minutes, call Trimble Technical Support

					system phase to move faster than the control loop is able to compensate. This condition should clear when the conditions settle.	
<b>9</b>	Freq-Range-Bad	CRI	0	10	is set when the frequency control reaches a limit of 20E-6. Unless this is during a test condition, or the unit is tracking a simulator that is not locked to a valid frequency source, this is an indication of a failure of the frequency control and the unit requires service.	if the alarm persists for longer than 60 minutes, call Trimble Technical Support
<b>11</b>	GNSS-Time-Bad	MIN	0	0	indicates that the GNSS system is indicating that the time has not been acquired from the satellites. This alarm will clear when the unit begins tracking valid satellite signals.	if the alarm persists for longer than 60 minutes, call Trimble Technical Support
<b>12</b>	Freq-Loop-Unlock	MIN	2	5	an indication that the frequency control loop has not yet established a locking condition. This is set during startup, while the control loop is settling, but may also be set during recover from holdover or in the event of severe environmental changes. This alarm will clear when the unit has achieved lock to the GNSS signal.	if the alarm persists for longer than 60 minutes, call Trimble Technical Support
<b>13</b>	Freq-Hold-Exceed	MAJ	0	0	is set when the unit is in the halt condition (no compensation during holdover), or the unit has been in a holdover condition for more than 24 hours.	if the alarm persists for longer than 60 minutes, call Trimble Technical Support
<b>14</b>	PPS-Sync-Bad	MAJ	5	10	is set when the PPS output (timing) from the system will not meet specification. This may occur during extreme environmental changes and should clear when the system becomes stable.	if the alarm persists for longer than 60 minutes, call Trimble Technical Support

<b>15</b>	Freq-Out-Bad	MAJ	0	10	is set when the frequency output from the unit is adversely affecting performance. This may occur during extreme environmental changes and should clear when the system becomes stable.	if the alarm persists for longer than 60 minutes, call Trimble Technical Support
<b>16</b>	PTP-System-Bad	CRI	5	10	is set when the PTP system is not operational. PTP is only started after the phase and frequency alarms, as well as the time sync alarm, have all been cleared.	if the alarm persists for longer than 60 minutes, call Trimble Technical Support
<b>17</b>	FPGA-Load-Bad	CRI	0	0	is set if the FPGA hardware image is too old for this firmware. The hardware should be updated with the config firmware command.	Call Trimble Technical Support
<b>18</b>	GNSS-Pos-Integrity	MIN	60	2	is set if the unit has not tracked enough satellites to allow for a validation of the position. This is cleared once the unit has validated the position. When the position is not known then the integrity of the timing solutions may be suspect.	if the alarm persists for longer than 60 minutes, call Trimble Technical Support
<b>19</b>	UTC-Corr-Unk	MAJ	0	0	is set if the unit does not have the UTC corrections from the GNSS system. This is cleared once the UTC corrections have been acquired from the GNSS system. This is an issue because PTP requires the UTC correction be transmitted on most systems so that the sync to UTC may be established.	if the alarm persists for longer than 60 minutes, call Trimble Technical Support
<b>20</b>	Eth-Port0-Down	MAJ	0	2	is set when Ethernet Port 0 is not operational. Note that, if the user commands the port to be disabled, this alarm is cleared. The alarm is set only when it is a fault condition and disabling of the port is not considered a fault.	Check to make sure the ethernet cable is connected at both ends. If this port is not to be used, then Ethernet Port can be disabled to clear this alarm.

<b>21</b>	Eth-Port1-Down	MAJ	0	2	is set when Ethernet Port 1 is not operational. Note that, if the user commands the port to be disabled," this alarm is cleared. The alarm is set only when it is a fault condition and disabling of the port is not considered a fault.	Check to make sure the ethernet cable is connected at both ends. If this port is not to be used, then Ethernet Port can be disabled to clear this alarm.
<b>22</b>	Eth-Mgmt-Down	MAJ	0	2	is set when Ethernet Port 2 is not operational. Note that, if the user commands the port to be disabled," this alarm is cleared. The alarm is set only when it is a fault condition and disabling of the port is not considered a fault.	Check to make sure the ethernet cable is connected at both ends. If this port is not to be used, then Ethernet Port can be disabled to clear this alarm.
<b>23</b>	Eth-Same-Subnet	CRI	0	0	is set when any of the Ethernet ports are on the same subnet. This is problematic for PTP because PTP requires that the data is timestamped on the physical port which received the packet. Due to the routing and socket parsing within the network, if 2 ports have the same subnet, the data may actually be received on a different physical port. For PTP that would then mean that the timestamp was for a completely different path than what may be intended. Worse yet, if a timing port and the management port are on the same subnet then the PTP traffic may be received over the management port, which does not have the hardware timestamping capabilities. That makes all timestamps in the communication '0'. NOTE: The above is only an issue if you are using PTP as unicast on an IPv4 network. If you are multicast, or using IPv6 or 802.3 then this alarm can be safely ignored.	Configure the ethernet ports to use different subnets.

24	SyncE0-Unsupported	CRI	0	0	is set when SyncE (either input or output) is enabled on eth0 and the SFP that is inserted does not support SyncE functions. If there is no SFP, or there are no SyncE functionality enabled for the port, this alarm is clear.	If SyncE support is required the SFP must be changed to a model that supports SyncE, otherwise the alarm may be set to IGN. Call Trimble Technical Support
25	SyncE1-Unsupported	CRI	0	0	is set when SyncE (either input or output) is enabled on eth1 and the SFP that is inserted does not support SyncE functions. If there is no SFP, or there are no SyncE functionality enabled for the port, this alarm is clear.	If SyncE support is required the SFP must be changed to a model that supports SyncE, otherwise the alarm may be set to IGN. Call Trimble Technical Support
26	Time-Set-Bad	CRI	0	0	indicates that the hardware time has never been set to agree with a valid phase source. This occurs only on startup and will clear as soon as the unit has a valid phase time to establish a valid time reference.	if the alarm persists for longer than 60 minutes, call Trimble Technical Support

**Note 1:** “Level” means default set level of alarm. It has several levels and user can choose one of options below.

- IGN : This alarm condition is ignored. No indication given.
- NFY : This alarm condition is a notification only.
- MIN : This is a minor alarm condition.
- MAJ : This is a major alarm condition.
- CRI : This is a critical alarm condition.

# Contact Information

## **NORTH AMERICA**

Trimble Inc.  
Corporate Headquarters  
935 Stewart Drive  
Sunnyvale, CA 94085  
+1-800-787-4225  
+1-408-481-7741

## **EUROPE**

Trimble Inc Europe Phone: +46-8-  
622-12-79

## **KOREA**

Trimble Export Ltd, Korea Phone:  
+82-2-555-5361

## **CHINA**

Trimble Navigation Ltd, China Phone: +86-10-8857-  
7575

